
PART MANUAL

SKID STEER LOADER BTL400EX Kubota

1-201901 / FINAL VERSION


Bawoo Company Corp

1. Track (트랙)

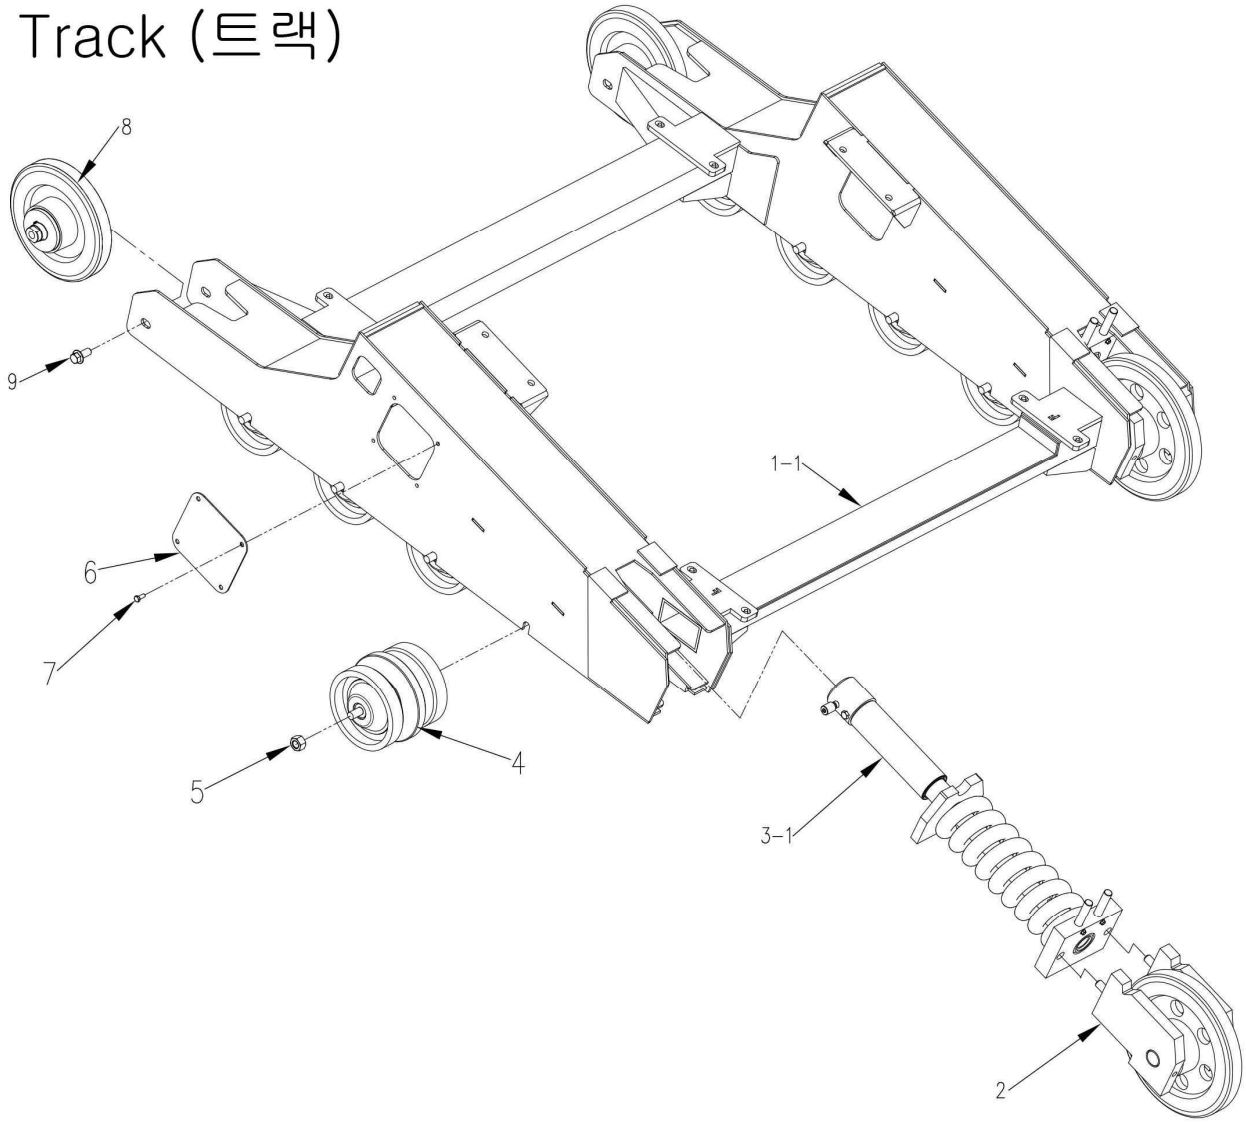


1. Track (트랙)				
No.	Name	Part No.	Quantity	Remarks
1	Track frame assy (트랙 프레임 조합)	T400T4-0101	1	
2	Front roller assy (전륜 롤러 조합)	T400T4-0102	2	
3	Tension spring assy (장력 스프링 조합)	T400T4-0103	2	
4	Idler assy (아이들러 조합)	T400T4-0104	8	
5	Nut (너트)	T400T4-0105	16	
6	Cover (커버)	T400T4-0106	2	
7	Bolt (볼트)	T400T4-0107	8	
8	Rear roller assy (후륜 롤러 조합)	T400T4-0108	2	
9	Bolt (볼트)	T400T4-0109	4	

2. Front roller assy (전륜 롤러 조합)

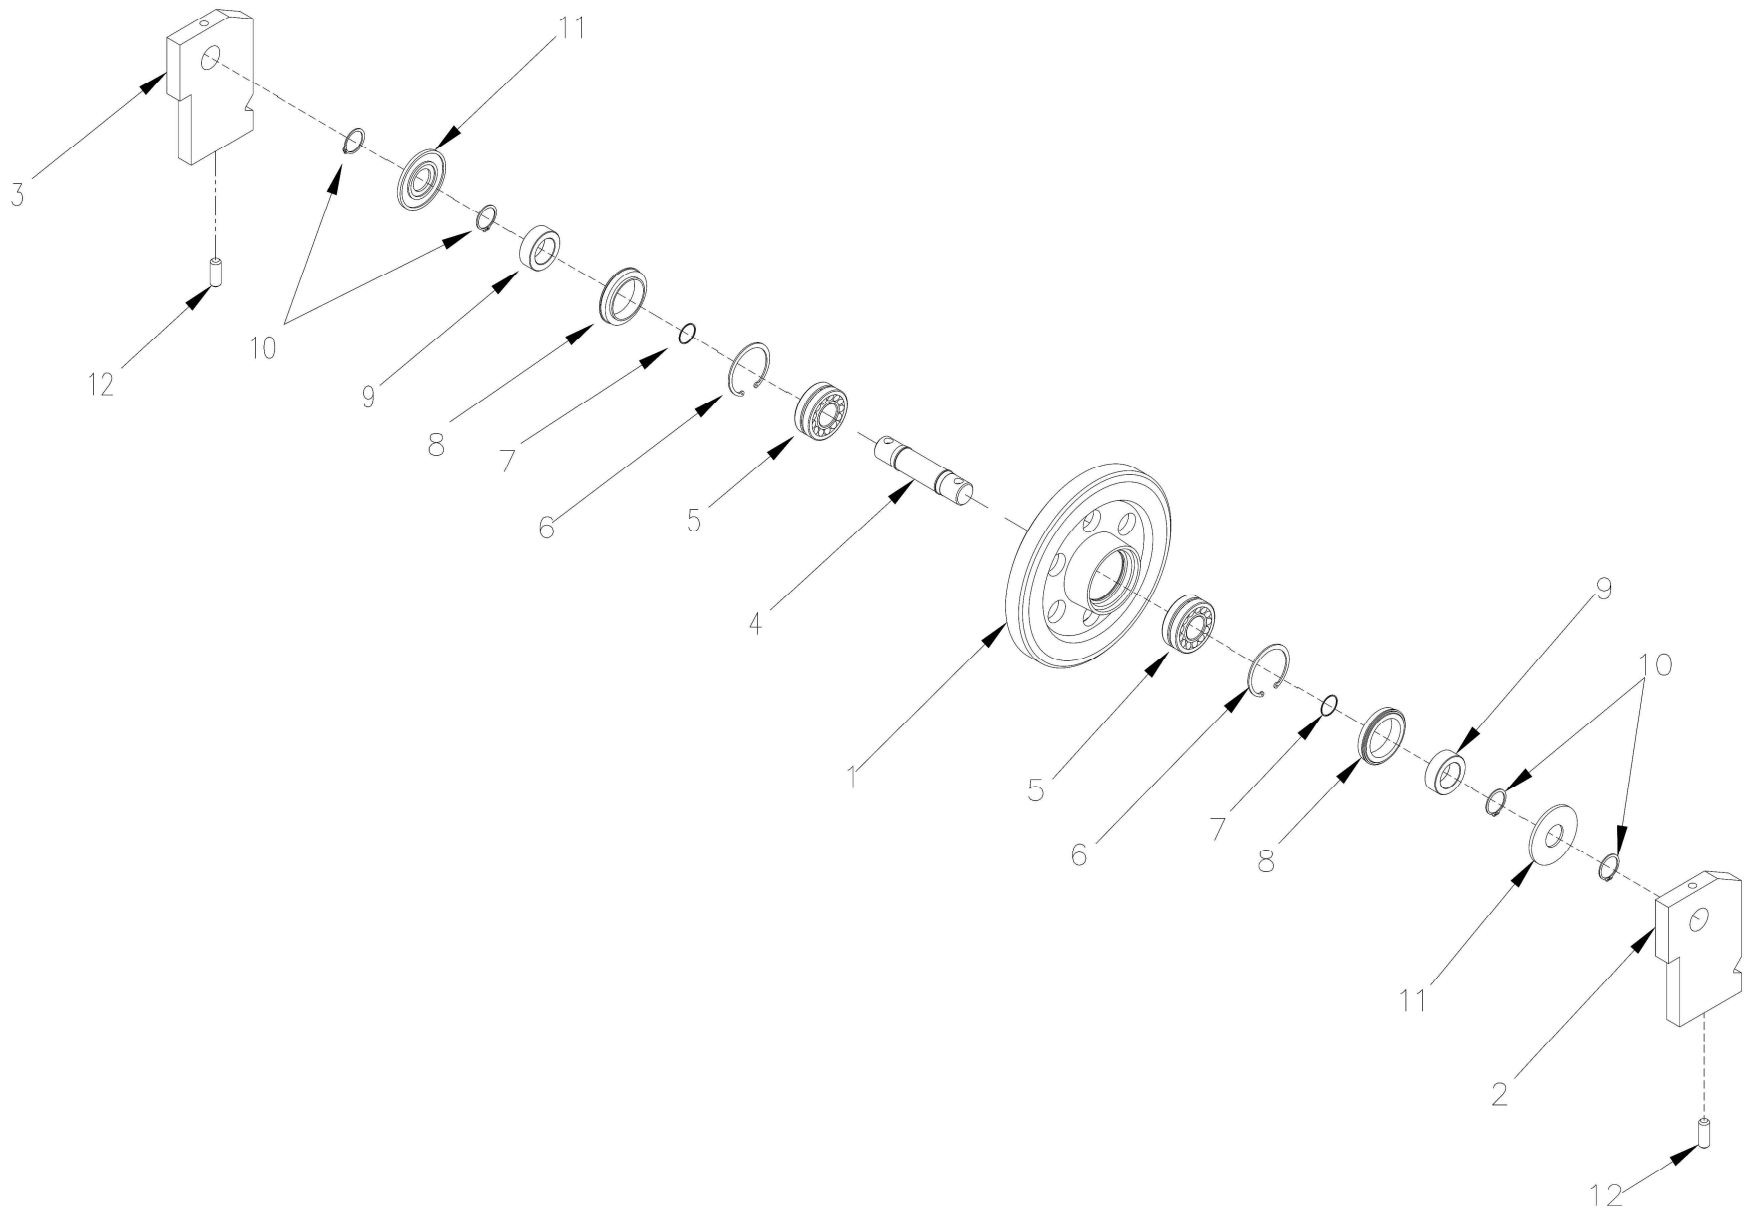


2. Front roller assy (전륜 롤러 조합)				
No.	Name	Part No.	Quantity	Remarks
1	Front roller (전륜 롤러)	T400T4-0201	1	
2	Fixed plate for front roller (전륜 롤러 고정판)	T400T4-0202	1	
3	Fixed plate for front roller (전륜 롤러 고정판)	T400T4-0203	1	
4	Fixed pin for front roller (전륜 롤러 고정핀)	T400T4-0204	1	
5	Bearing (베어링)	T400T4-0205	2	
6	Snap ring (스냅 링)	T400T4-0206	2	
7	Dust seal (더스트 씰)	T400T4-0207	2	
8	Double retainer (이중 리테이너)	T400T4-0208	2	
9	(카라)	T400T4-0209	2	
10	Snap ring (스냅 링)	T400T4-0210	4	
11	Washer (와셔)	T400T4-0211	2	
12	Center pin (센터핀)	T400T4-0212	2	

3. Tension spring assy (장력 스프링 조합)

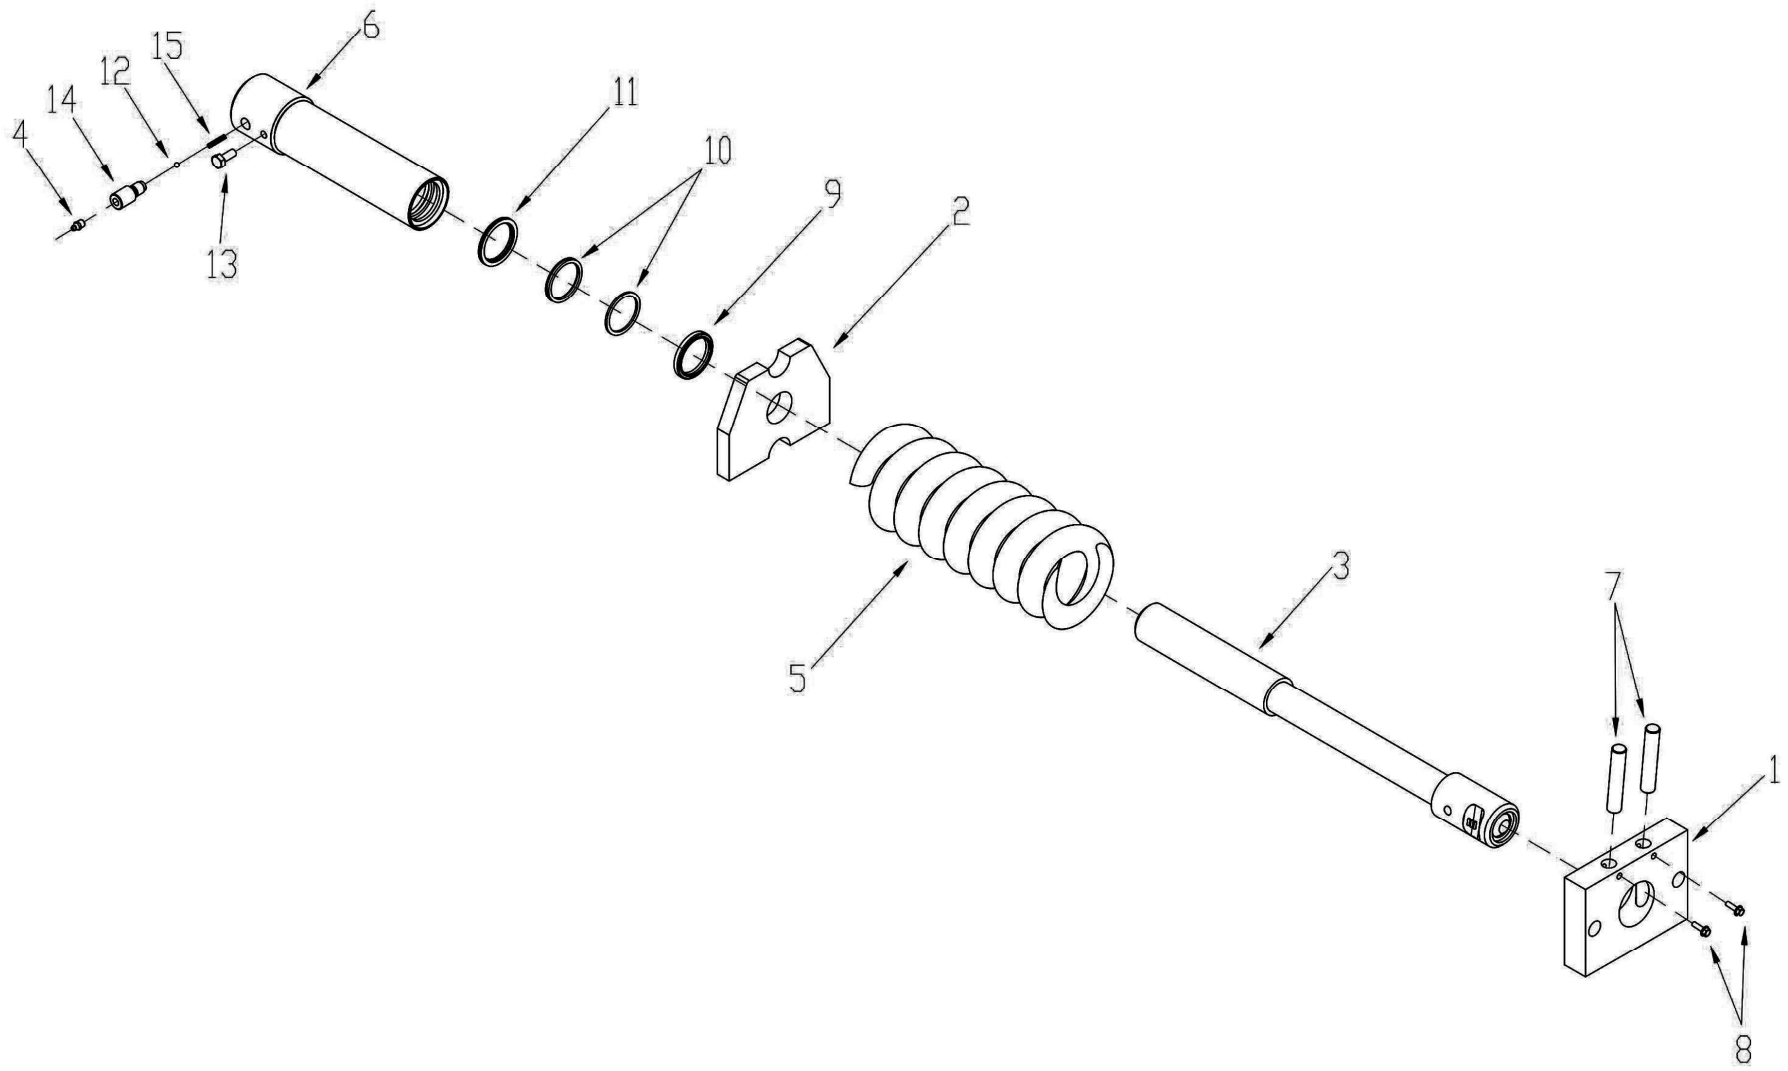


3. Tension spring assy (장력 스프링 조합)				
No.	Name	Part No.	Quantity	Remarks
1	Holder for spring (스프링 잡이)	T400T4-0301	1	
2	Bed plate (받침판)	T400T4-0302	1	
3	Rod (로드)	T400T4-0303	1	
4	Grease nipple (그리스 니쁠)	T400T4-0304	1	
5	Spring (스프링)	T400T4-0305	1	
6	Cylinder (실린더)	T400T4-0306	1	
7	Lock pin (잠금 핀)	T400T4-0307	2	
8	Bolt (볼트)	T400T4-0308	2	
9	Dust seal (더스트 씰)	T400T4-0309	1	
10	Rod seal (로드 씰)	T400T4-0310	2	
11	Buffer seal (버퍼 링)	T400T4-0311	1	
12	Ball (강구)	T400T4-0312	1	
13	Stop bolt (스톱 볼트)	T400T4-0313	1	
14	Holder for grease nipple (그리스 니쁠 잡이)	T400T4-0314	1	
15	Spring (스프링)	T400T4-0315	1	

4. Idler assy (아이들러 조합)

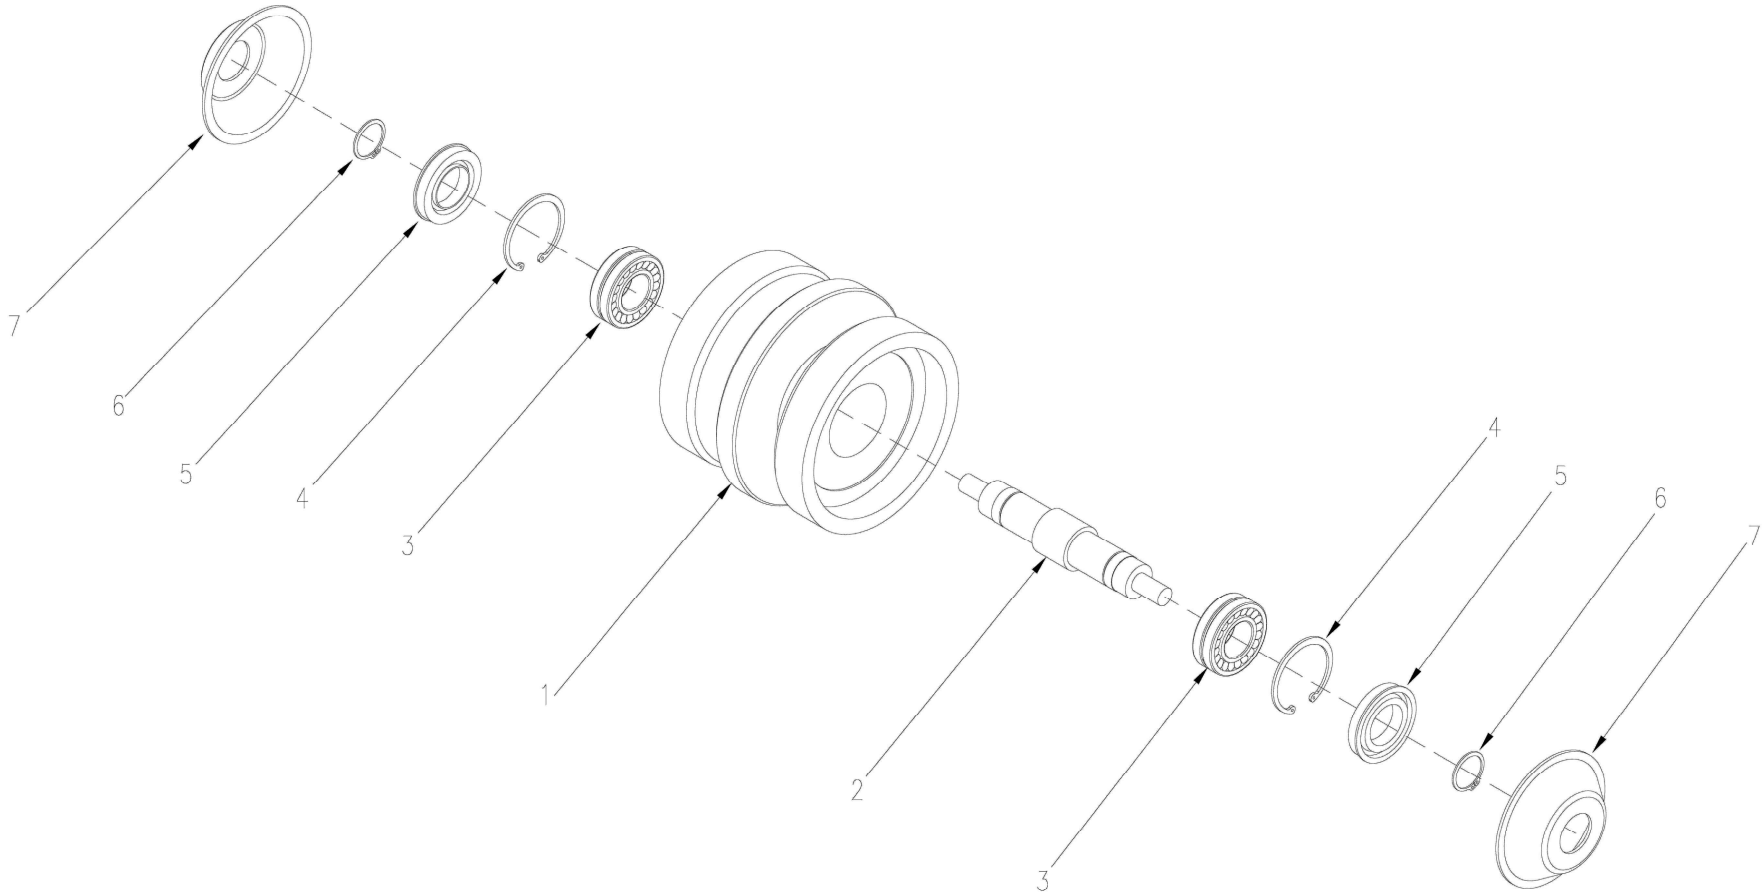


4. Idler assy (아이들러 조합)				
No.	Name	Part No.	Quantity	Remarks
1	Idler (아이들러)	T400T4-0401	1	
2	Idler shaft (아이들러 축)	T400T4-0402	1	
3	Bearing (베어링)	T400T4-0403	2	
4	Snap ring (스냅 링)	T400T4-0404	2	
5	Double retainer (이중 리테이너)	T400T4-0405	2	
6	Snap ring (스냅 링)	T400T4-0406	2	
7	Spring (스프링)	T400T4-0407	2	

5. Rear roller assy (후륜 롤러 조합)

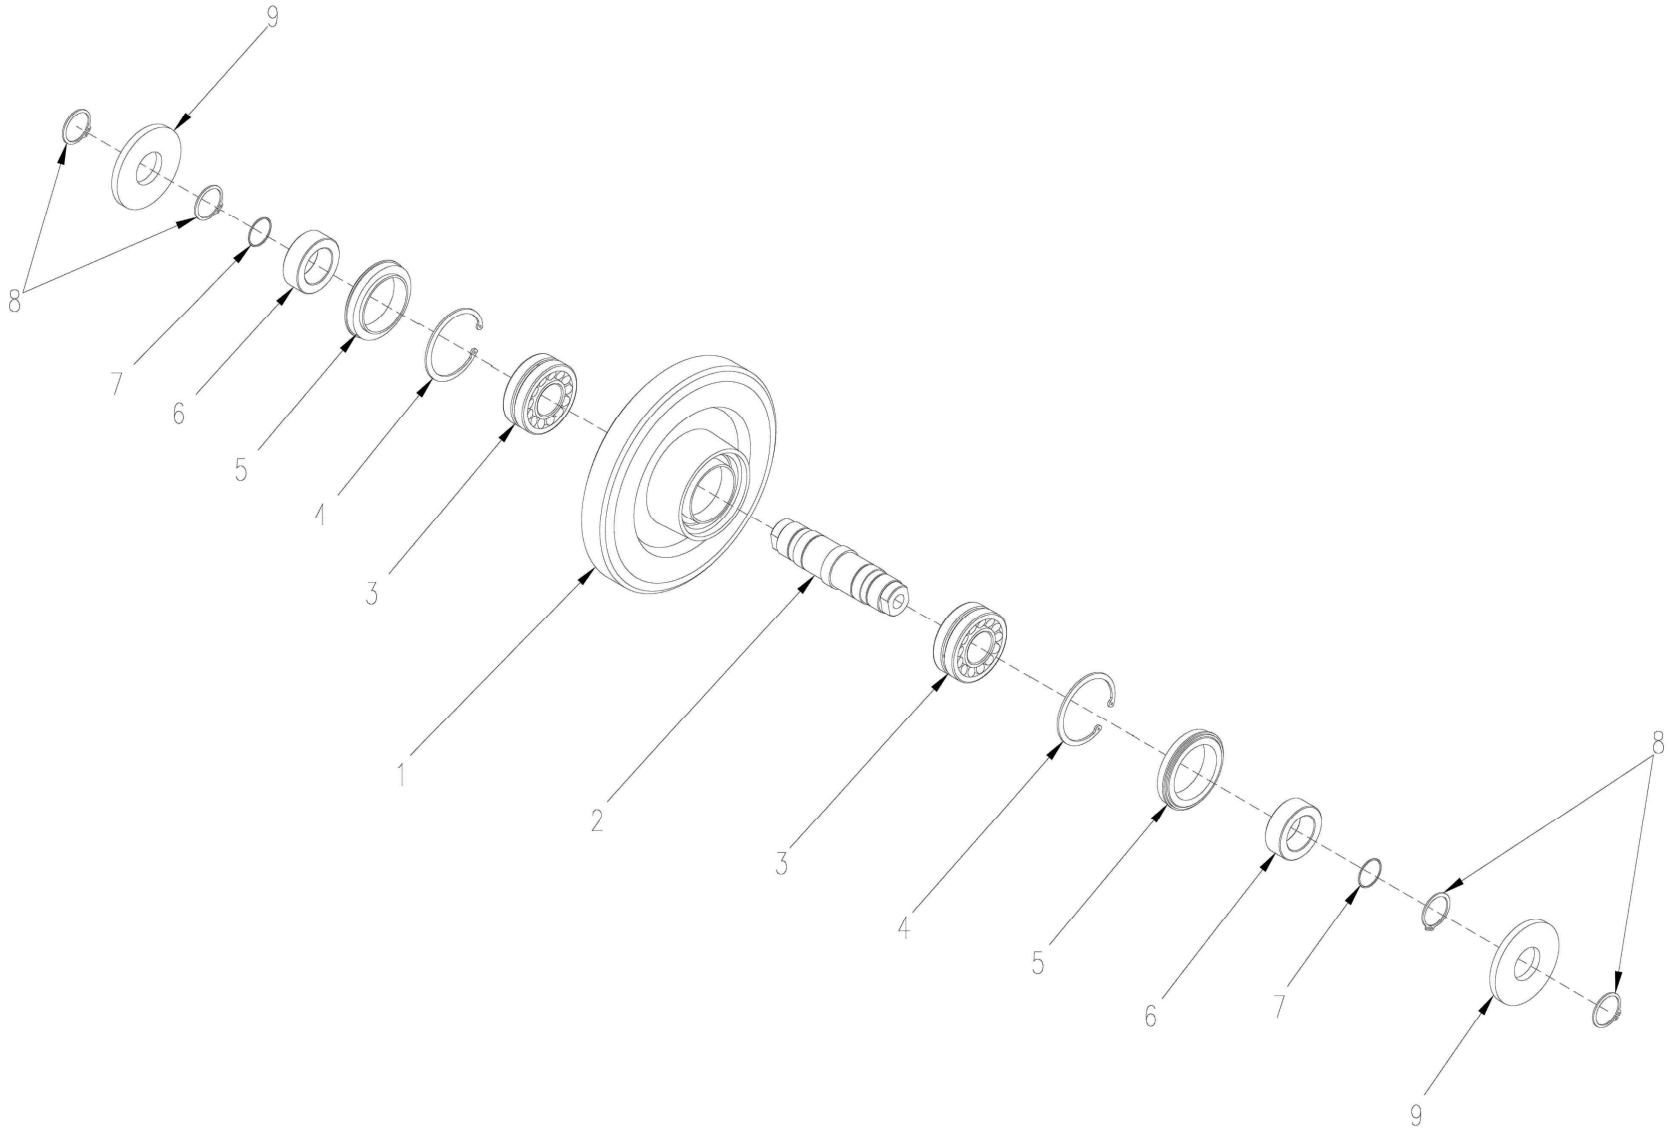


5. Rear roller assy (후륜 롤러 조합)				
No.	Name	Part No.	Quantity	Remarks
1	Rear roller (후륜 롤러)	T400T4-0501	1	
2	Fixed pin for rear roller (후륜 롤러 고정핀)	T400T4-0502	1	
3	Bearing (베어링)	T400T4-0503	2	
4	Snap ring (스냅 링)	T400T4-0504	2	
5	(카라)	T400T4-0505	2	
6	Snap ring (스냅 링)	T400T4-0506	2	
7	Dust seal (더스트 씰)	T400T4-0507	2	
8	Double retainer (이중 리테이너)	T400T4-0508	2	
9	Center pin (센터핀)	T400T4-0509	2	

6. Motor shaft (모터 축)

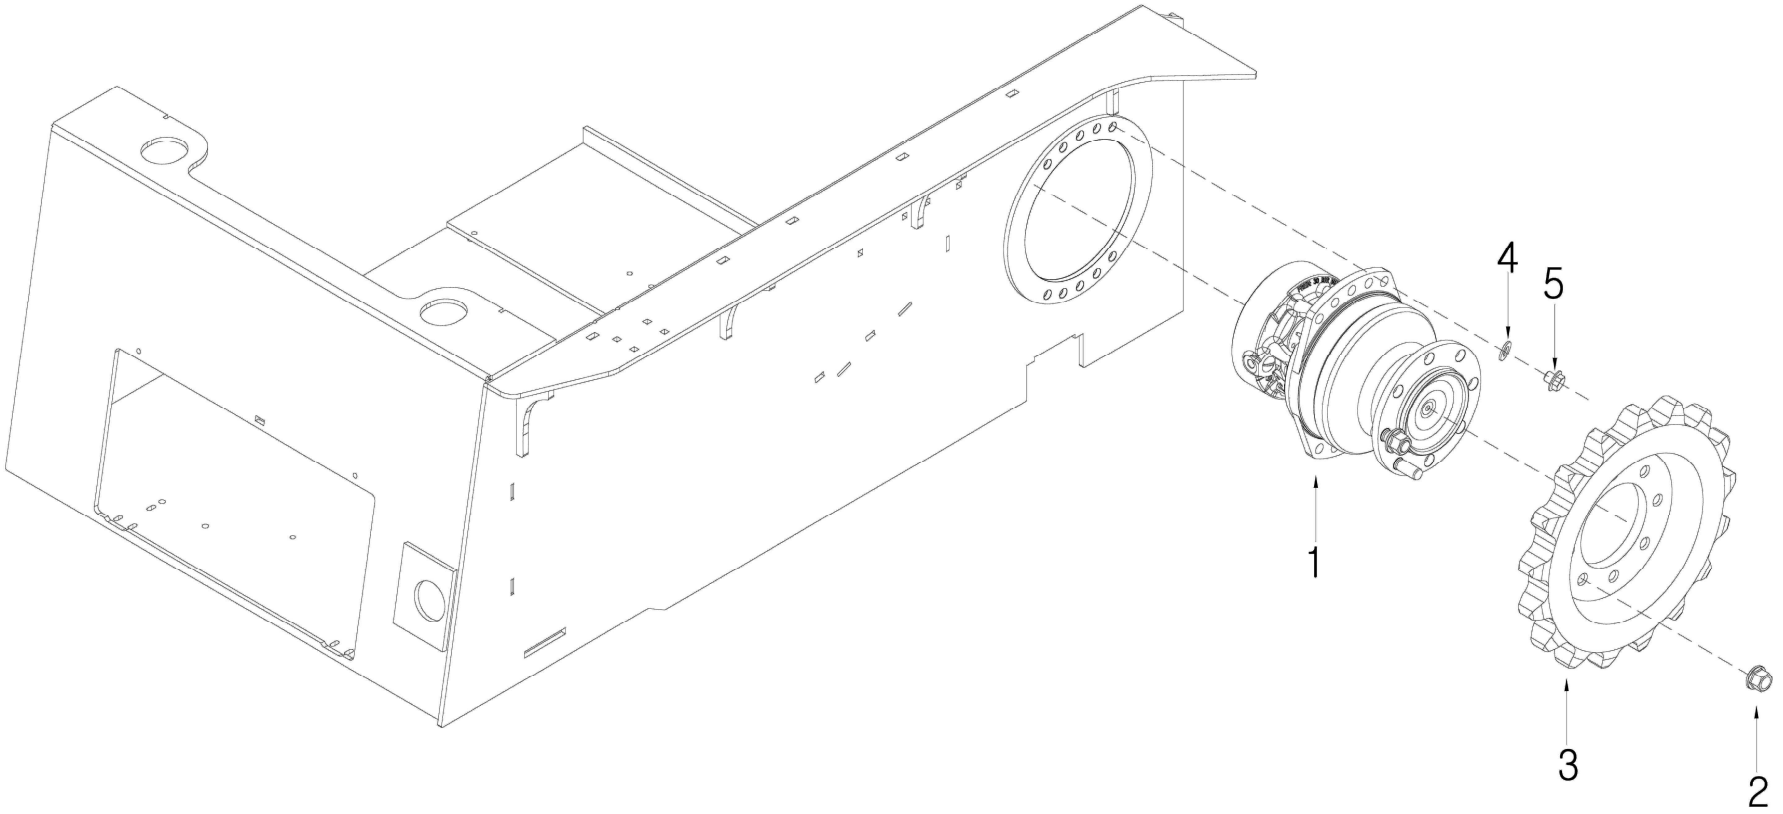


6. Motor shaft (모터 축)				
No.	Name	Part No.	Quantity	Remarks
1	Drive motor (구동 모터)	T400T4-0601	2	
2	Nut (너트)	T400T4-0602	16	
3	Sprocket (스프라켓)	T400T4-0603	2	
4	Spring washer (스프링 와셔)	T400T4-0604	20	
5	Bolt (볼트)	T400T4-0605	20	

7. Lift arm (주붐)

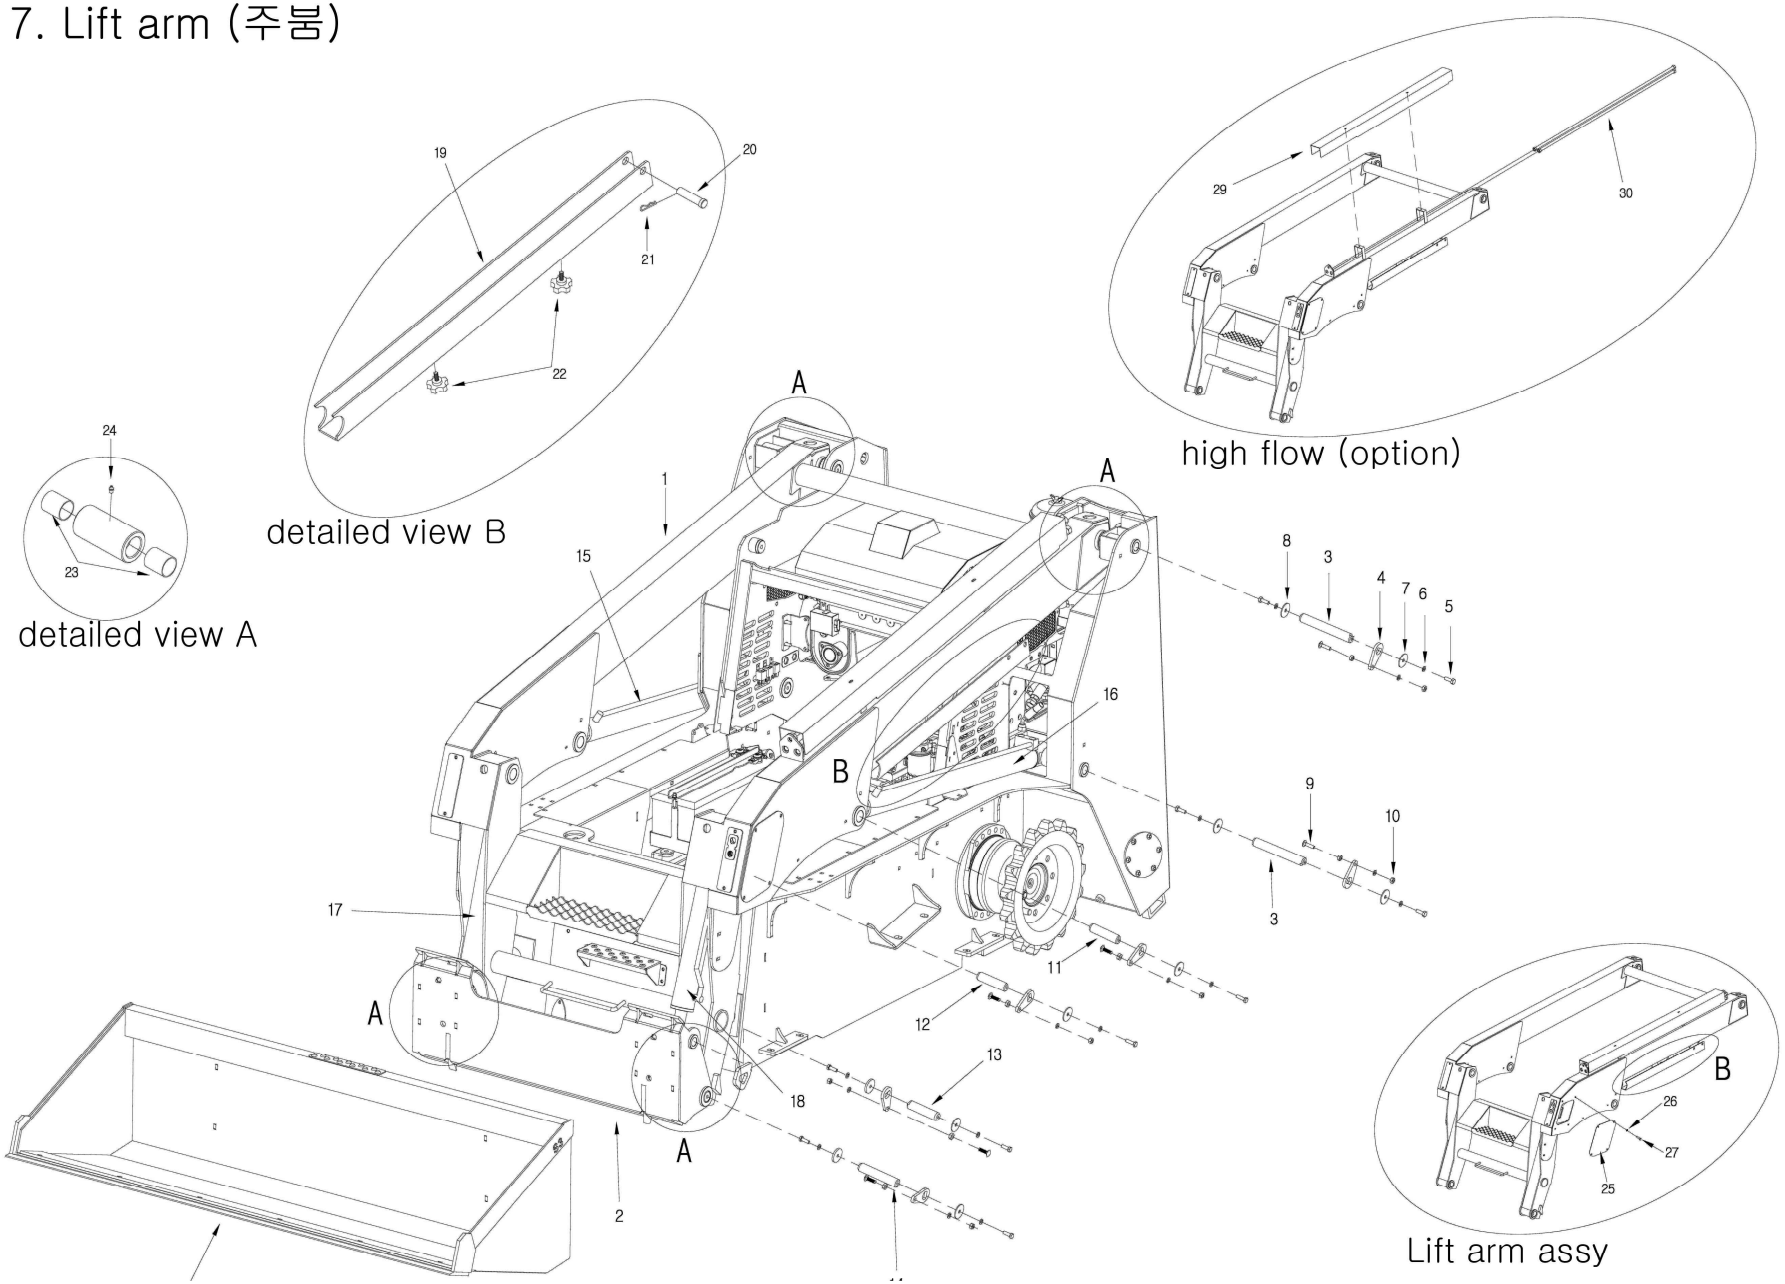
high flow (option)
detailed view B
detailed view A
Lift arm assy
A
B
1
2
3
4
5
6
7
8
9
10
11
12
13
15
16
17
18
19
20
21
22
23
24
25
26
27
29
30


7. Lift arm (주붐)				
No.	Name	Part No.	Quantity	Remarks
1	Lift arm assy (주붐 조합)	T400T4-0701	1	
2	Pad assy (패드 조합)	T400T4-0702	1	
3	Horning pipe, pin for lift cylinder (주붐실린더 핀-호닝관)	T400T4-0703	6	
4	Bracket for fixing pin (핀 고정 브라켓)	T400T4-0704	16	
5	Bolt (볼트)	T400T4-0705	48	
6	Spring washer (스프링 와셔)	T400T4-0706	34	
7	Washer (와셔)	T400T4-0707	12	
8	Washer (와셔)	T400T4-0708	10	
9	Square bolt (사각 볼트)	T400T4-0709	12	
10	Nut (너트)	T400T4-0710	24	
11	Safety pin (링크 핀)	T400T4-0711	2	
12	Rod, pin for lift cylinder (주붐 실린더 핀-로드)	T400T4-0712	2	
13	Pin, coupling pipe (연결관 핀)	T400T4-0713	2	
14	Rod, pin for lift cylinder (버켓 실린더 핀-로드)	T400T4-0714	2	
15	Pin for pad (패드 핀)	T400T4-0715	2	
16	Lift arm cylinder RH (오른쪽 주붐 실린더)	T400T4-0716	1	
17	Lift arm cylinder LH (왼쪽 주붐 실린더)	T400T4-0717	1	
18	Tilt cylinder RH (오른쪽 버켓 실린더)	T400T4-0718	1	
19	Tilt cylinder LH (왼쪽 버켓 실린더)	T400T4-0719	1	
20	Lift arm support device (주붐 지지대)	T400T4-0720	1	
21	Fixed pin (고정 핀)	T400T4-0721	1	
22	Snap pin (스냅핀)	T400T4-0722	1	
23	Knob bolt (노브 볼트)	T400T4-0723	2	
24	DU bush (DU 부시)	T400T4-0724	8	
25	Grease nipple (그리스 니쁠)	T400T4-0725	4	

7. Lift arm (주붐)

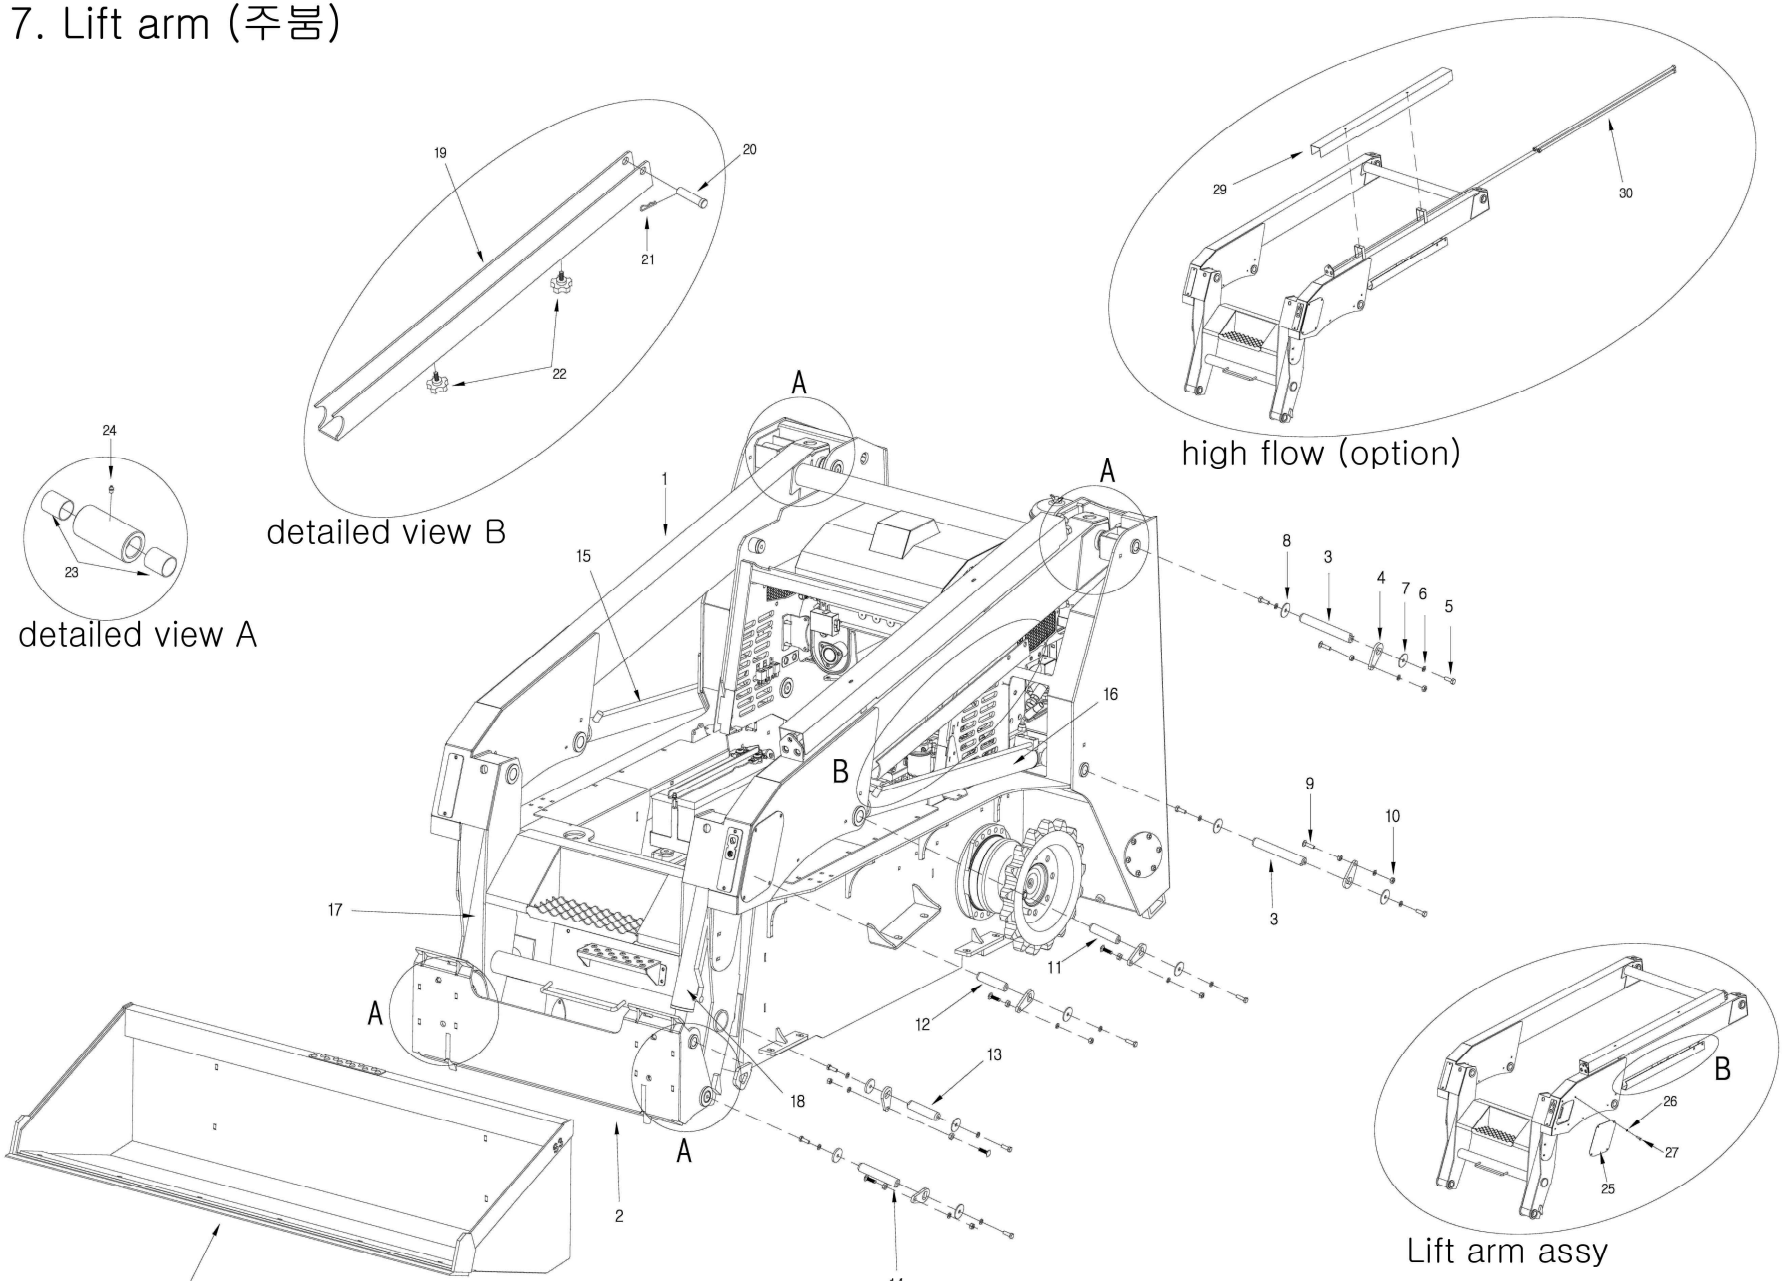
detailed view A
detailed view B
high flow (option)
Lift arm assy
A
B
1
2
3
4
5
6
7
8
9
10
11
12
13
15
16
17
18
19
20
21
22
23
24
25
26
27
29
30


7. Lift arm (주붐) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Cover (커버)	T400T4-0726	2	
27	Washer (와셔)	T400T4-0727	8	
28	Bolt (볼트)	T400T4-0728	8	
29	Bucket assy (버켓 조합)	T400T4-0729	1	


8. Lift arm for extended boom (이단붐조합)

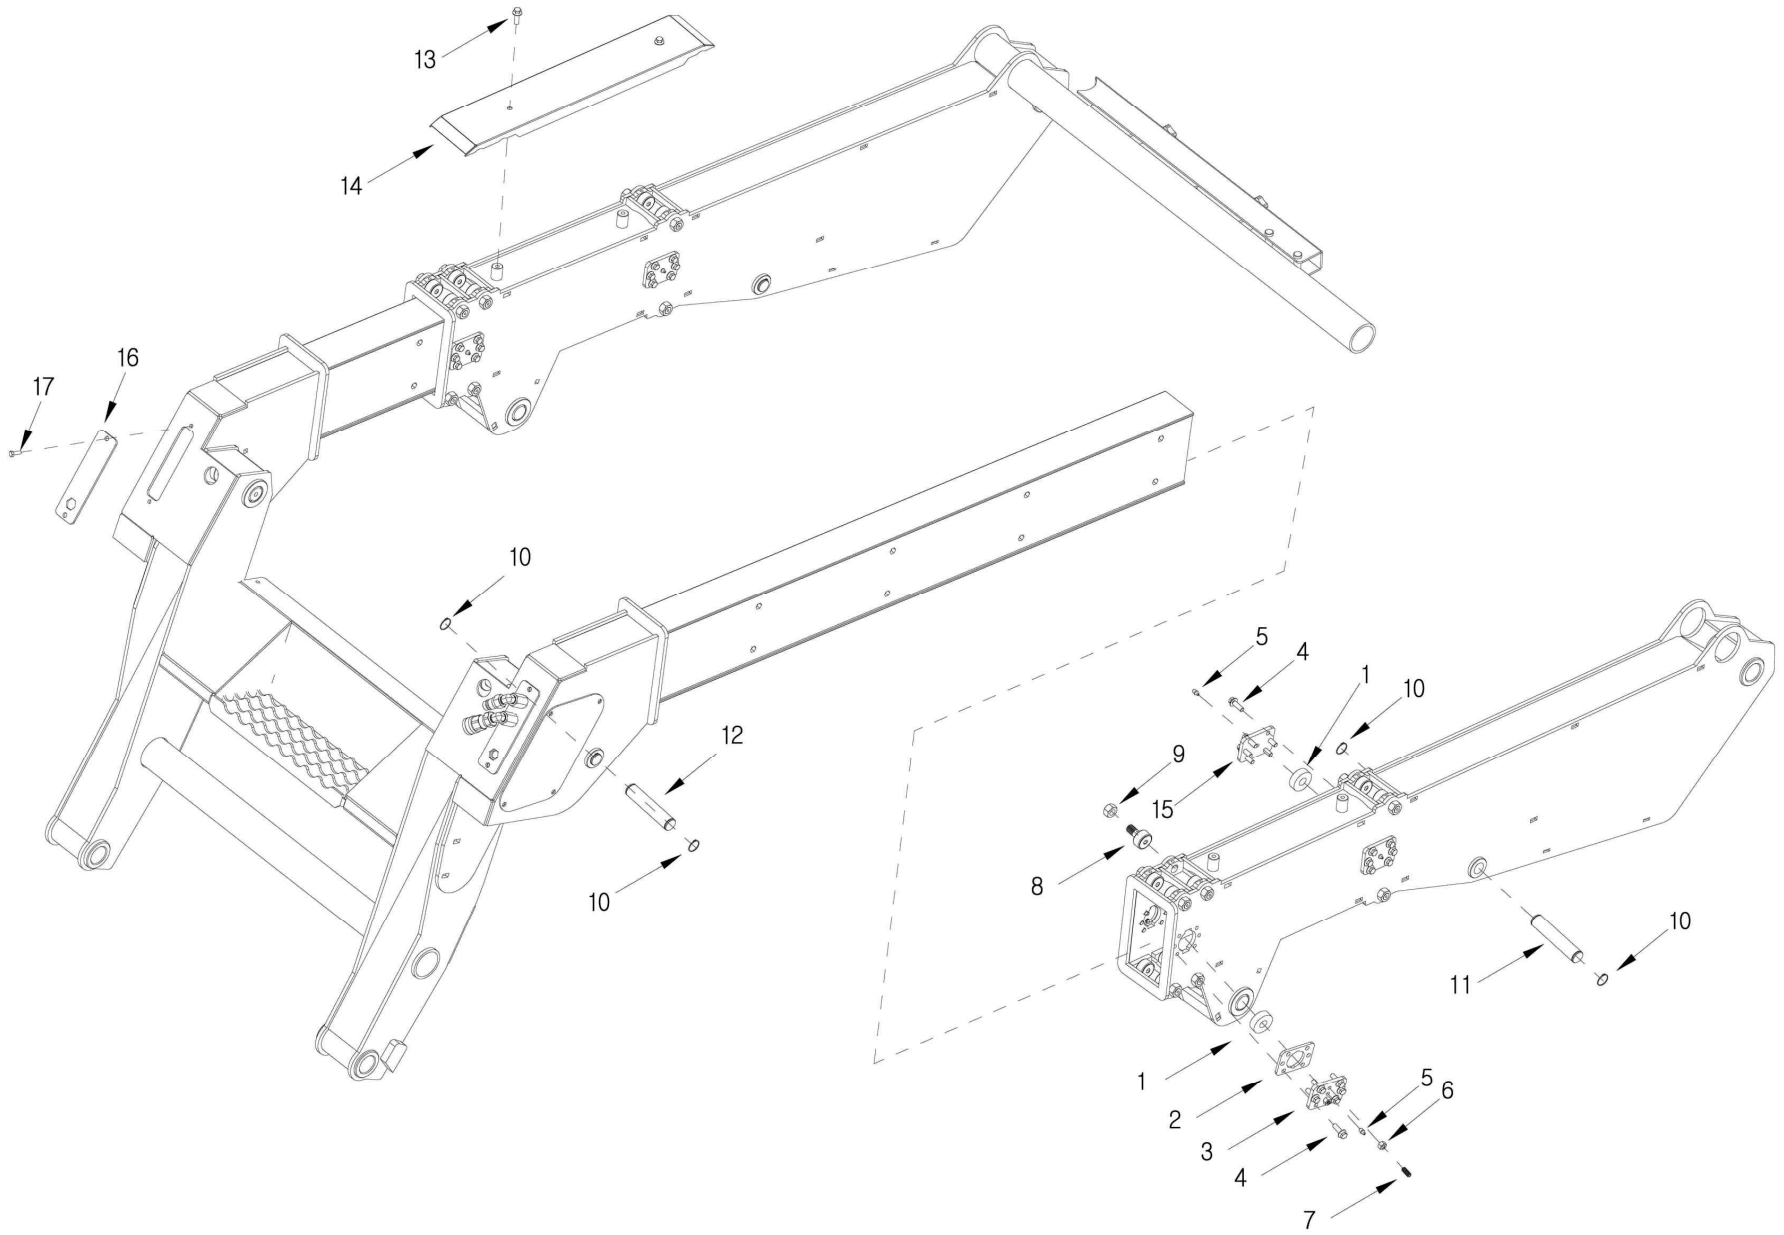

8. Lift arm for extended boom (이단붐조합)				
No.	Name	Part No.	Quantity	Remarks
1	MC Bearing (MC 베어링)	T400T4-0801	8	
2	Spacing Plate, Outside (간격판 외측)	T400T4-0802	4	
3	Press plate, Outside (누름판, 외측)	T400T4-0803	4	
4	Bolt (볼트)	T400T4-0804	48	
5	Grease nipple (그리스 니쁠)	T400T4-0805	8	
6	Nut (너트)	T400T4-0806	8	
7	Stripper Bolt (무드볼트)	T400T4-0807	8	
8	Stud track rollers (스터드 트랙 롤러 베어링)	T400T4-0808	24	
9	Nut (너트)	T400T4-0809	24	
10	Snap ring (스냅링)	T400T4-0810	8	
11	Fixed Pin S for Extended cylinder (이단붐용 실린더 핀 S)	T400T4-0811	2	
12	Fixed Pin S for Extended cylinder (이단붐용 실린더 핀 R)	T400T4-0812	2	
13	Bolt (볼트)	T400T4-0813	4	
14	Bearing cover (베어링 커버)	T400T4-0814	2	
15	Press plate, inside (누름판, 내측)	T400T4-0815	4	
16	Aux. cover RH (보조커버-RH)	T400T4-0816	1	
17	Bolt (볼트)	T400T4-0817	4	

9. Quick tach pad (퀵 태치 패드)

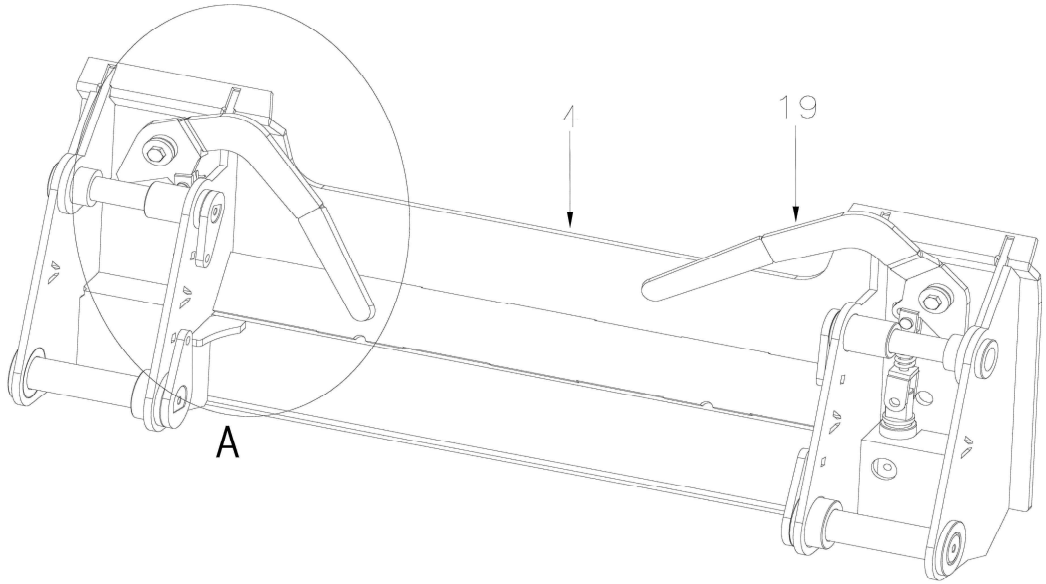


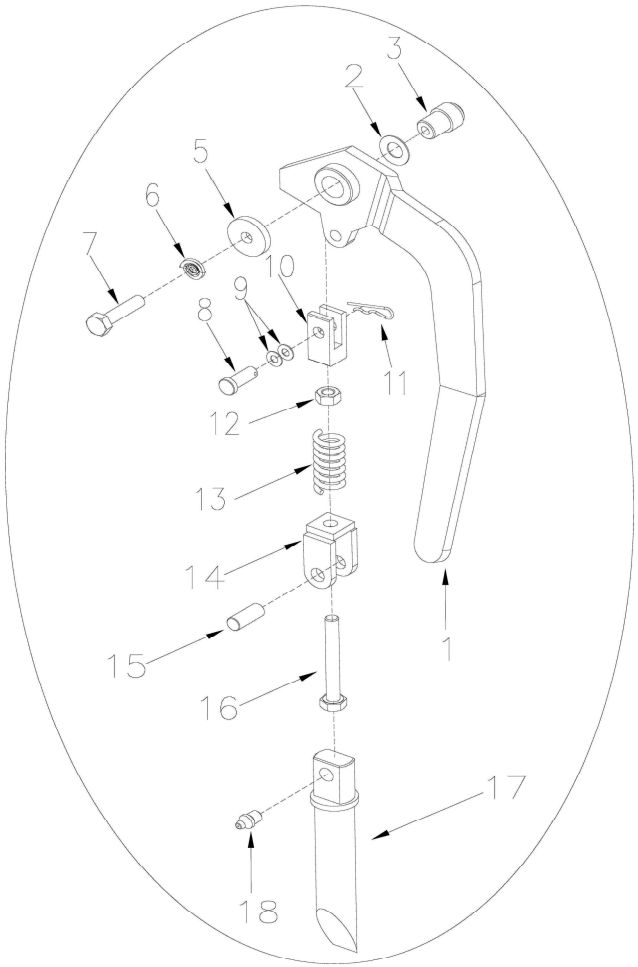

detailed view A


9. Quick tach pad (퀵 태치 패드)				
No.	Name	Part No.	Quantity	Remarks
1	Handle LH (손잡이 왼쪽)	T400T4-0901	1	
2	Belleville washer (접시 스프링 와셔)	T400T4-0902	2	
3	Grease nipple (그리스 니쁠)	T400T4-0903	2	
4	Quick tach pad body (퀵 태치 패드)	T400T4-0904	1	
5	Washer (와셔)	T400T4-0905	2	
6	Spring washer (스프링 와셔)	T400T4-0906	2	
7	Bolt (볼트)	T400T4-0907	2	
8	Fixed pin (고정 핀)	T400T4-0908	2	
9	Washer (와셔)	T400T4-0909	4	
10	Coupling box (연결함)	T400T4-0910	2	
11	Snap pin (스냅 핀)	T400T4-0911	2	
12	Nut (너트)	T400T4-0912	2	
13	Bolt Spring (스프링 볼트)	T400T4-0913	2	
14	Coupling box (연결함)	T400T4-0914	2	
15	Fixed pin (고정 핀)	T400T4-0915	2	
16	Bolt (볼트)	T400T4-0916	2	
17	Pin (잠금 핀)	T400T4-0917	2	
18	Grease nipple (그리스 니쁠)	T400T4-0918	2	
19	Handle RH (손잡이 오른쪽)	T400T4-0919	1	

10. Bucket (버켓)

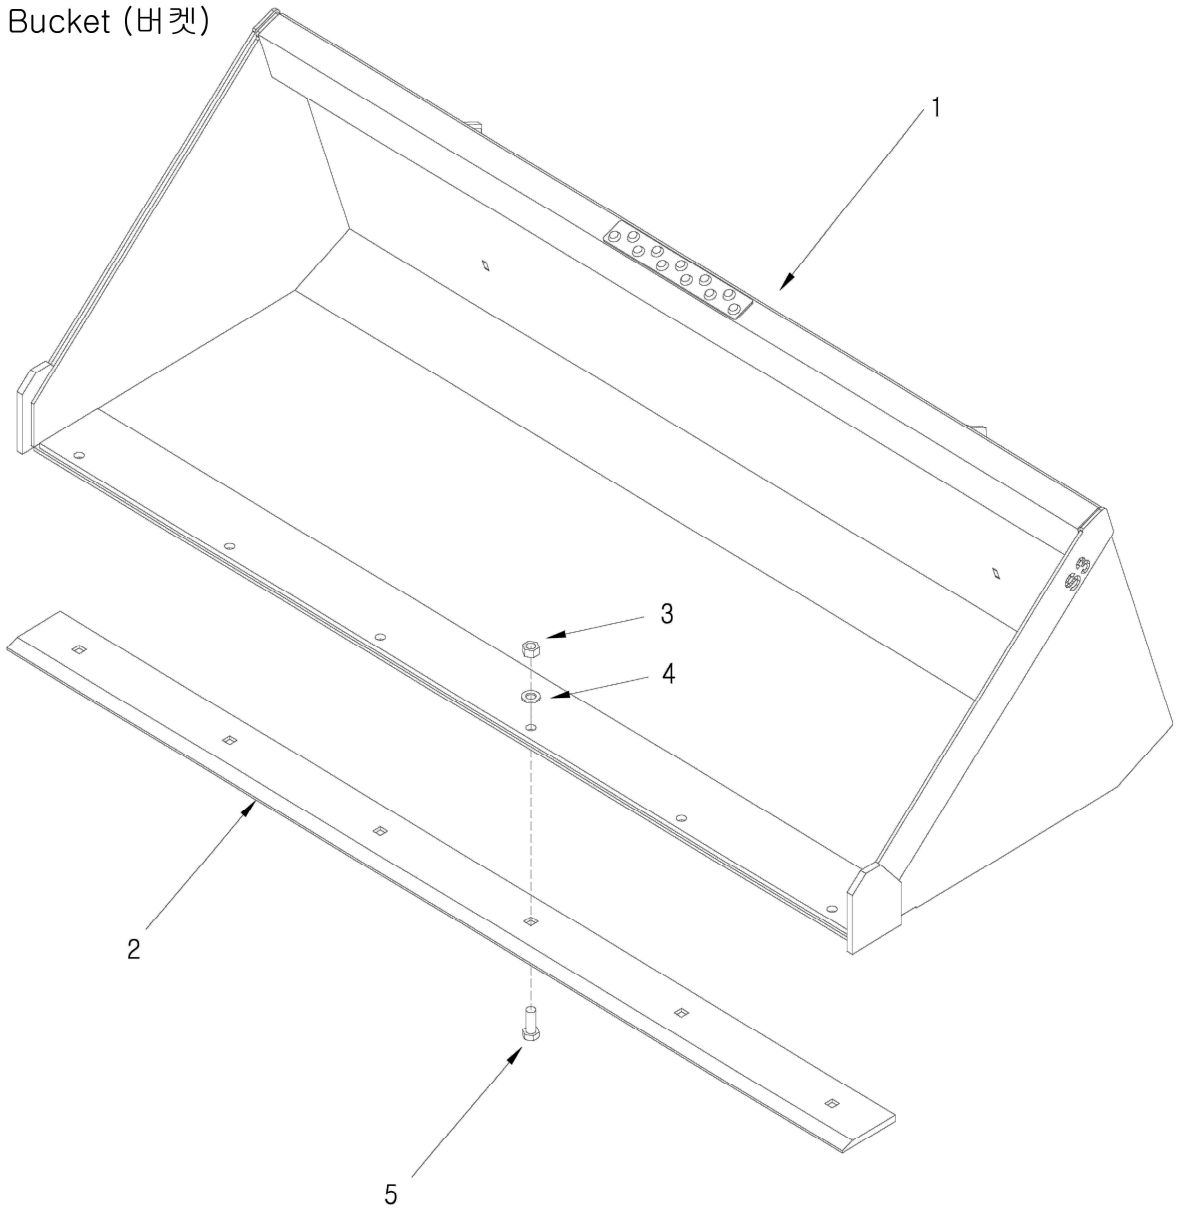


10. Bucket (버켓)				
No.	Name	Part No.	Quantity	Remarks
1	Bucket (버켓)	T400T4-1001	1	
2	Blade (버켓 날)	T400T4-1002	1	
3	Nut (너트)	T400T4-1003	6	
4	Spring washer (스프링 와셔)	T400T4-1004	6	
5	Squre bolt (사각 볼트)	T400T4-1005	6	

11. Lift cylinder (주붐 실린더)

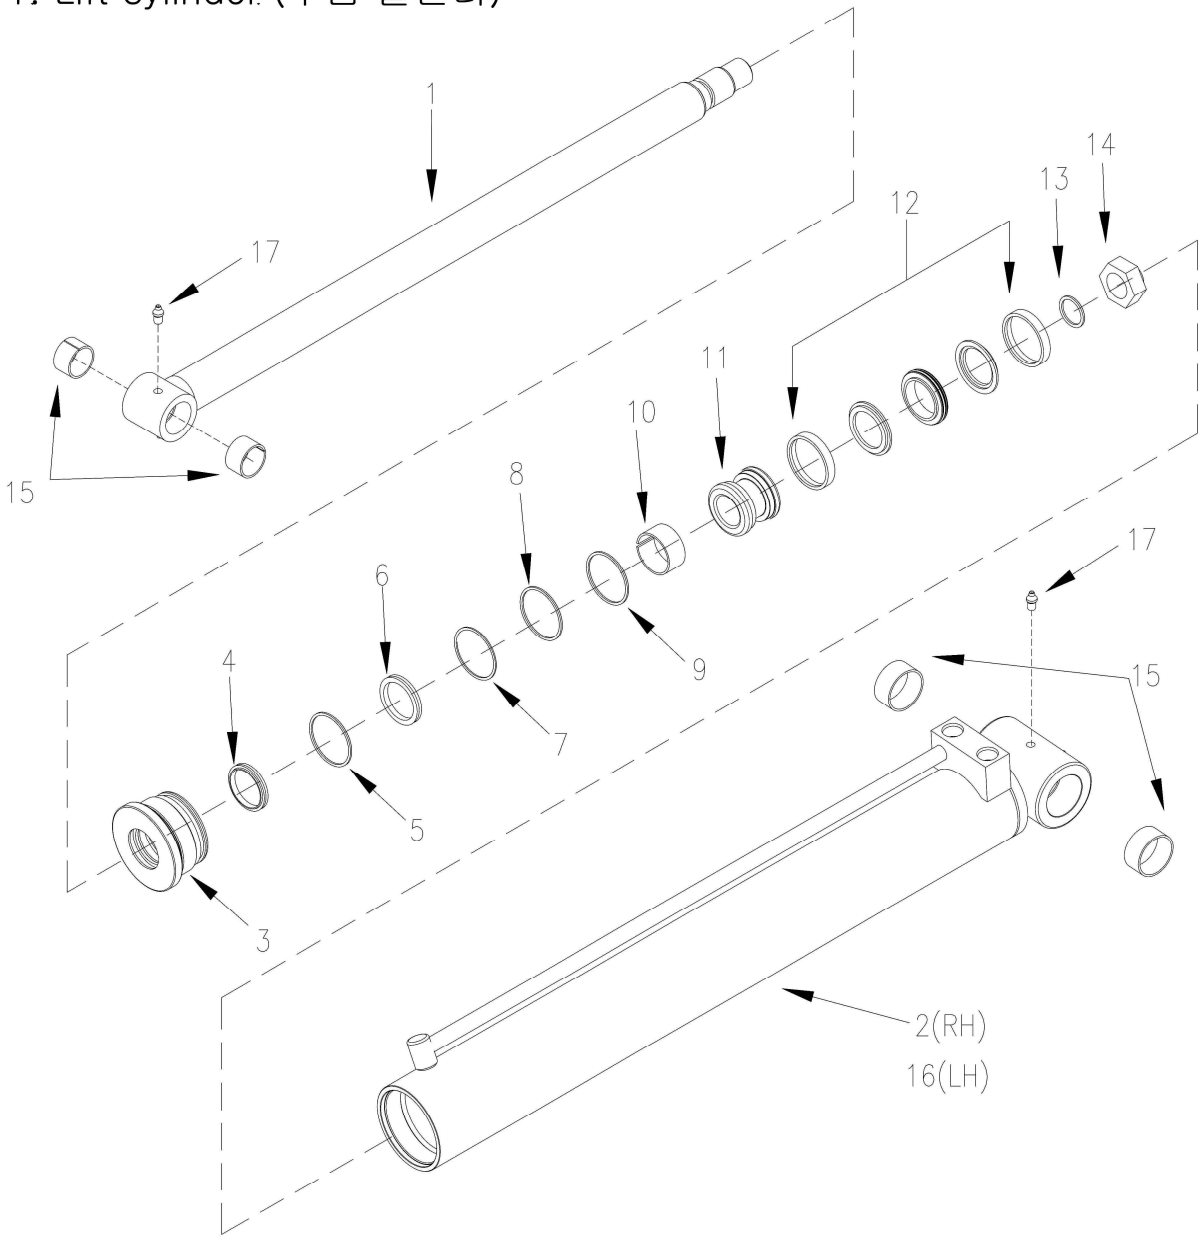


11. Lift cylinder (주붐 실린더)				
No.	Name	Part No.	Quantity	Remarks
1	Rod (로드)	T400T4-1101	1	
2	Honing pipe RH (호닝 관 RH)	T400T4-1102	1	
3	Cap nut (캡너트)	T400T4-1103	1	
4	Dust seal (더스트 씰)	T400T4-1104	1	
5	Rod seal (로드 씰)	T400T4-1105	1	
6	Gland (그랜드)	T400T4-1106	1	
7	O-ring (오 링)	T400T4-1107	1	
8	Back-up ring (백업링)	T400T4-1108	1	
9	DU bush (DU 부시)	T400T4-1109	1	
10	Piston (피스톤)	T400T4-1110	1	
11	Compact seal (콤팩트 씰)	T400T4-1111	1	
12	O-ring (오 링)	T400T4-1112	1	
13	Nut (너트)	T400T4-1113	1	
14	DU bearing (DU 베어링)	T400T4-1114	4	
15	Honing pipe LH (호닝 관 LH)	T400T4-1115	1	
16	Grease nipple (그리스니쁠)	T400T4-1116	2	

12. Tilt cylinder (버켓 실린더)

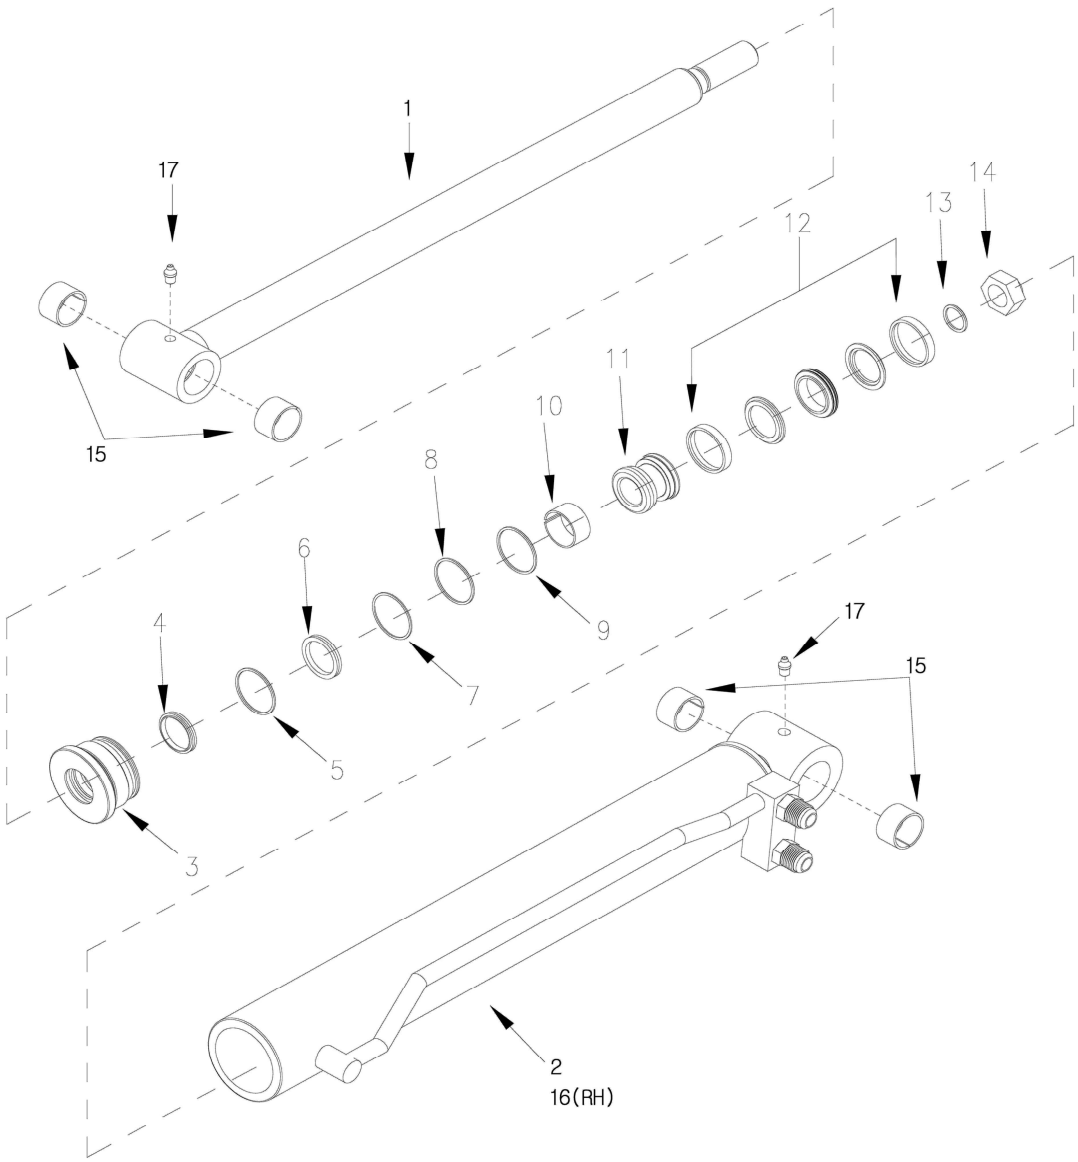


12. Tilt cylinder (버켓 실린더)				
No.	Name	Part No.	Quantity	Remarks
1	Rod (로드)	T400T4-1201	1	
2	Honing pipe LH (호닝 관 LH)	T400T4-1202	1	
3	Cap nut (캡 너트)	T400T4-1203	1	
4	Dust seal (더스트 씰)	T400T4-1204	1	
5	Rod seal (로드 씰)	T400T4-1205	1	
6	Gland (그랜드)	T400T4-1206	1	
7	O-ring (오 링)	T400T4-1207	1	
8	Back-up ring (백업 링)	T400T4-1208	1	
9	DU bush (DU 부시)	T400T4-1209	1	
10	Piston (피스톤)	T400T4-1210	1	
11	Compact seal (콤팩트 씰)	T400T4-1211	1	
12	O-ring (오 링)	T400T4-1212	1	
13	Nut (너트)	T400T4-1213	1	
14	DU bearing (DU 베어링)	T400T4-1214	4	
15	Honing pipe RH (호닝 관 RH)	T400T4-1215	1	
16	Grease nipple (그리스 니쁠)	T400T4-1216	2	

13. Extended cylinder (이단붐 실린더)

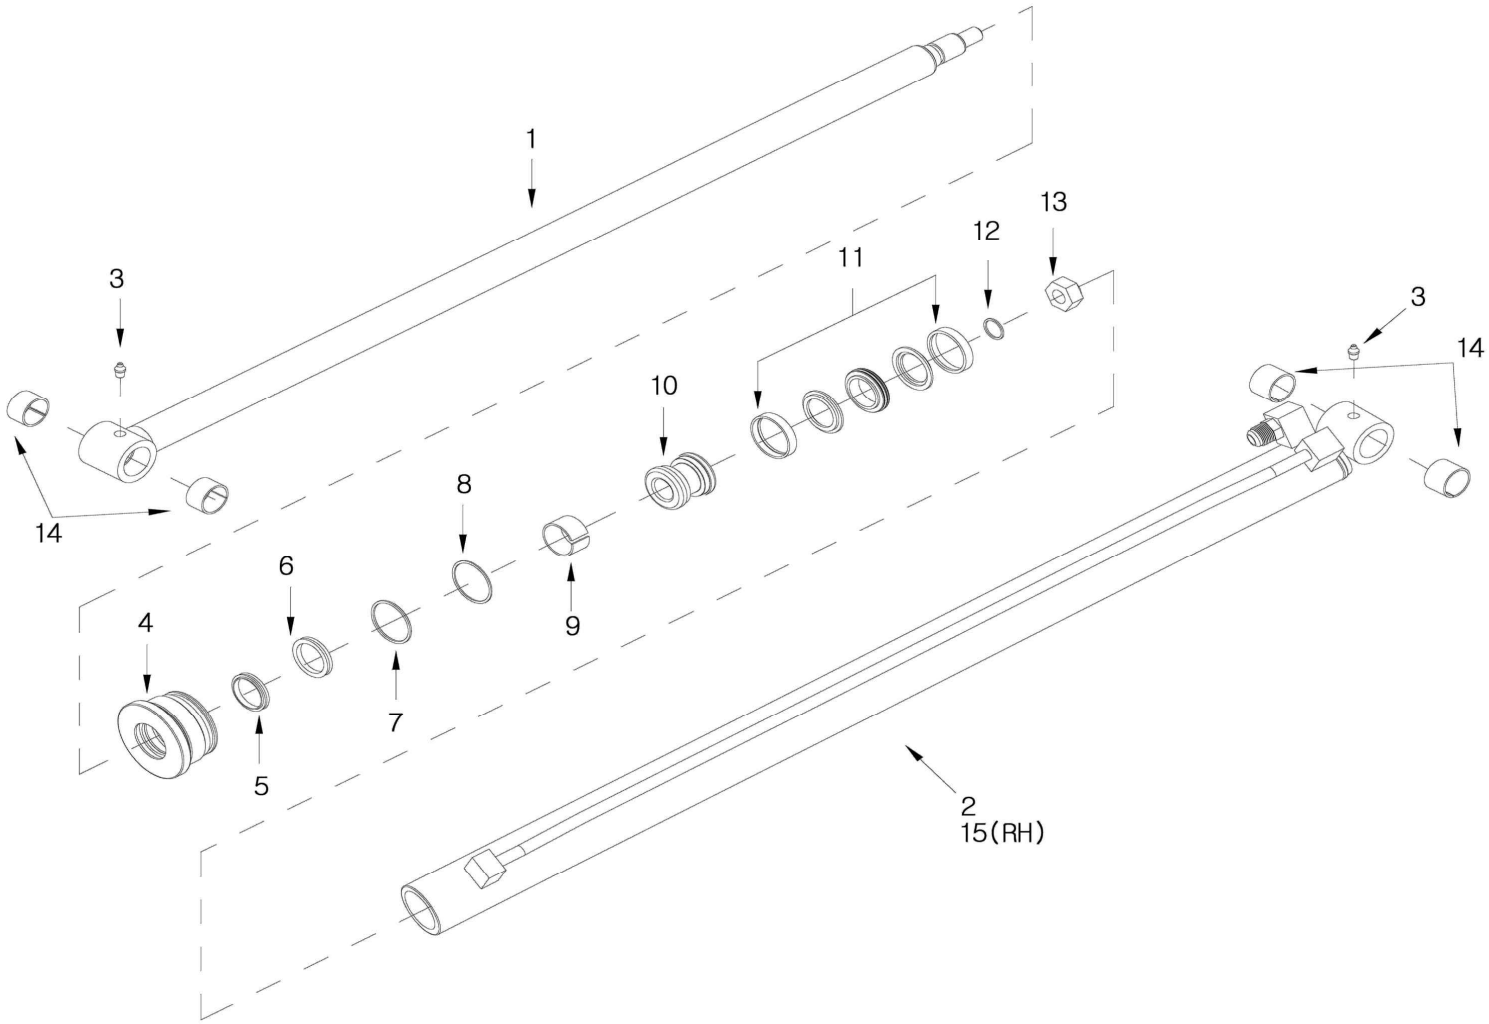


13. Extended cylinder (이단붐 실린더)				
No.	Name	Part No.	Quantity	Remarks
1	Rod (로드)	T400T4-1301	1	
2	Honing pipe LH (호닝 관 LH)	T400T4-1302	1	
3	Grease nipple (그리스 니쁠)	T400T4-1303	2	
4	Cap nut (캡너트)	T400T4-1304	1	
5	Dust seal (더스트 씰)	T400T4-1305	1	
6	Rod seal (로드 씰)	T400T4-1306	1	
7	O-ring (오 링)	T400T4-1307	1	
8	Back-up ring (백업 링)	T400T4-1308	1	
9	DU bush (DU 부시)	T400T4-1309	1	
10	Piston (피스톤)	T400T4-1310	1	
11	Compact seal (콤팩트 씰)	T400T4-1311	2	
12	O-ring (오 링)	T400T4-1312	2	
13	Nut (너트)	T400T4-1313	1	
14	DU bearing (DU 베어링)	T400T4-1314	4	
15	Honing pipe RH (호닝 관 RH)	T400T4-1315	1	

14. Cover (커버류)

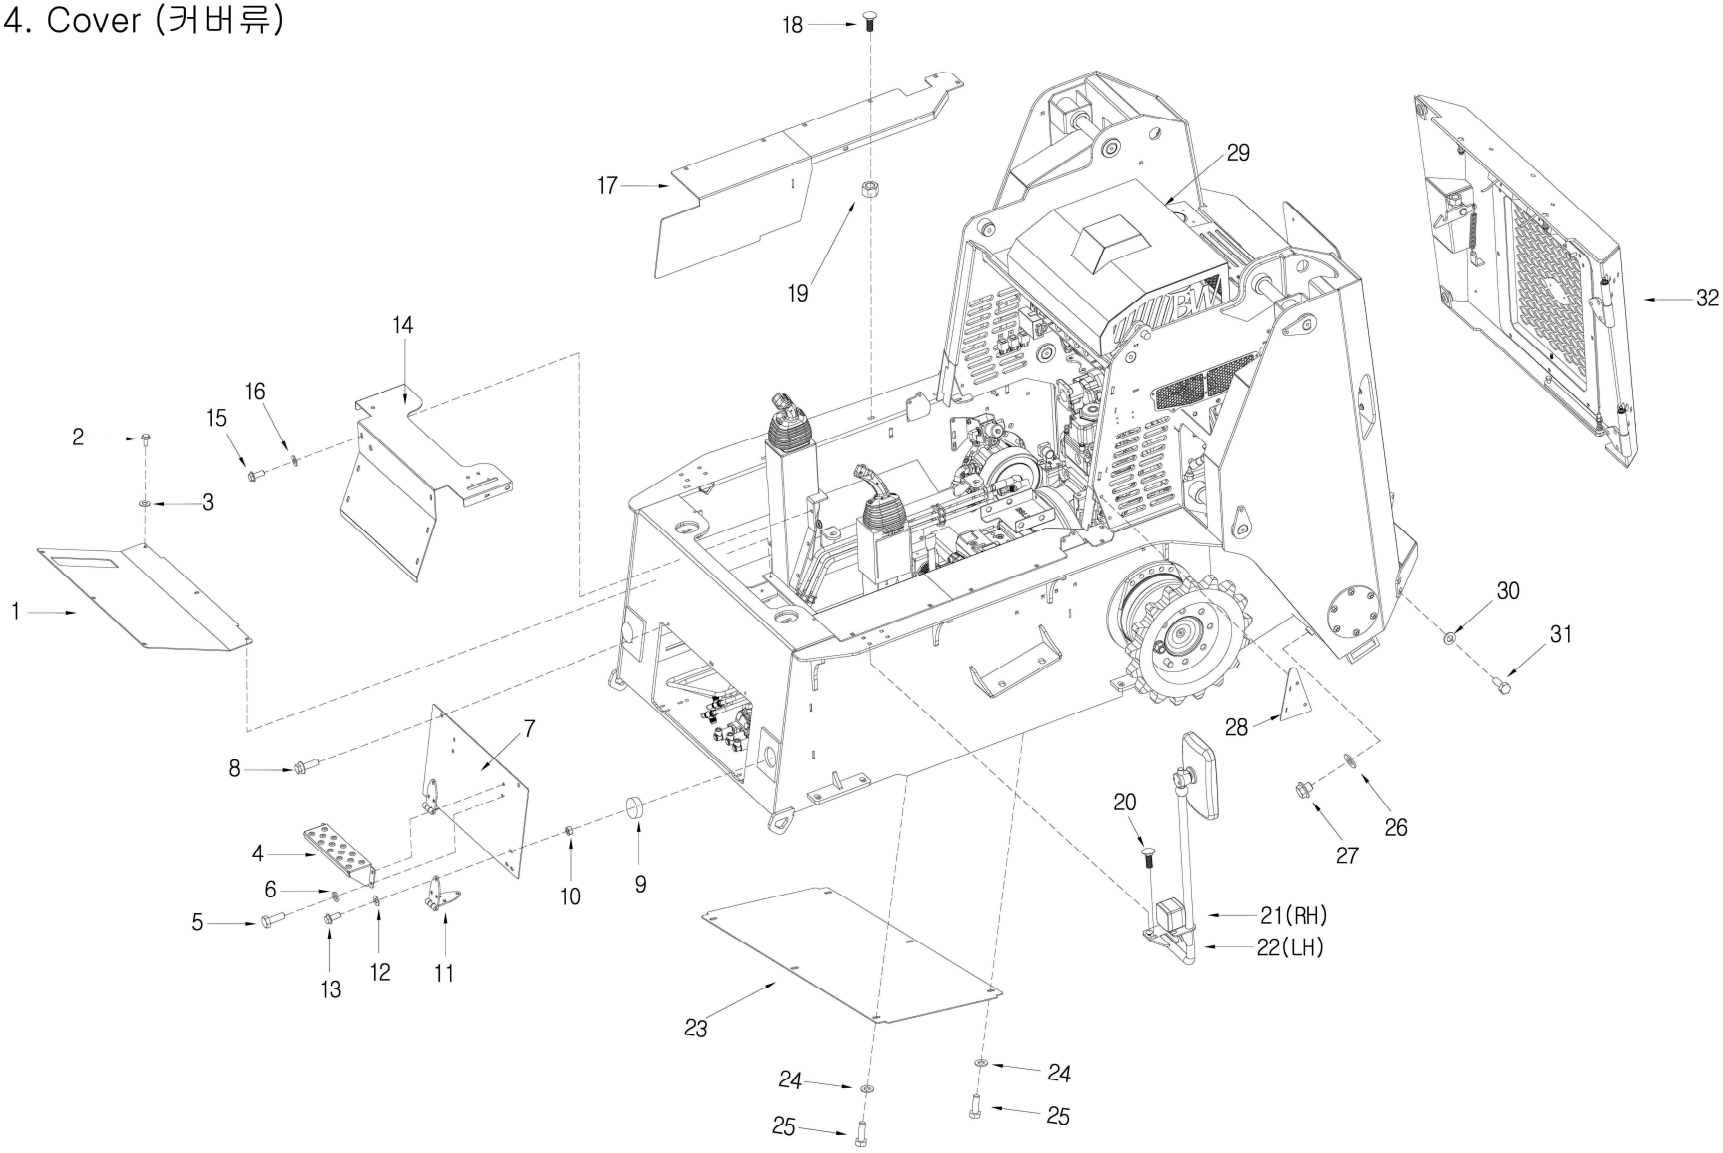
18
17
19
29
32
14
16
15
2
3
1
30
31
28
7
8
20
26
27
4
6
5
10
9
21(RH)
22(LH)
13
12
11
23
24
24
25
25


14. Cover (커버류)				
No.	Name	Part No.	Quantity	Remarks
1	Foot board (발판)	T400T4-1401	1	
2	Bolt (볼트)	T400T4-1402	6	
3	Washer (와셔)	T400T4-1403	6	
4	Foot support (발 받침대)	T400T4-1404	1	
5	Bolt (볼트)	T400T4-1405	2	
6	Spring washer (스프링 와셔)	T400T4-1406	2	
7	Front Cover (앞쪽 커버)	T400T4-1407	1	
8	Bolt (볼트)	T400T4-1408	2	
9	Rubber support (고무 받침대)	T400T4-1409	2	
10	Nut (너트)	T400T4-1410	12	
11	Hinge (힌지)	T400T4-1411	2	
12	Washer (와셔)	T400T4-1412	12	
13	Bolt (볼트)	T400T4-1413	12	
14	Midder cover (중간 커버)	T400T4-1414	1	
15	Bolt (볼트)	T400T4-1415	6	
16	Washer (와셔)	T400T4-1416	6	
17	Side cover assy (사이드 커버 조합)	T400T4-1417	2	
18	Square bolt (사각 볼트)	T400T4-1418	20	
19	Nut (너트)	T400T4-1419	12	
20	Square bolt (사각 볼트)	T400T4-1420	8	
21	Side mirror holder RH (사이드 미러 고정 조합-RH)	T400T4-1421	1	
22	Side mirror holder LH (사이드 미러 고정 조합-LH)	T400T4-1422	1	
23	Deck plate (바닥판)	T400T4-1423	1	
24	Washer (와셔)	T400T4-1424	6	
25	Bolt (볼트)	T400T4-1425	6	


14. Cover (커버류)

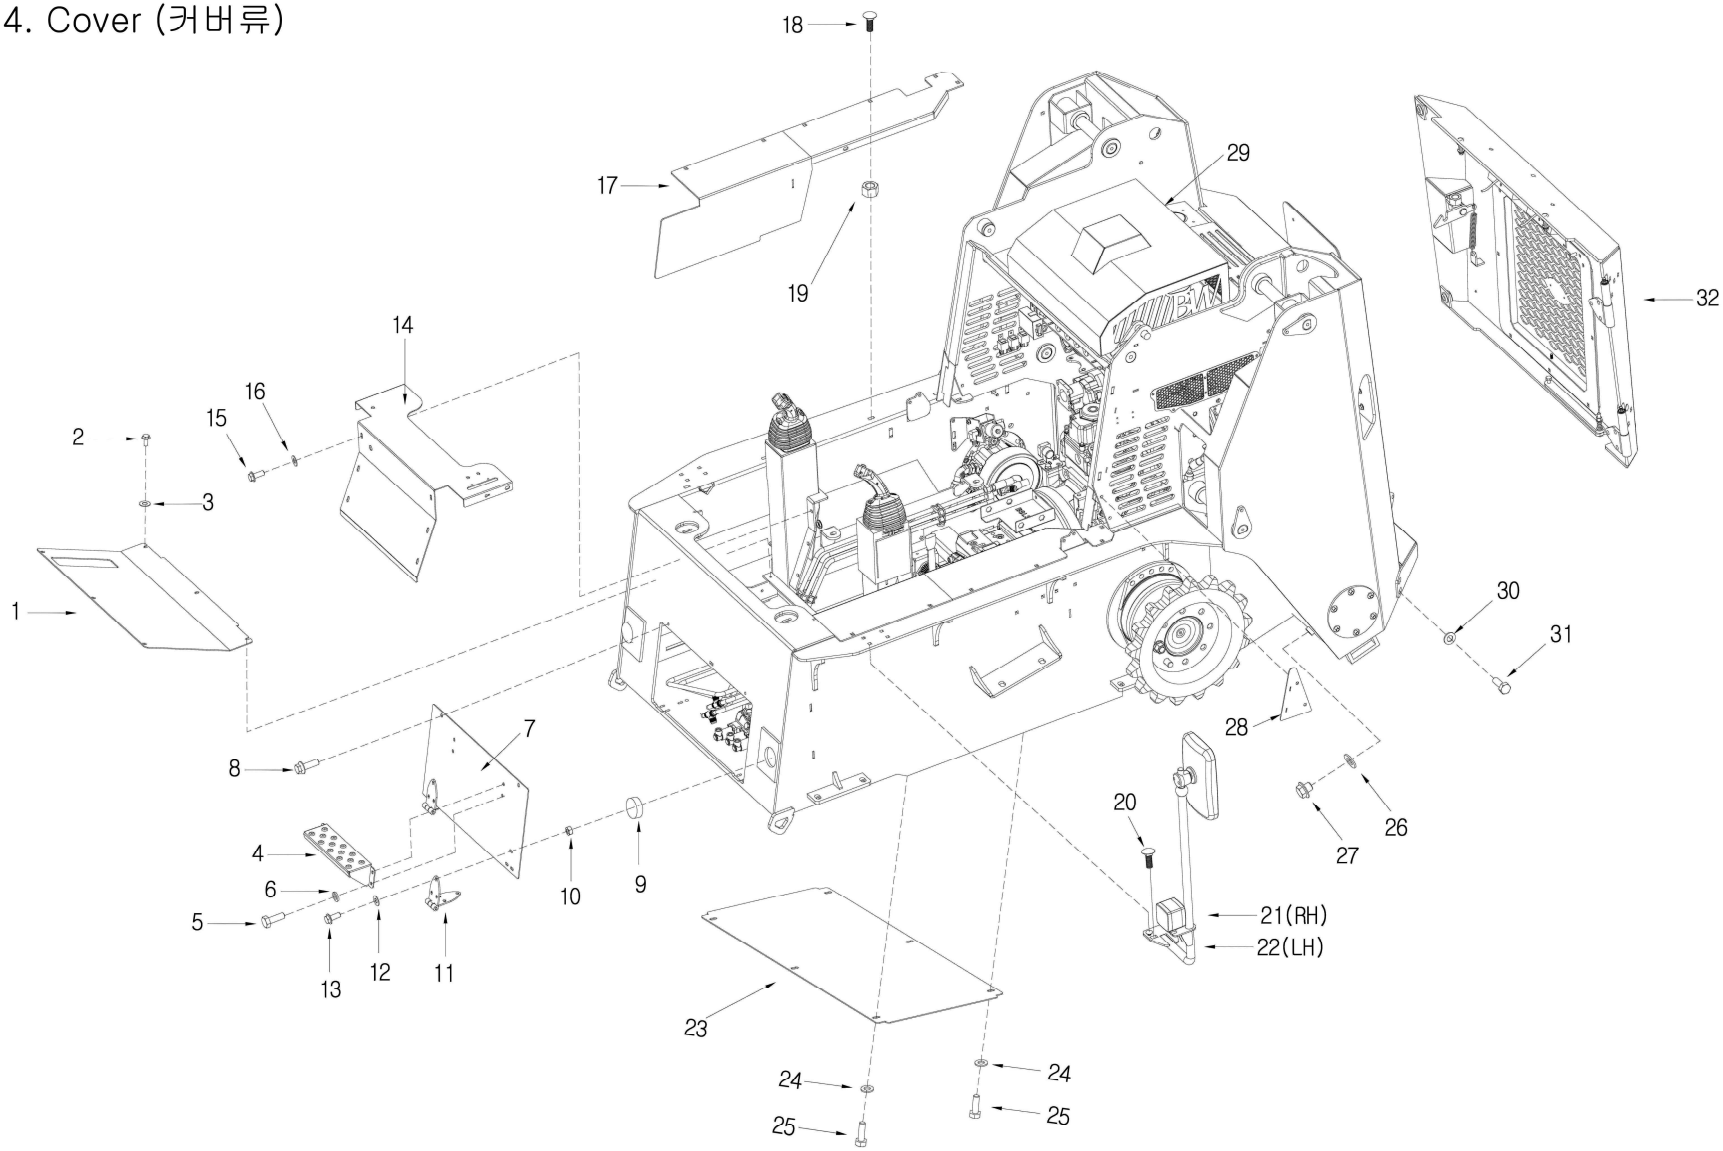
18
17
19
29
32
14
16
15
2
3
1
30
31
28
7
8
20
26
27
4
6
5
10
9
21(RH)
22(LH)
13
12
11
23
24
24
25
25

14. Cover (커버류) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Bonded seal (본딩 씰)	T400T4-1426	6	
27	Drain bolt (퇴유볼트)	T400T4-1427	6	
28	Side Cover LH/RH, Main Body (메인바 사이드 커버-LH,RH)	T400T4-1428	2	
29	Cover assy for electrical cooler (쿨러 커버 조합)	T400T4-1429	1	
30	Washer (와셔)	T400T4-1430	4	
31	Bolt (볼트)	T400T4-1431	4	
32	Engine room cover assy (엔진룸 커버 조합)	T400T4-1432	1	


15. Engine room cover (엔진룸 커버)

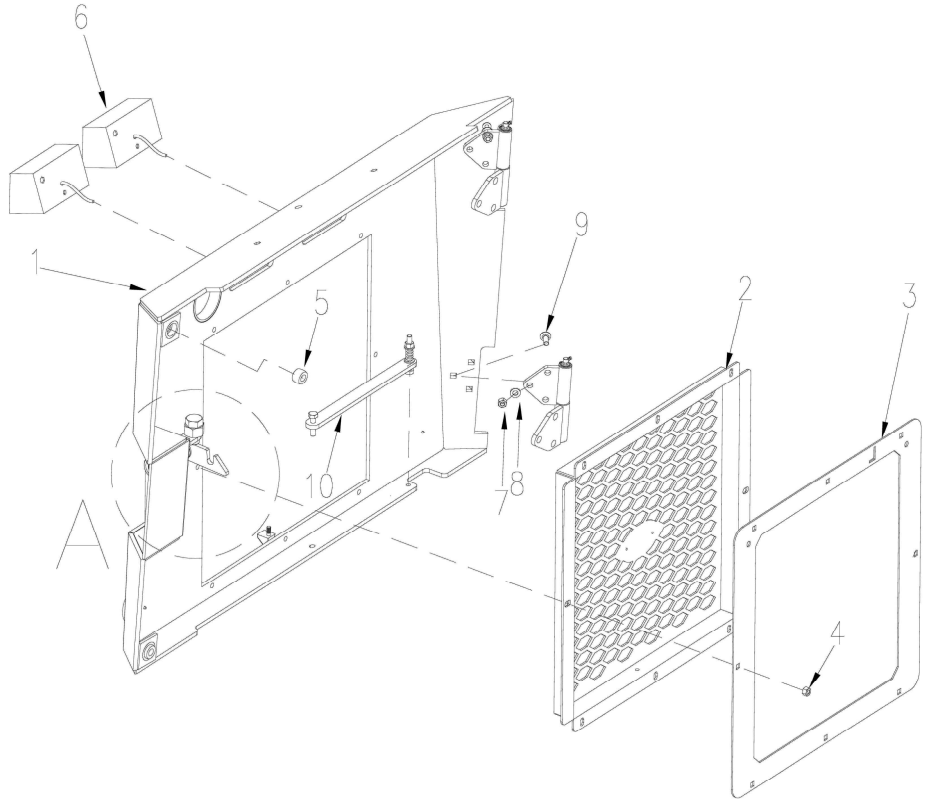

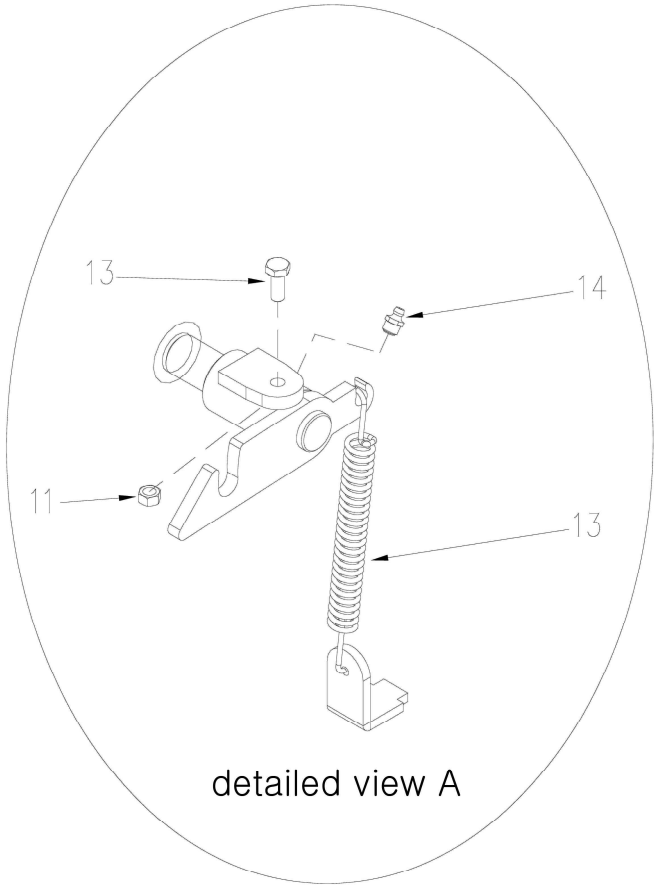


15. Engine room cover (엔진룸 커버)				
No.	Name	Part No.	Quantity	Remarks
1	Engine room cover (엔진룸 커버)	T400T4-1501	1	
2	Auxiliary cover (보조 커버)	T400T4-1502	1	
3	Guide (가이드)	T400T4-1503	1	
4	Nut (너트)	T400T4-1504	1	
5	Rubber support (고무 받침)	T400T4-1505	1	
6	Headlight (전조등)	T400T4-1506	1	
7	Nut (너트)	T400T4-1507	1	
8	Washer (와셔)	T400T4-1508	1	
9	carriage bolt (근각볼트)	T400T4-1509	1	
10	Stopper assy (스토퍼조합)	T400T4-1510	1	
11	Nut (너트)	T400T4-1511	1	
12	Bolt (볼트)	T400T4-1512	1	
13	Spring (스프링)	T400T4-1513	1	
14	Grease nipple (그리스 니쁠)	T400T4-1514	1	

16. Operator cab, standard canopy (안전탑 -기본형)

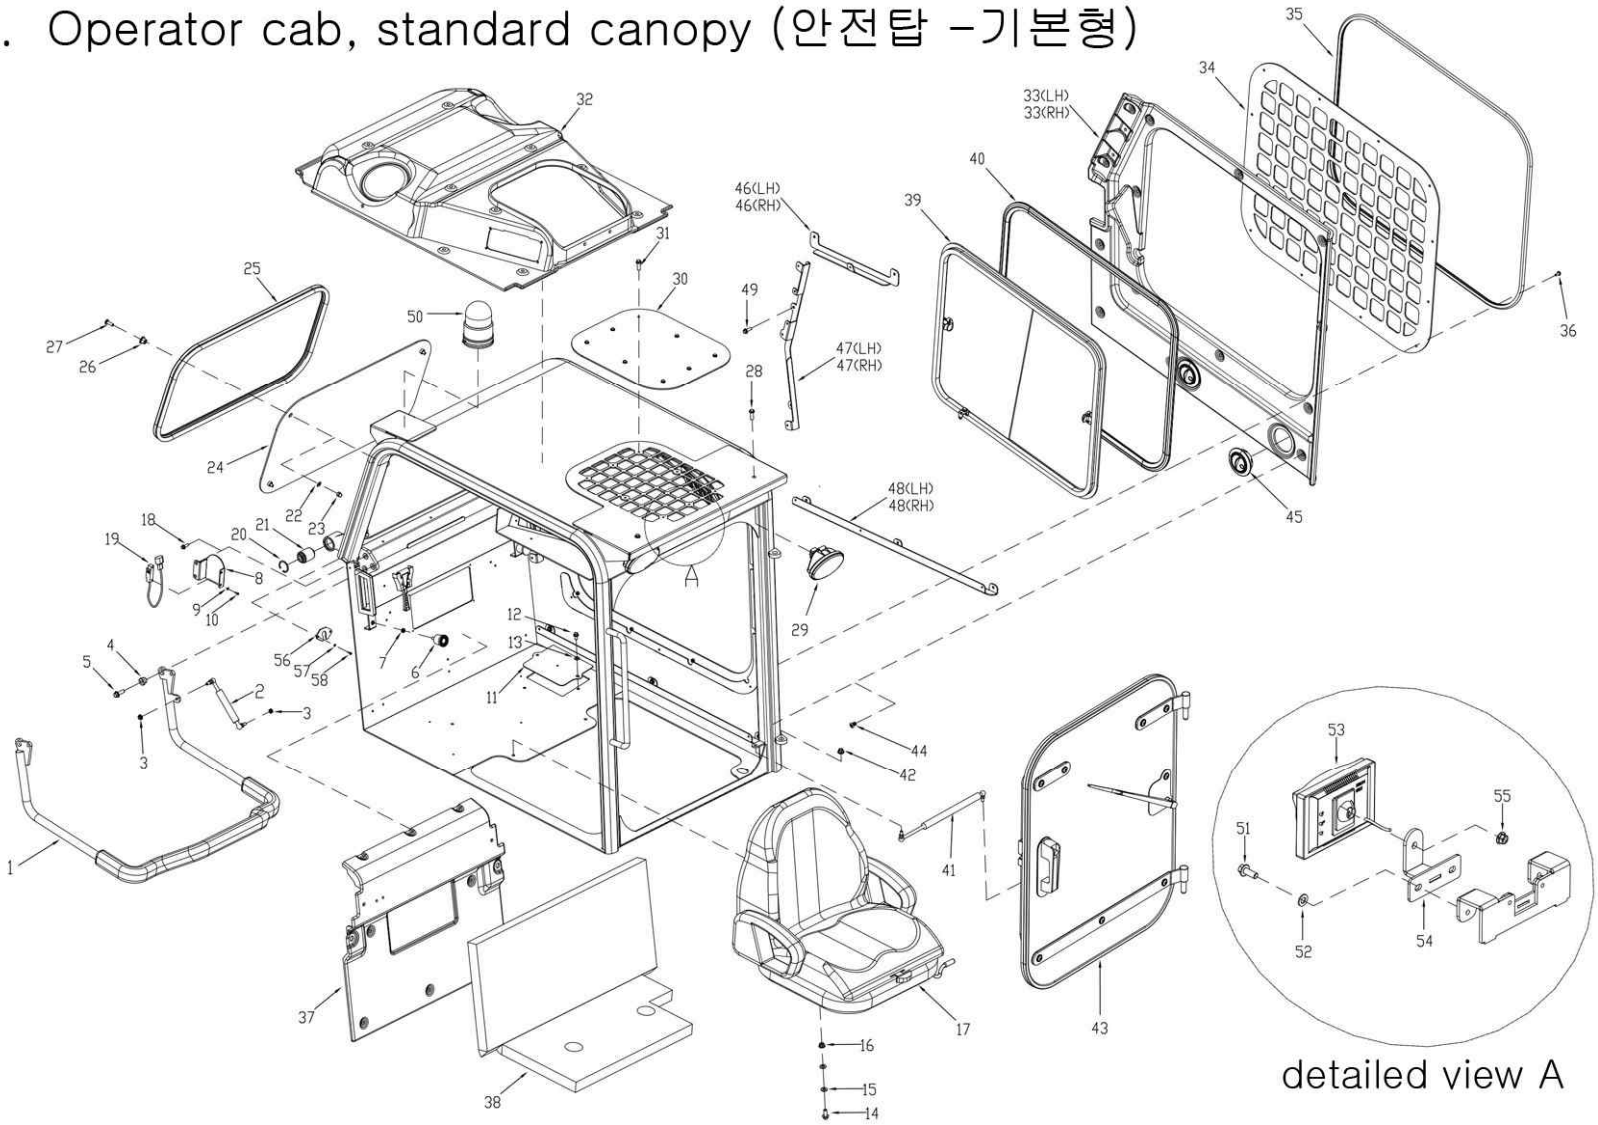

16. Operator cab, standard canopy (안전탑 -기본형)				
No.	Name	Part No.	Quantity	Remarks
1	Safety bar (안전바)	330T4-1301	1	
2	Gas-shock absorber (가스 쇼버)	330T4-1302	1	
3	Lock nut (락 너트)	330T4-1303	2	
4	Fixed bush (고정 부시)	330T4-1304	4	
5	Bolt (볼트)	330T4-1305	4	
6	Rubber mount for safety bar (안전바용 고무받침)	330T4-1306	2	
7	Nut (너트)	330T4-1307	2	
8	Safey bar cover LH,RH (안전바 커버-LH,RH)	330T4-1308	2	
9	Washer (와셔)	330T4-1309	4	
10	Bolt (볼트)	330T4-1310	4	
11	Fuse box cover (퓨즈박스 커버)	330T4-1311	1	
12	Bolt (볼트)	330T4-1312	2	
13	Washer (와셔)	330T4-1313	2	
14	Bolt (볼트)	330T4-1314	4	
15	Washer (와셔)	330T4-1315	8	
16	Nut (너트)	330T4-1316	4	
17	Seat (시트)	330T4-1317	1	
18	Bolt (볼트)	330T4-1318	4	
19	Proximity sensor (근접센서)	330T4-1319	1	
20	Snap ring (스냅링)	330T4-1320	4	
21	Rubber mount for operator cab (안전탑용 고무)	330T4-1321	2	
22	Washer (와셔)	330T4-1322	4	
23	Nut (너트)	330T4-1323	4	
24	Rear glass (뒤쪽 창)	330T4-1324	1	
25	Molding rubber (몰딩 고무)	330T4-1325	1	


16. Operator cab, standard canopy (안전탑 -기본형)

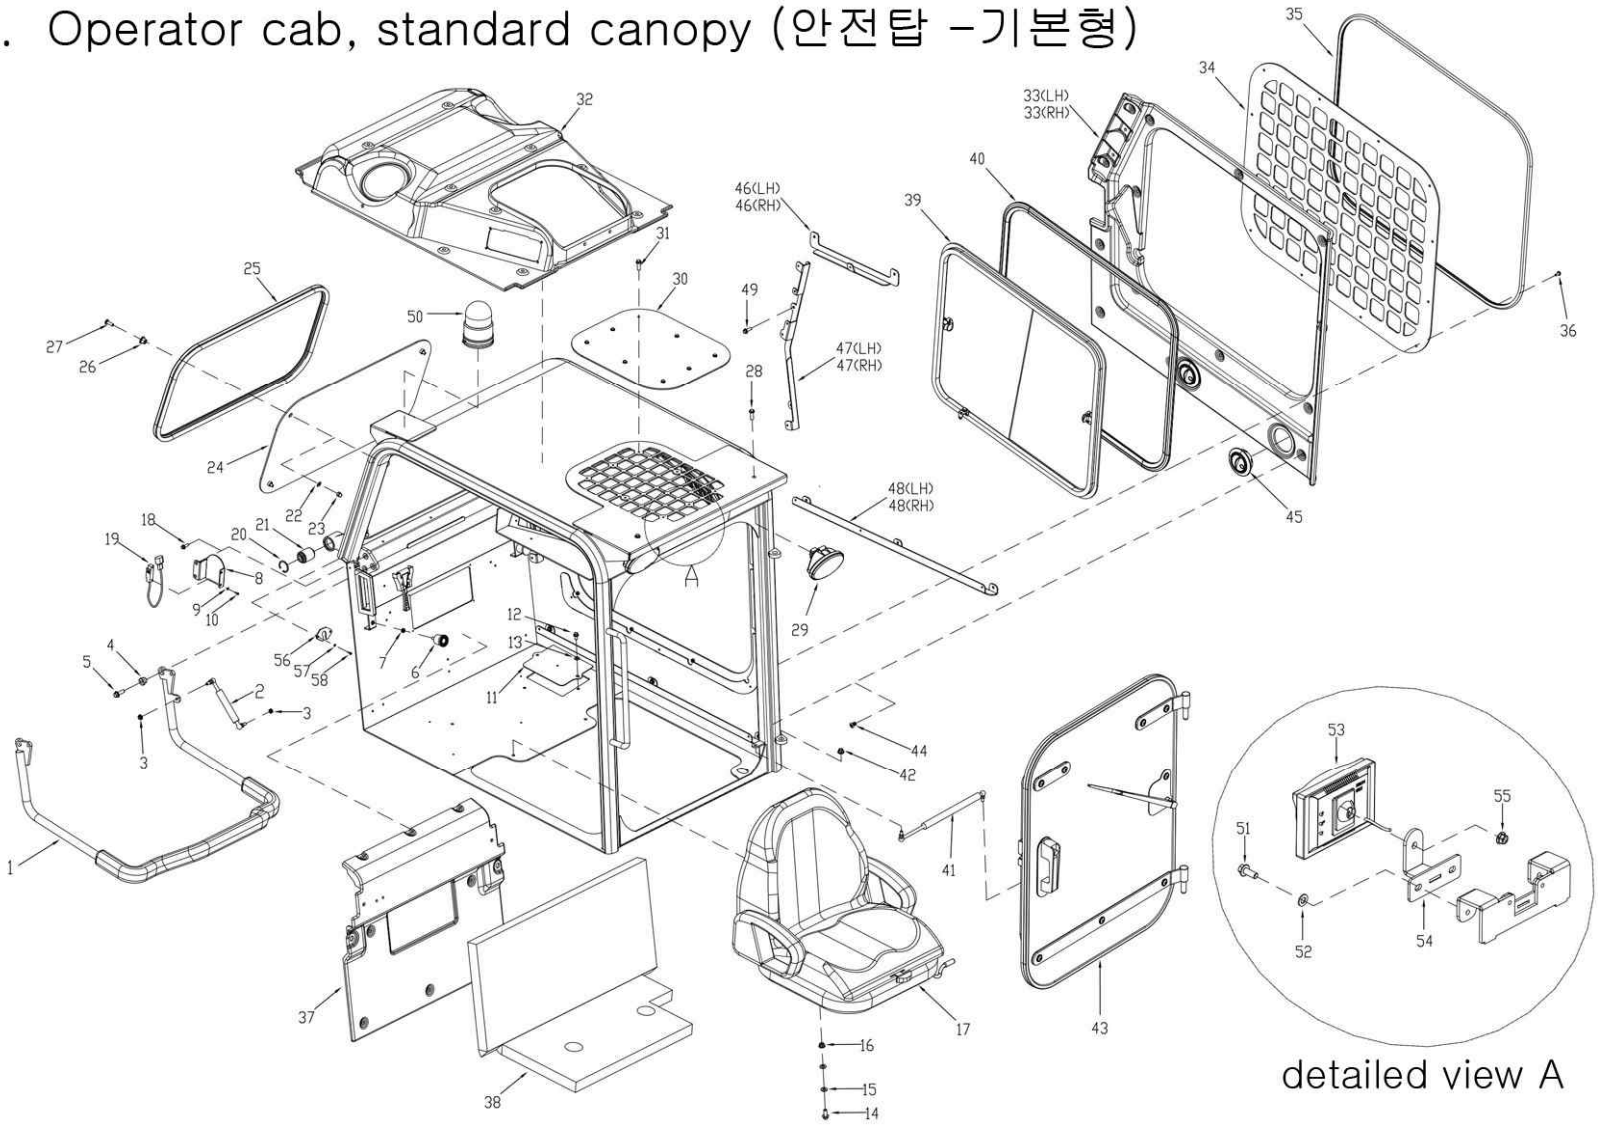

detailed view A

16. Operator cab, standard canopy (안전탑 -기본형) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	MC bushing (MC 부싱)	330T4-1326	4	
27	Bolt (볼트)	330T4-1327	4	
28	Bolt (볼트)	330T4-1328	2	
29	Light (라이트)	330T4-1329	2	
30	Upper glass (위쪽 창)	330T4-1330	1	
31	Bolt (볼트)	330T4-1331	8	
32	Upper interior material (위쪽 내장재)	330T4-1332	1	
33	Side interior material LH / RH (왼쪽 내장재 LH / RH)	330T4-1333	2	
34	Safeguard Net (보호망)	330T4-1334	2	
35	Side Molding rubber (측면몰딩 고무)	330T4-1335	2	
36	Bolt (볼트)	330T4-1336	24	
37	Rear interior material (뒤쪽 내장재)	330T4-1337	1	
38	Soundproof plate (방음판)	330T4-1338	1	
39	Bolt for interior material (내장재 고정볼트)	330T4-1339	55	
40	Bracket for interior material i (내장재 브라켓 I)	330T4-1340	2	
41	Bracket for interior material II (내장재 브라켓 II)	330T4-1341	2	
42	Bracket for interior material III (내장재 브라켓 III)	330T4-1342	2	
43	Bolt (볼트)	330T4-1343	14	
44	Rear aux. cover (뒷판 보조커버)	330T4-1344	1	
45	Rear cover (뒷판 커버)	330T4-1345	1	
46	Bolt (볼트)	330T4-1346	8	
47	Rotating beacon (OPT.) (경광등(옵션))	330T4-1347	1	
48	Rear camera LCD (후방카메라용 LCD)	330T4-1348	1	
49	Bolt (볼트)	330T4-1349	2	
50	Spring washer (스프링 와셔)	330T4-1350	2	


16. Operator cab, standard canopy (안전탑 -기본형)

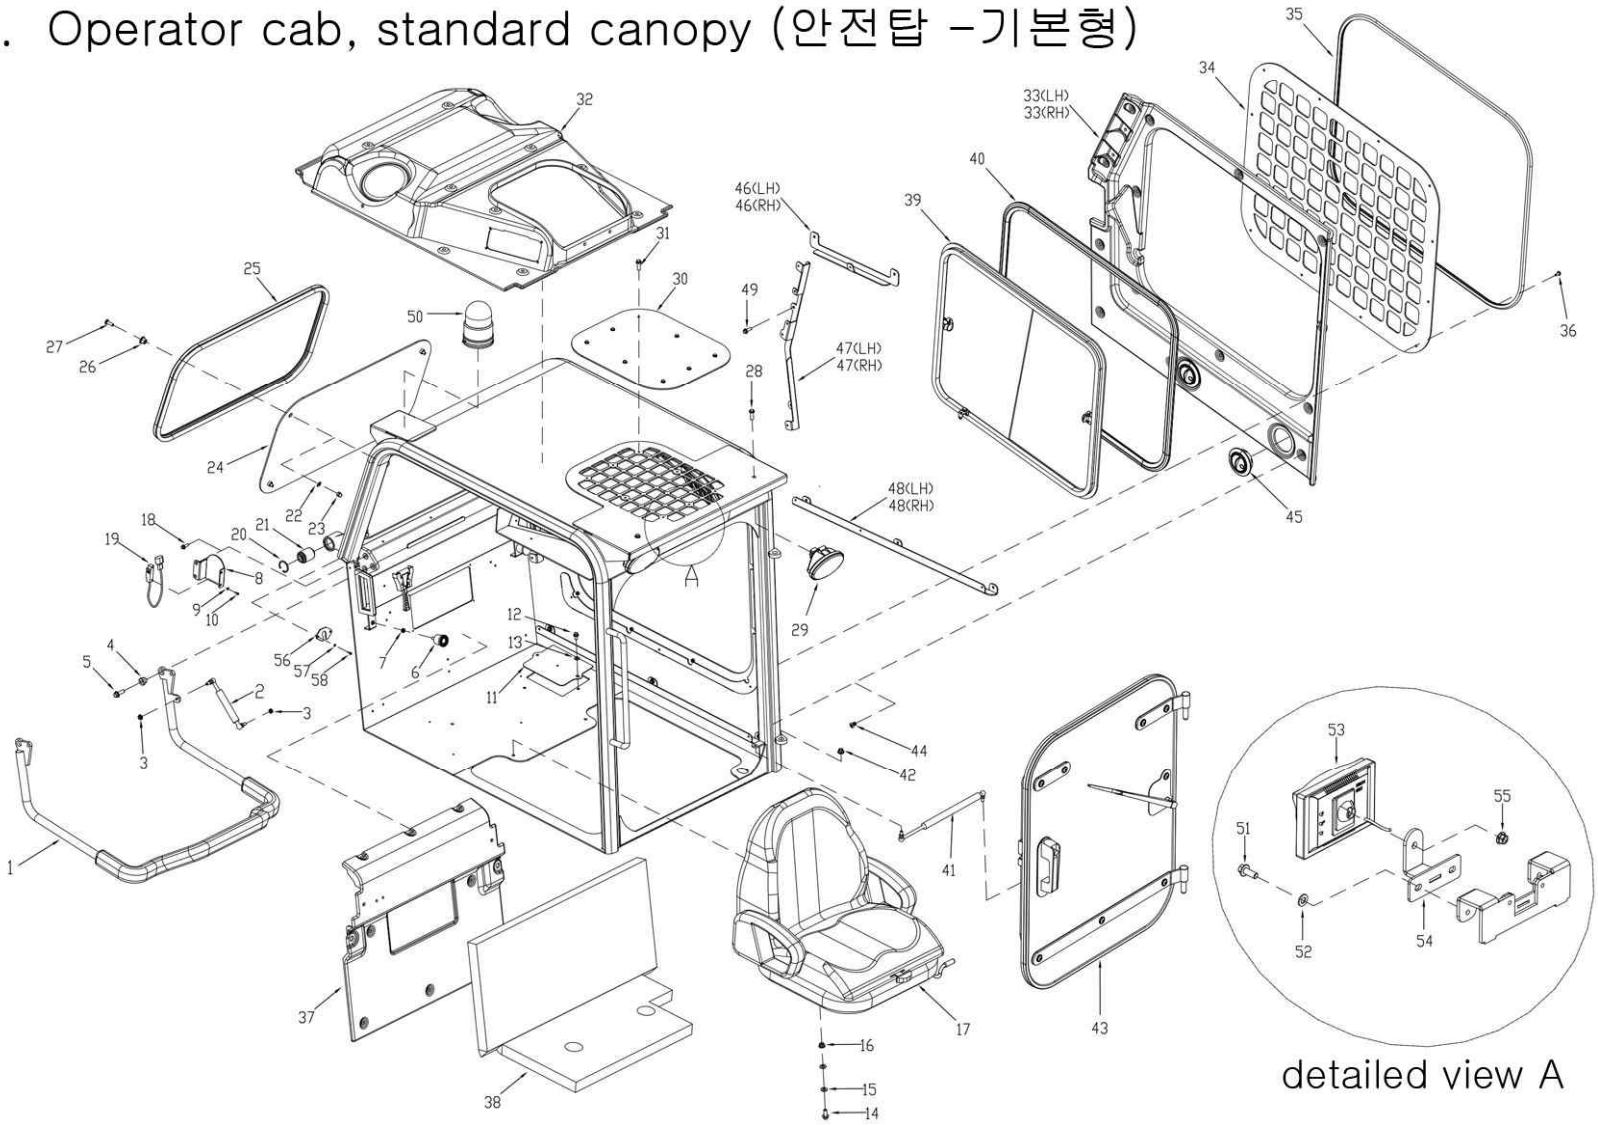

detailed view A


16. Operator cab, standard canopy (안전탑 -기본형) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
51	Fixing bracket for LCD (LCD 고정 브라켓)	330T4-1351	1	
52	Nut (너트)	330T4-1352	1	
53	Rubber gascket (고무 가스켓)	330T4-1353	1	
54	Washer (와셔)	330T4-1354	1	
55	Bolt (볼트)	330T4-1355	1	

17. Operator cab, Cabin enclosure (안전탑 캐빈형)

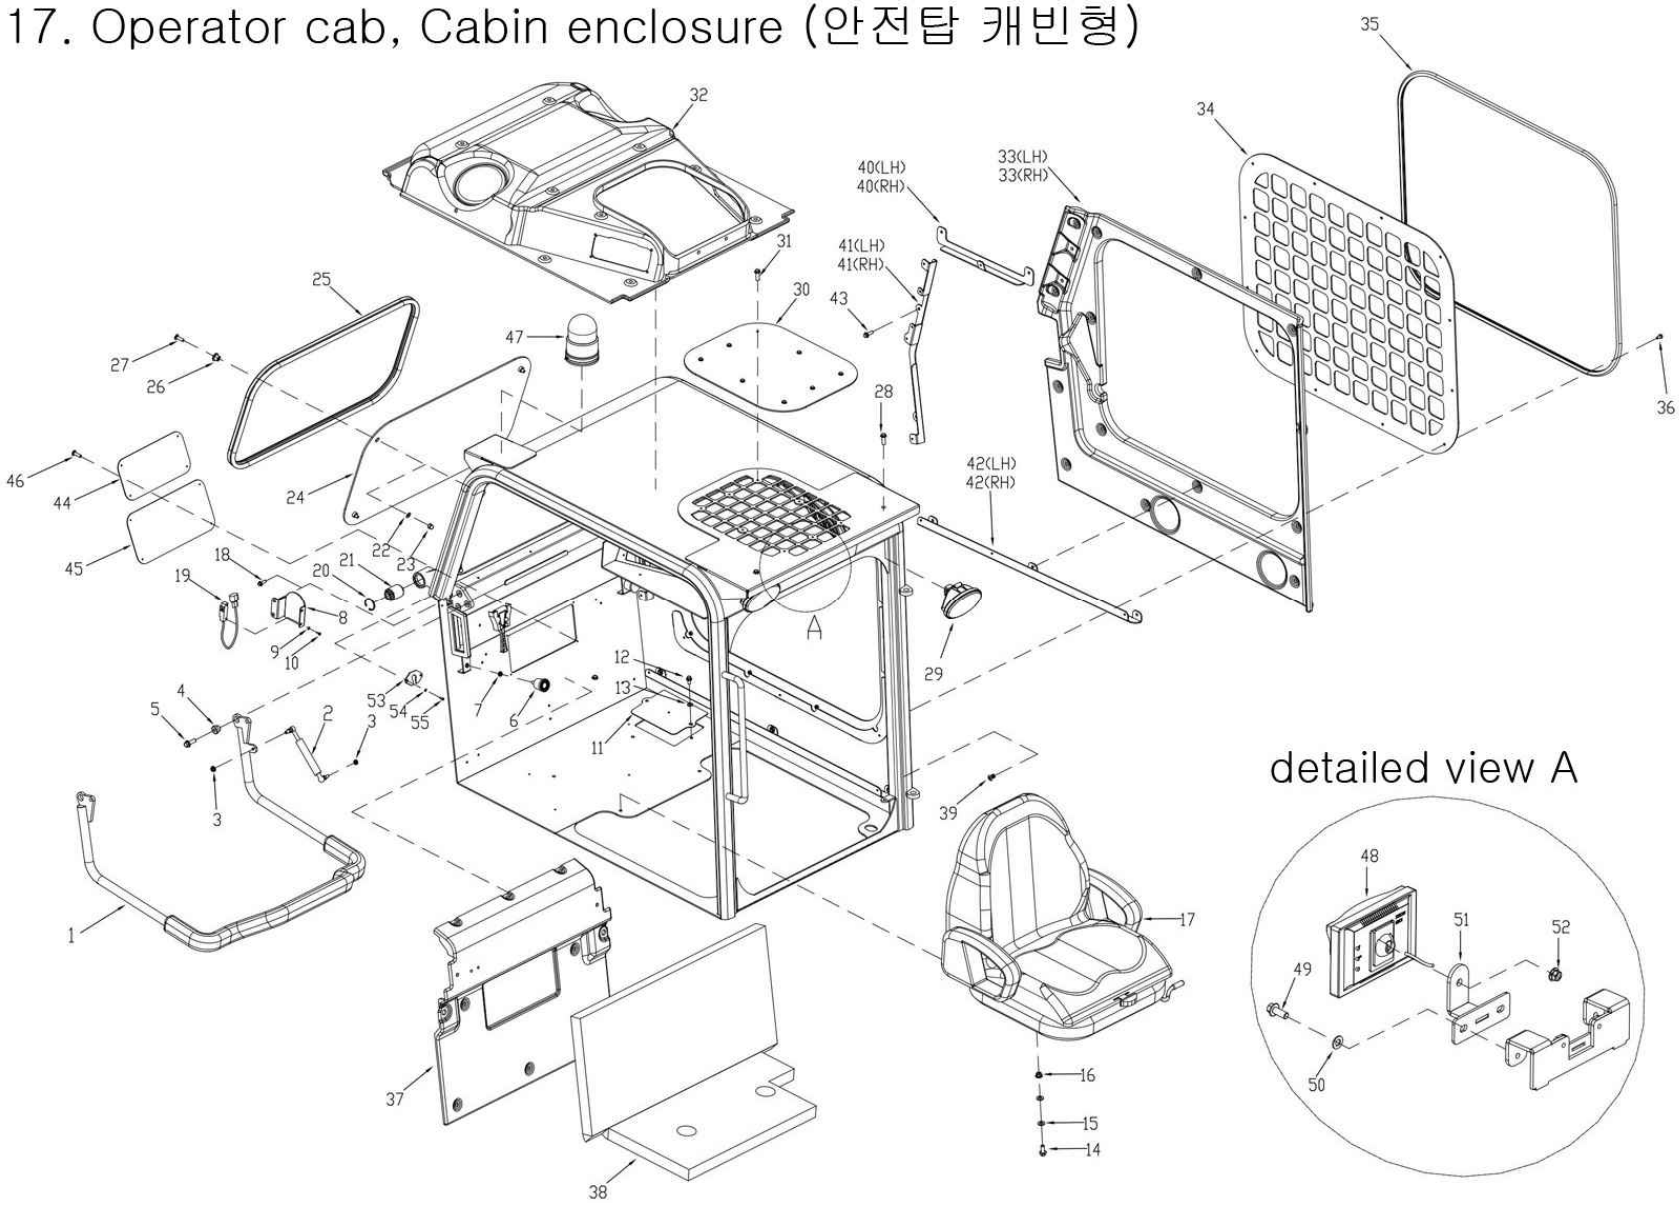


17. Operator cab, Cabin enclosure (안전탑 캐빈형)				
No.	Name	Part No.	Quantity	Remarks
1	Safety bar (안전바)	330T4-1301	1	
2	Gas-shock absorber (가스 쇼버)	330T4-1302	1	
3	Lock nut (락 너트)	330T4-1303	2	
4	Fixed bush (고정 부시)	330T4-1304	4	
5	Bolt (볼트)	330T4-1305	4	
6	Rubber support for safety bar (안전바용 고무받침)	330T4-1306	2	
7	Nut (너트)	330T4-1307	2	
8	Safey bar cover LH,RH (안전바 커버-LH,RH)	330T4-1308	2	
9	Washer (와셔)	330T4-1309	4	
10	Bolt (볼트)	330T4-1310	4	
11	Fuse box cover (퓨즈박스 커버)	330T4-1311	1	
12	Bolt (볼트)	330T4-1312	2	
13	Washer (와셔)	330T4-1313	2	
14	Bolt (볼트)	330T4-1314	4	
15	Washer (와셔)	330T4-1315	8	
16	Nut (너트)	330T4-1316	4	
17	Seat (시트)	330T4-1317	1	
18	Bolt (볼트)	330T4-1318	4	
19	Proximity sensor (근접센서)	330T4-1319	1	
20	Snap ring (스냅링)	330T4-1320	4	
21	Rubber operator cab (안전탑용 고무)	330T4-1321	2	
22	Washer (와셔)	330T4-1322	4	
23	Nut (너트)	330T4-1323	4	
24	Rear glass (뒤쪽 창)	330T4-1324	1	
25	Molding rubber (몰딩 고무)	330T4-1325	1	

17. Operator cab, Cabin enclosure (안전탑 캐빈형)

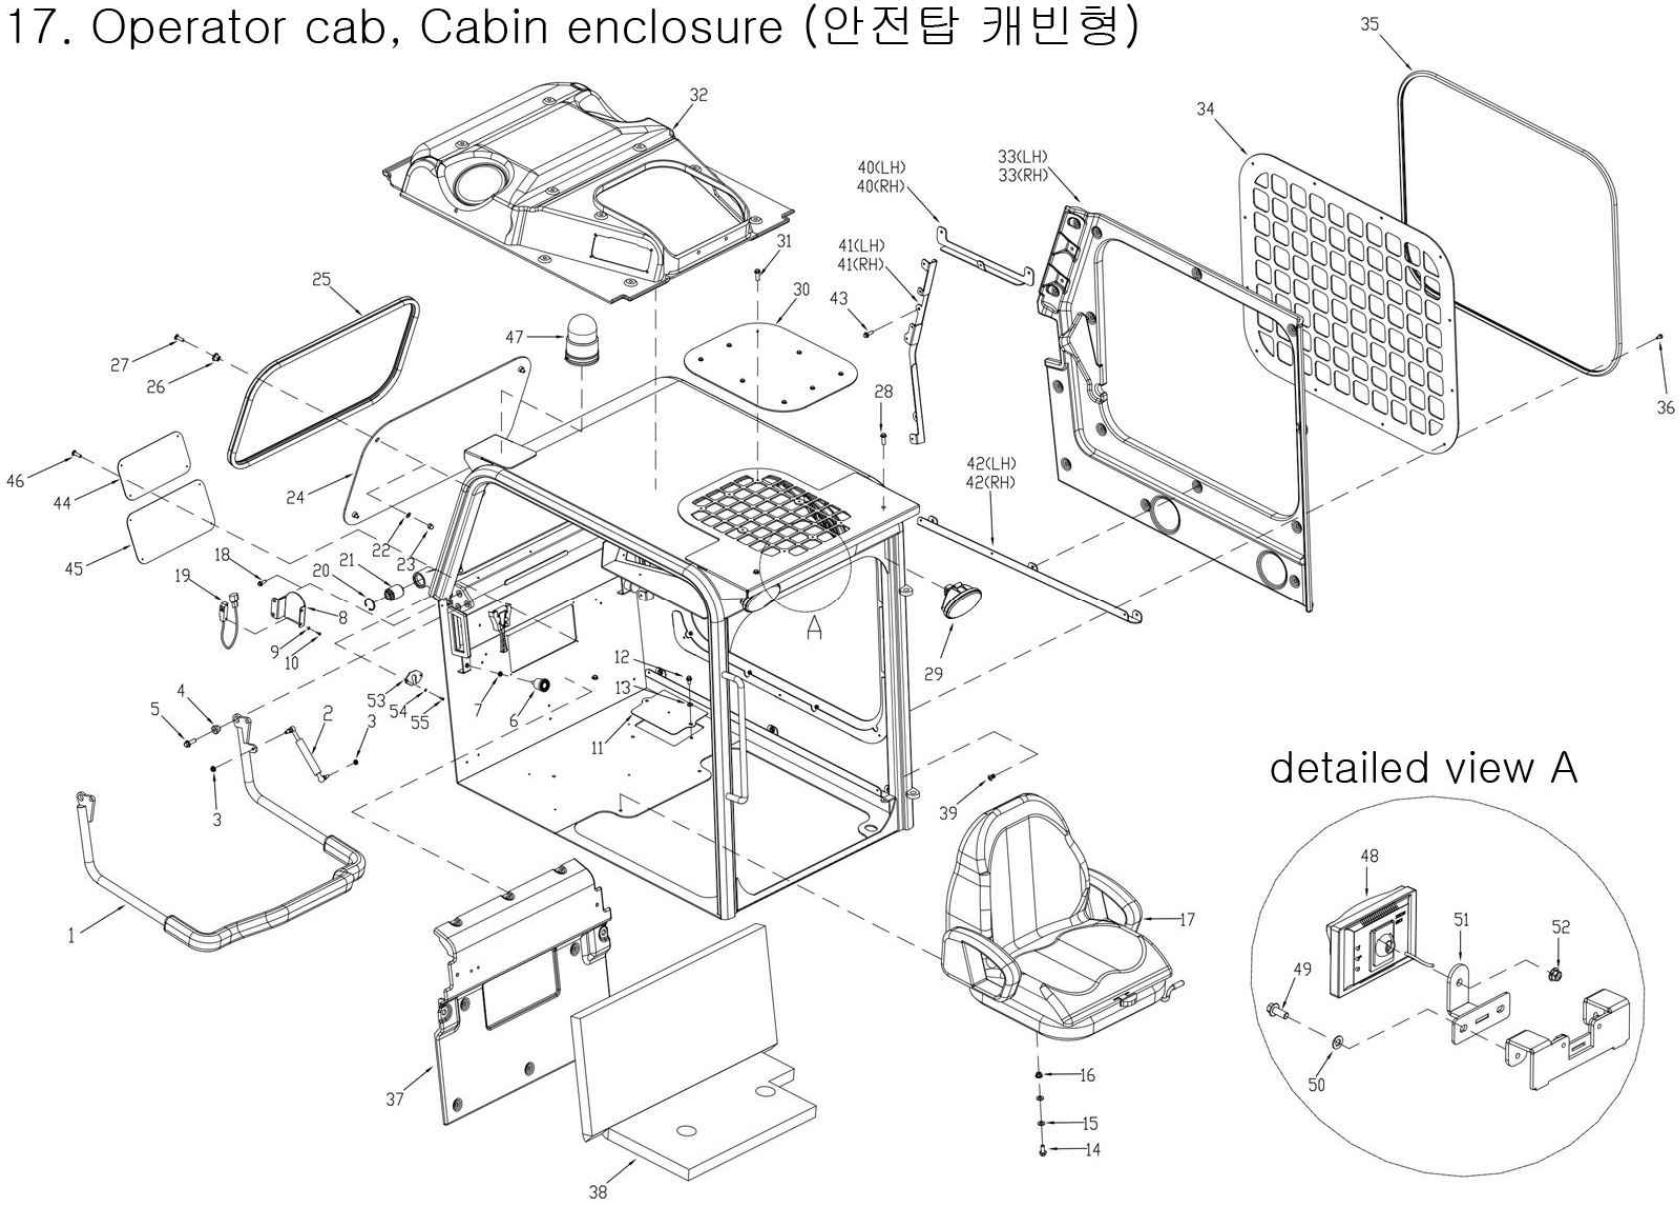

17. Operator cab, Cabin enclosure (안전탑 캐빈형) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	MC bushing (MC 부싱)	330T4-1326	4	
27	Bolt (볼트)	330T4-1327	4	
28	Bolt (볼트)	330T4-1328	2	
29	Light (라이트)	330T4-1329	2	
30	Upper glass (위쪽 창)	330T4-1330	1	
31	Bolt (볼트)	330T4-1331	8	
32	Upper interior material (위쪽 내장재)	330T4-1332	1	
33	Side interior material LH / RH (왼쪽 내장재 LH / RH)	330T4-1333	2	
34	Safeguard Net (보호망)	330T4-1334	2	
35	Side Molding rubber (측면몰딩 고무)	330T4-1335	2	
36	Bolt (볼트)	330T4-1336	24	
37	Rear interior material (뒤쪽 내장재)	330T4-1337	1	
38	Soundproof plate (방음판)	330T4-1338	1	
39	Side window assy LH, RH (왼쪽, 오른쪽 옆 창문 조합)	330T4-1356	2	
40	Molding rubber (몰딩 고무)	330T4-1357	2	
41	Gas-shock absorber (가스 쇼버)	330T4-1358	1	
42	Bolt (볼트)	330T4-1359	2	
43	Front door assy (앞문 조합)	330T4-1360	1	
44	Bolt for interior material (내장재 고정볼트)	330T4-1361	55	
45	Nozzle (노즐-에어컨)	330T4-1362	8	
46	Bracket for interior material i (내장재 브라켓 I)	330T4-1363	2	
47	Bracket for interior material Ⅱ (내장재 브라켓 II)	330T4-1364	2	
48	Bracket for interior material Ⅲ (내장재 브라켓 III)	330T4-1365	2	
49	Bolt (볼트)	330T4-1366	14	
50	Rotating beacon (OPT.) (경광등(옵션))	330T4-1347	1	


17. Operator cab, Cabin enclosure (안전탑 캐빈형)

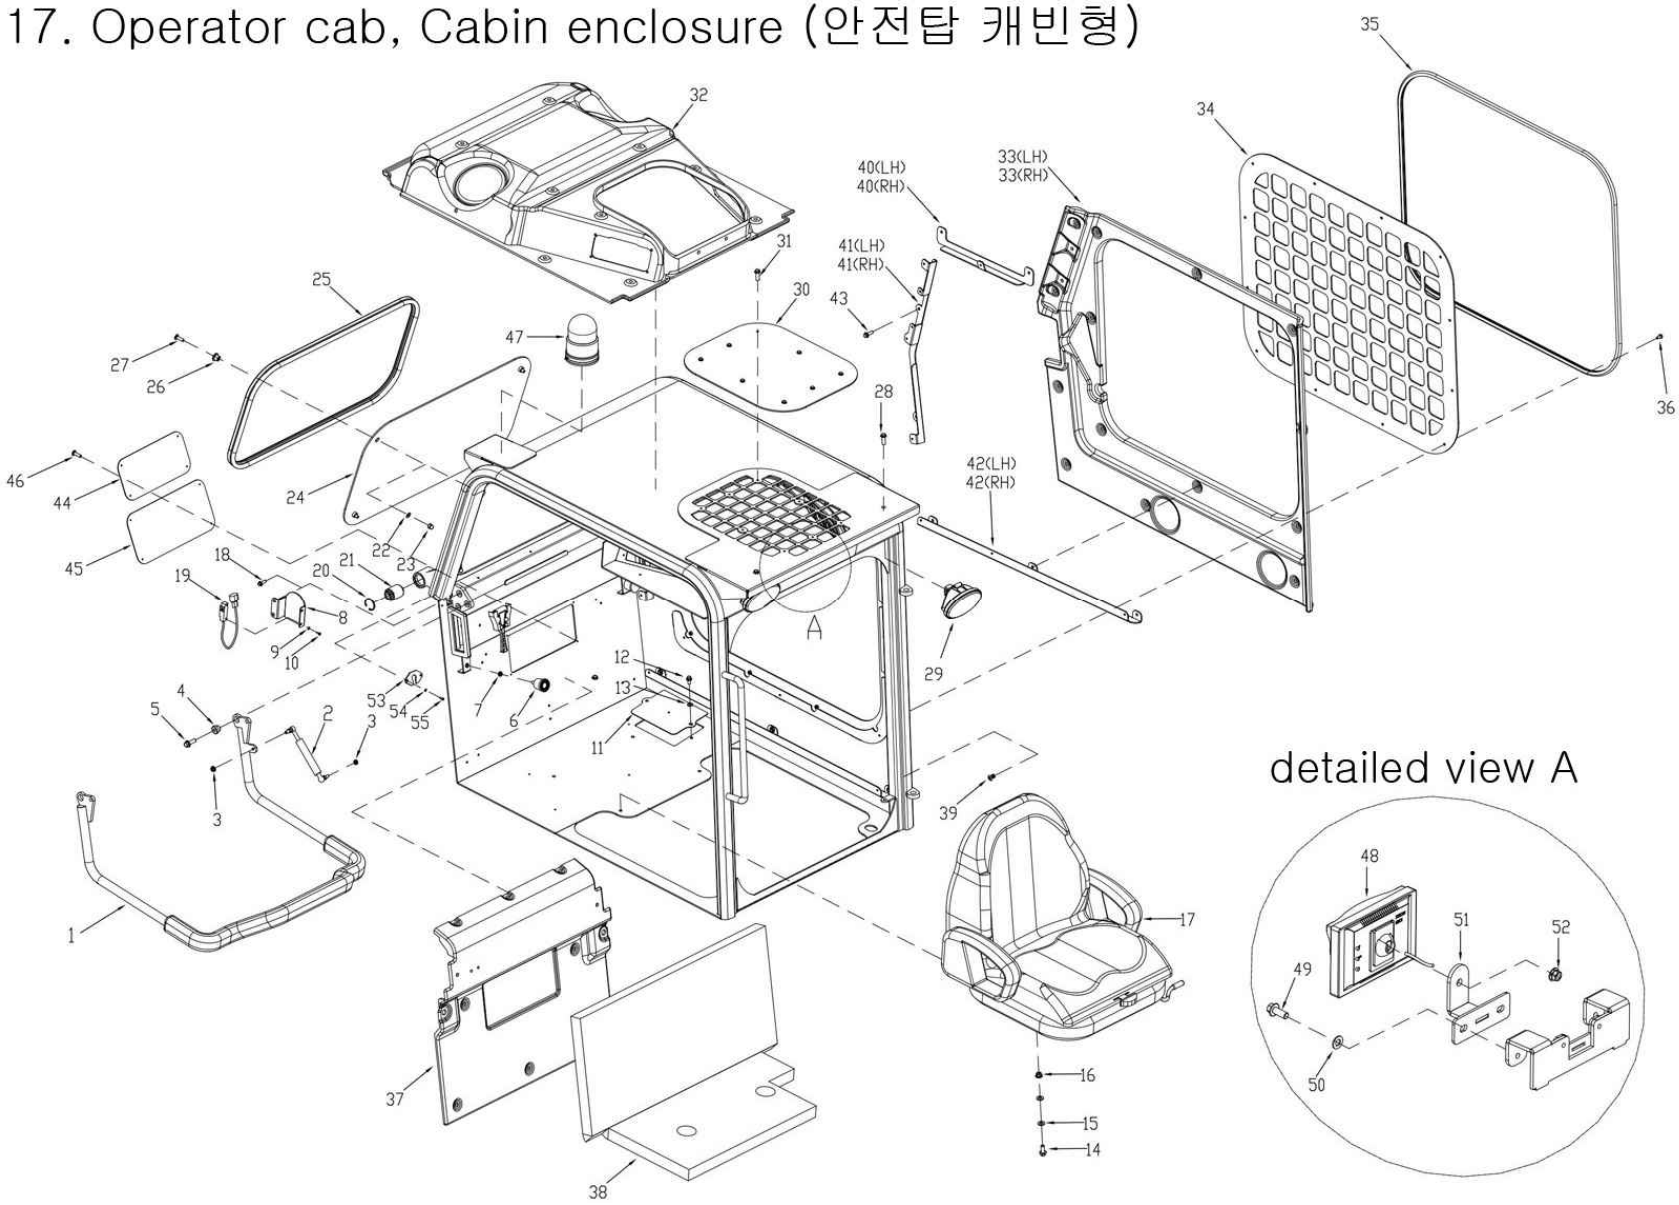

detailed view A


17. Operator cab, Cabin enclosure (안전탑 캐빈형) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
51	Bolt (볼트)	330T4-1347-1	2	
52	Spring washer (스프링 와셔)	330T4-1347-2	2	
53	Fixing bracket Ⅰ for LCD (LCD 고정 브라켓 Ⅰ)	330T4-1351	1	
54	Fixing bracket Ⅱ for LCD (LCD 고정 브라켓 Ⅱ)	330T4-1351-1	1	
55	Nut (너트)	330T4-1352	1	
56	Rubber gascket (고무 가스켓)	330T4-1353	1	
57	Washer (와셔)	330T4-1354	1	
58	Bolt (볼트)	330T4-1355	1	

18. Front door assy (안전탑 앞문)

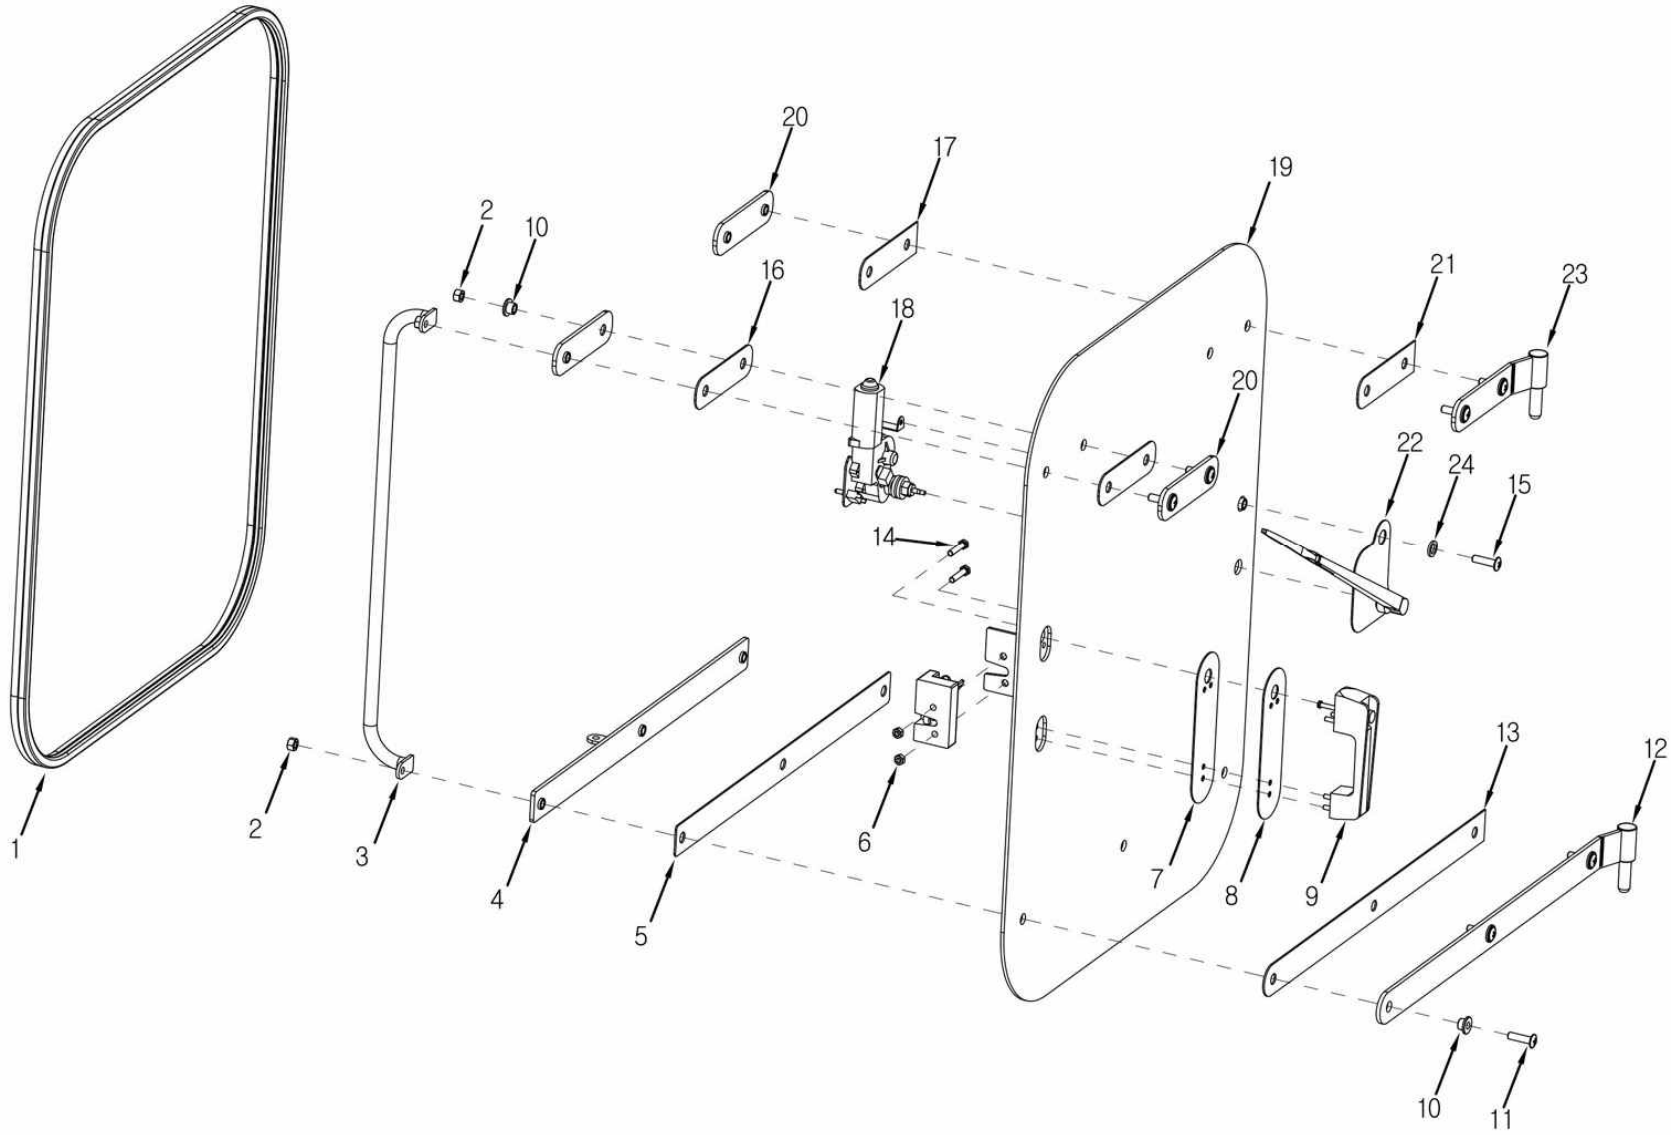


18. Front door assy (안전탑 앞문)				
No.	Name	Part No.	Quantity	Remarks
1	Molding rubber for glass (앞문유리용 몰딩 고무)	330T4-1501	1	
2	Bolt (볼트)	330T4-1502	7	
3	Knob (손잡이)	330T4-1503	1	
4	Lower glass support (바닥 유리 지지대)	330T4-1504	1	
5	Gasket (가스켓)	330T4-1505	1	
6	Nut (너트)	330T4-1506	2	
7	Gasket (가스켓)	330T4-1507	1	
8	Knob assy Support (손잡이 조합 지지대)	330T4-1508	1	
9	Knob assy (손잡이 조합)	330T4-1509	1	
10	MC Bushing (MC 부싱)	330T4-1510	14	
11	Bolt (볼트)	330T4-1511	7	
12	Lower hinge plate (바닥 경첩 판)	330T4-1512	1	
13	Gasket (가스켓)	330T4-1513	1	
14	Bolt (볼트)	330T4-1514	2	
15	Bolt (볼트)	330T4-1515	1	
16	Gasket (가스켓)	330T4-1516	1	
17	Gasket (가스켓)	330T4-1517	1	
18	Windshield wiper motor assy (와이퍼 모터 조합)	330T4-1518	1	
19	Glass (유리)	330T4-1519	1	
20	Upper glass support (위쪽 유리 지지대-정면)	330T4-1520	3	
21	Gasket (가스켓)	330T4-1521	1	
22	Windshield wiper assy (와이퍼 조합)	330T4-1522	1	
23	Upper hinge plate (윗쪽 경첩 판)	330T4-1523	1	
24	Washer (와셔)	330T4-1524	1	

19. Operator cab and track (안전탑 및 트랙)

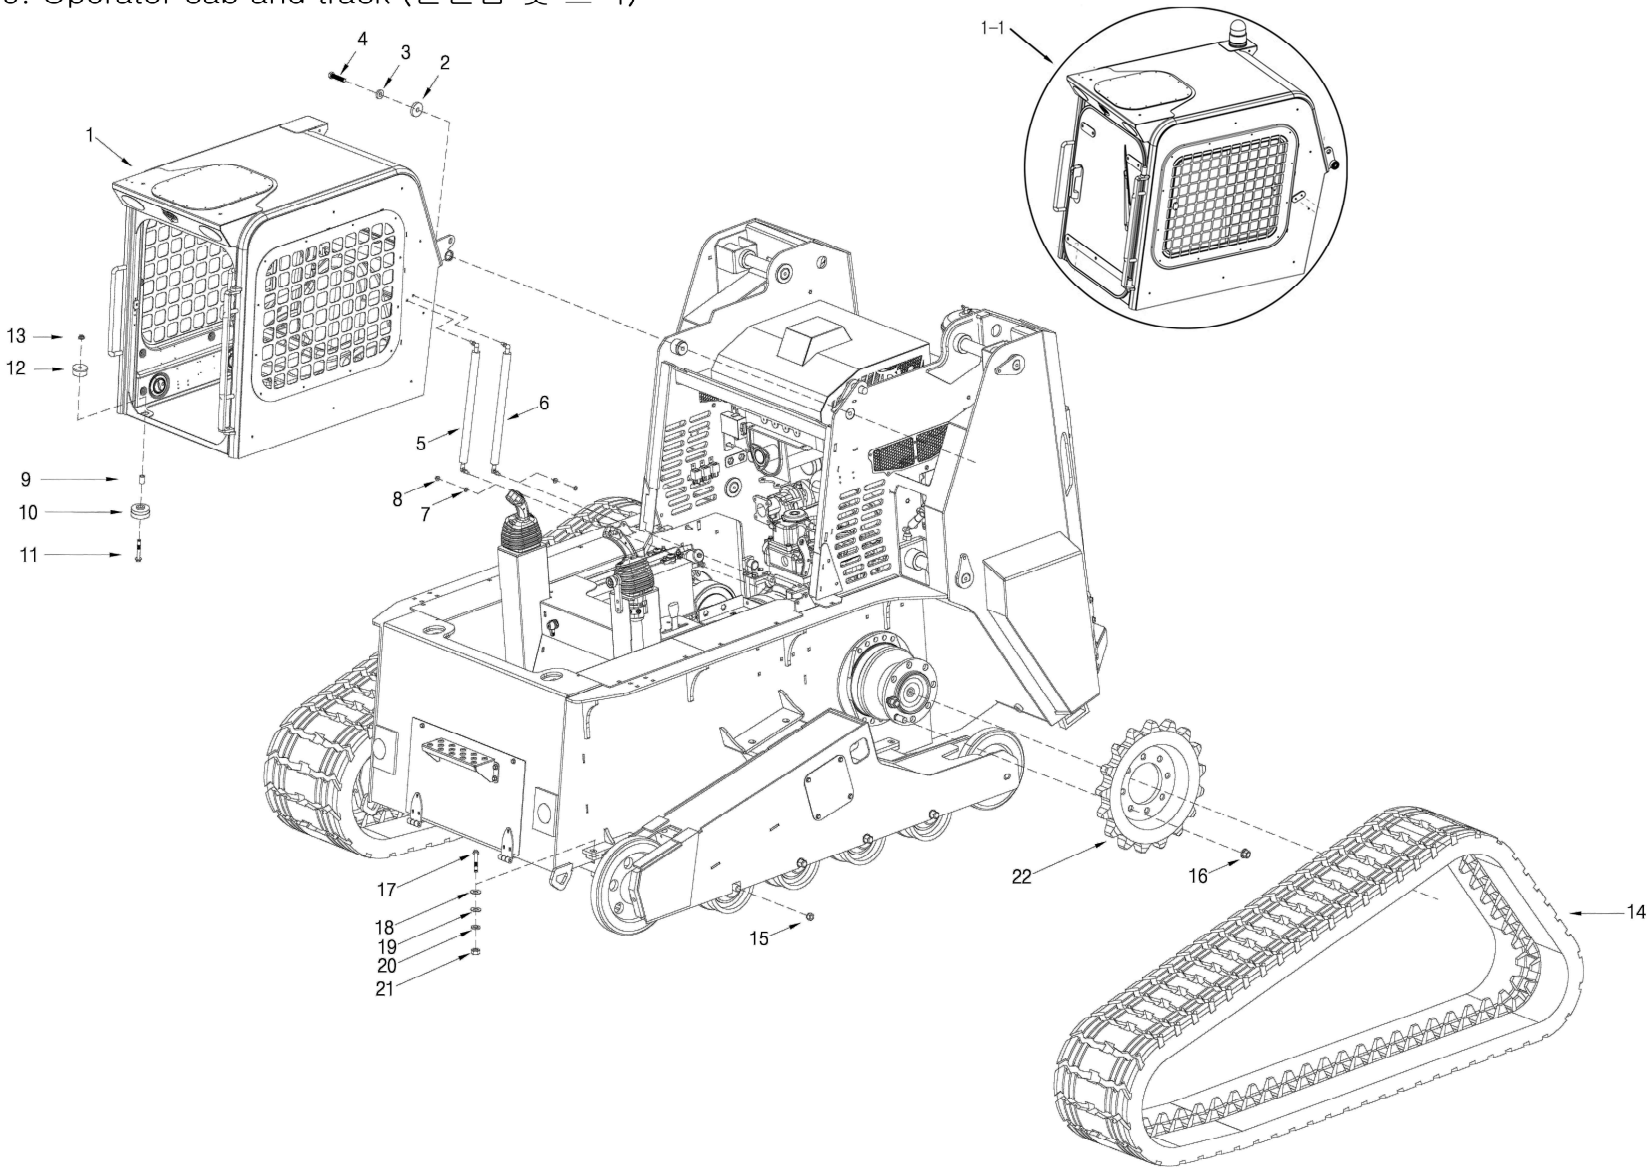


19. Operator cab and track (안전탑 및 트랙)				
No.	Name	Part No.	Quantity	Remarks
1	Operator cab ass'y (안전탑 조합), canopy	330T4-1601	1	
1-1	Operator cab ass'y (안전탑 조합), cabin enclosure	330T4-1601-1	1	
2	Fixing washer for operator cab (안전탑 고정 와셔)	330T4-1602	2	
3	Plain washer (평와셔)	330T4-1603	2	
4	Bolt (볼트)	330T4-1604	2	
5	Gas-shock absorber (가스 쇼버)	330T4-1605	2	
6	Gas-shock absorber (가스 쇼버)	330T4-1606	2	
7	Spring Washer (스프링 와셔)	330T4-1607	4	
8	Nut (너트)	330T4-1608	4	
9	Spacer (간격통)	330T4-1609	2	
10	Rubber (고무)	330T4-1610	2	
11	Bolt (볼트)	330T4-1611	2	
12	Vibroisolating rubber (방진 고무)	330T4-1612	2	
13	Nut (너트)	330T4-1613	2	
14	Track (트랙)	T400T4-1914	2	
15	Wheel nut (휠 너트)	T400T4-1915	16	
16	Wheel nut (휠 너트)	T400T4-1916	16	
17	Bolt (볼트)	T400T4-1917	8	
18	Washer (와셔)	T400T4-1918	8	
19	Washer (와셔)	T400T4-1919	8	
20	Spring washer (스프링 와셔)	T400T4-1920	8	
21	Nut (너트)	T400T4-1921	8	
22	Sprocket (스프라켓)	T400T4-1922	2	

20. Steering handle, Joystick controls (조향 장치, 조이스틱)

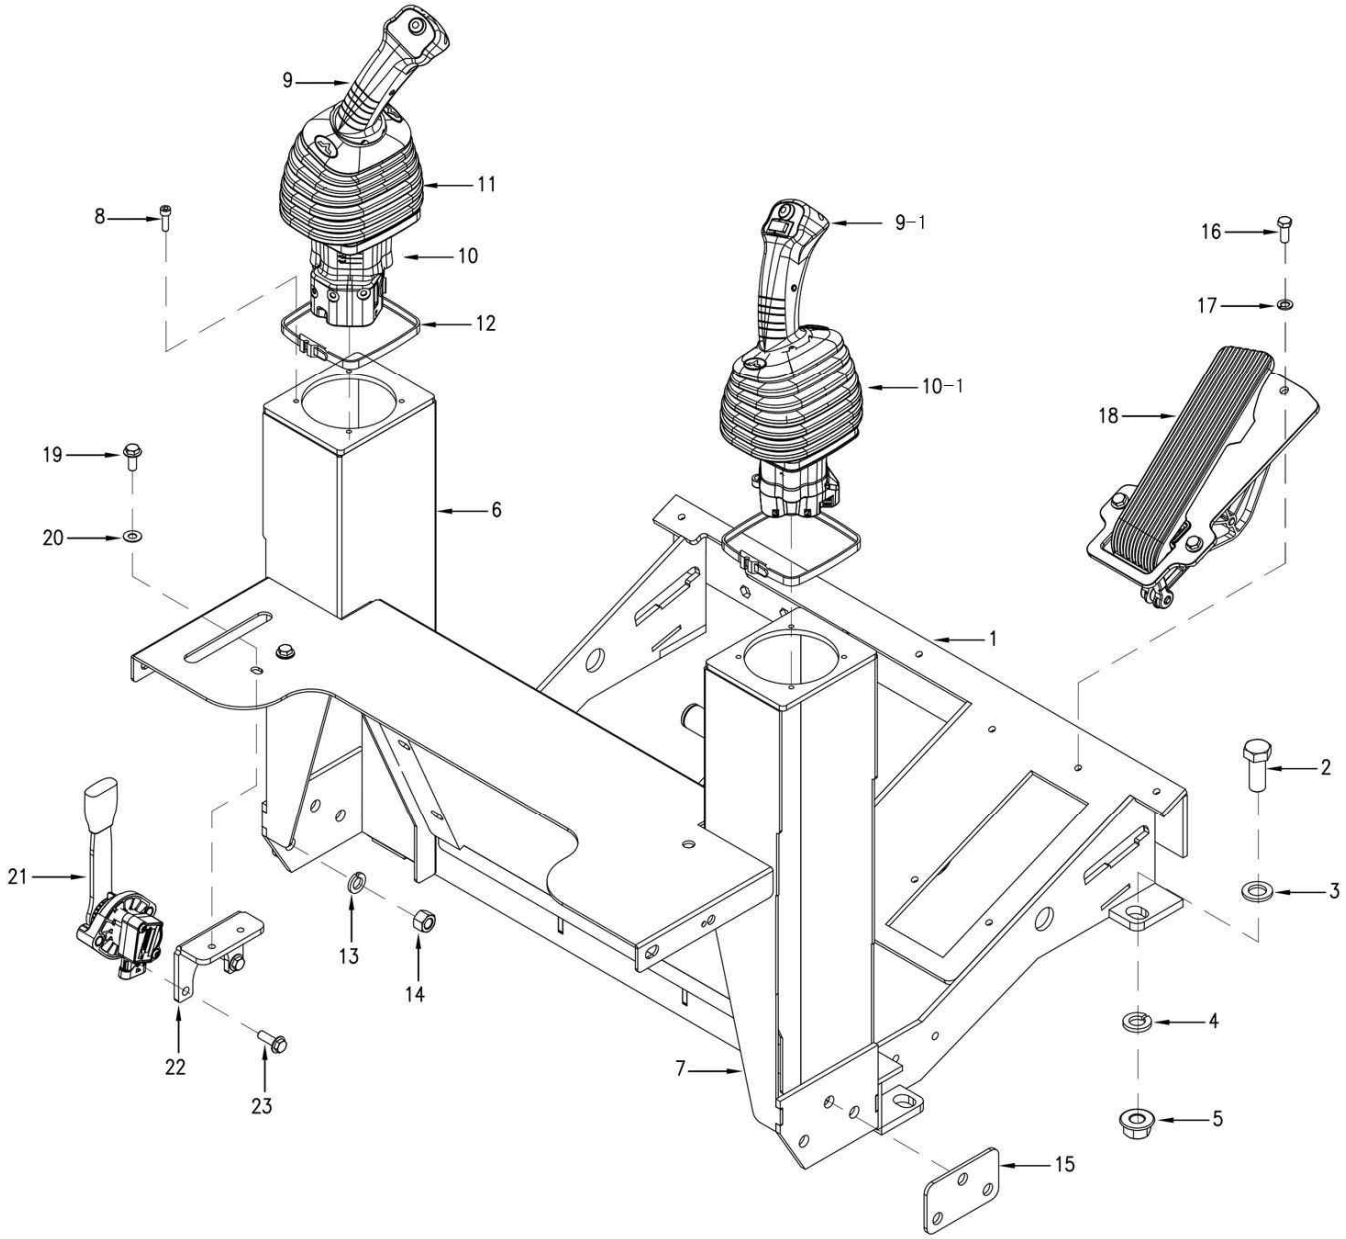


20. Steering handle, Joystick controls (조향 장치, 조이스틱)				
No.	Name	Part No.	Quantity	Remarks
1	Body, Steering lever (조향장치 본체)	330T4-1701	1	
2	Bolt (볼트)	330T4-1702	4	
3	Washer (와셔)	330T4-1703	4	
4	Spring washer (스프링 와셔)	330T4-1704	4	
5	Nut (너트)	330T4-1705	4	
6	Column LH, steering lever (조향장치 좌측 핸들 본체)	330T4-1706	1	
7	Column RH, steering lever (조향장치 우측 핸들 본체)	330T4-1707	1	
8	Bolt (볼트)	330T4-1708	8	
9	Joystick lever LH (조향장치좌측 핸들)	330T4-1709	1	
9-1	Joystick lever RH (조향장치우측 핸들)	330T4-1709-1	1	
10	Block for handle LH (핸들 블록)	330T4-1710	1	
10-1	Block for handle RH (핸들 블록)	330T4-1710-1	1	
11	Protective cover for steering handle (조향핸들용 보호 커버)	330T4-1711	2	
12	Band (밴드)	330T4-1712	2	
13	Washer (와셔)	330T4-1713	6	
14	Nut (너트)	330T4-1714	6	
15	Spacing plate (간격판)	330T4-1715	2	
16	Bolt (볼트)	330T4-1716	3	
17	Spring washer (스프링 와셔)	330T4-1717	3	
18	Accelerator pedal assy (조속페달조합, 풋타입)	330T4-1718	1	
19	Bolt (볼트)	330T4-1719	2	
20	Spring washer (스프링 와셔)	330T4-1720	1	
21	Accelerator assy (조속페달조합, 핸드타입)	330T4-1721	1	
22	Fixed bracket, hand acceleator lever (핸드 조속레바 고정브라켓)	330T4-1722	1	
23	Bolt (볼트)	330T4-1723	2	

21. Cable line, Kubota (케이블 라인, 구보다)

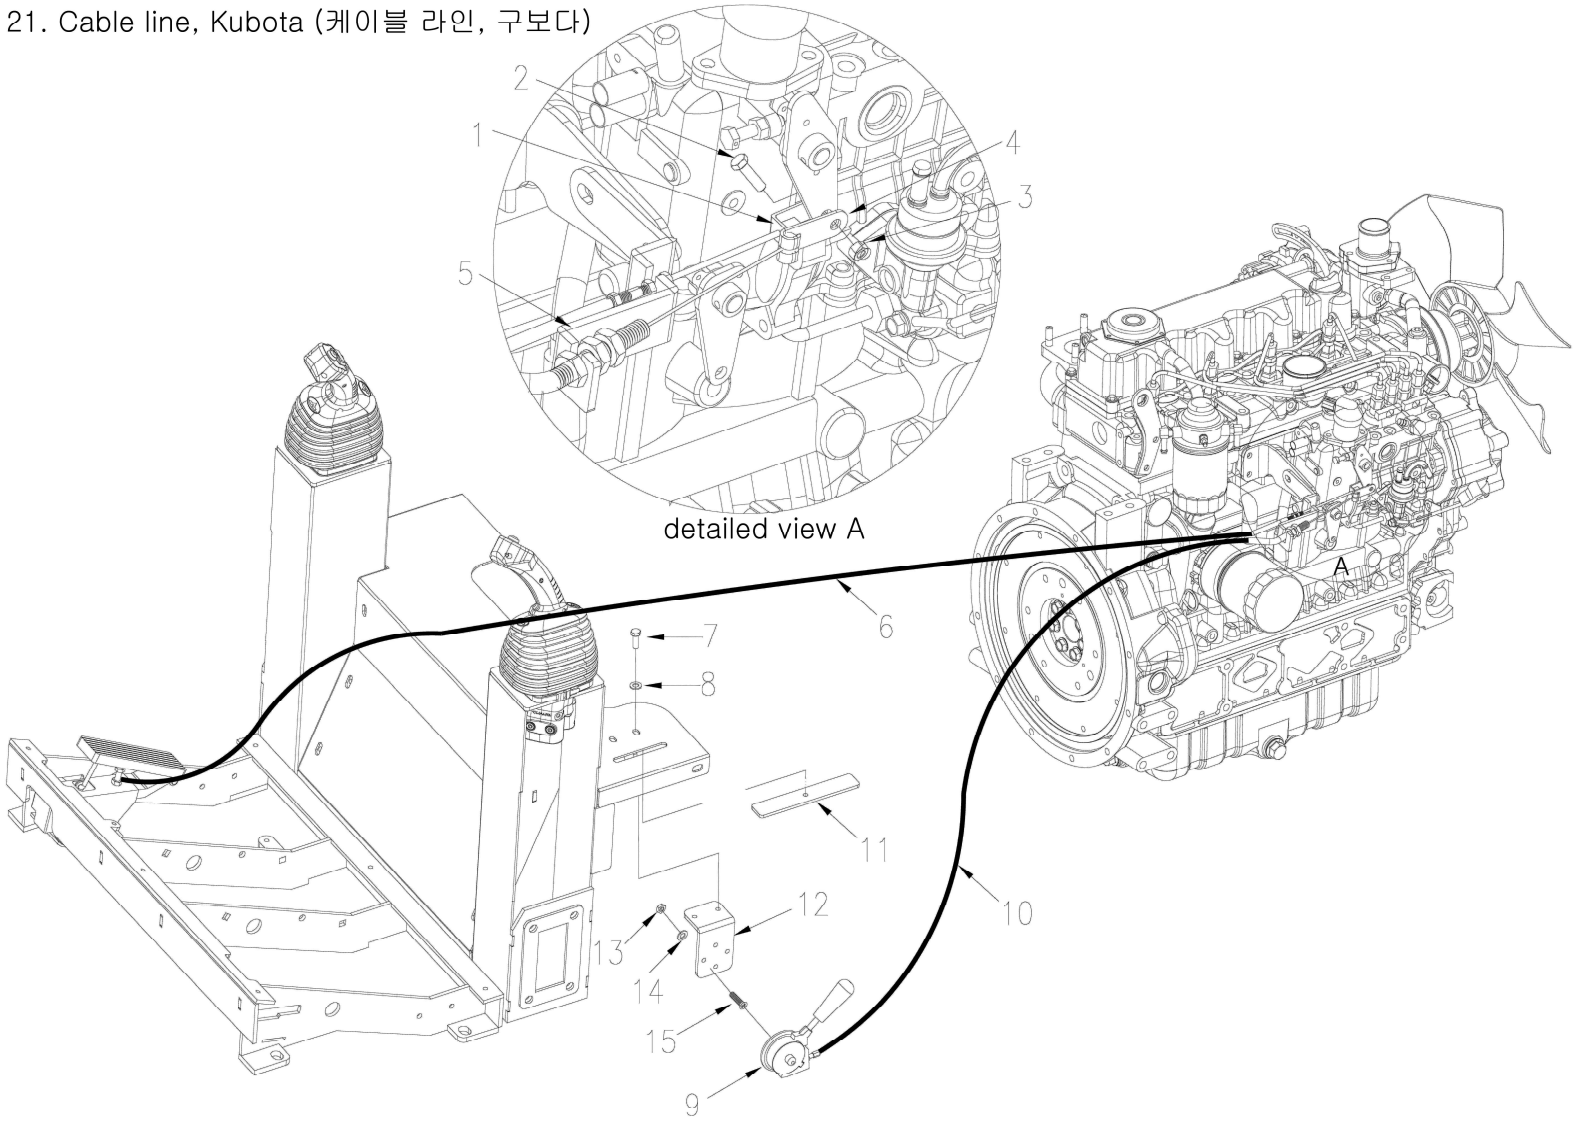


21-1. Cable line, Kubota (케이블 라인, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Accelerator cable assy (조속 케이블 조합)	T400-2101	1	
2	Bolt (볼트)	T400-2102	1	
3	Nut (너트)	T400-2103	1	
4	Bracket fo	T400-2104	1	
5	Bracket for foot accelerator (풋 악셀 케이블용 브라켓)	T400-2105	1	
6	Accelerator cable holder assy (악셀 케이블 잡이)	T400-2106	1	
7	Bolt (볼트)	T400-2107	2	
8	Washer (와셔)	T400-2108	3	
9	Accelerator lever assy (조속 케이블 잡이)	T400-2109	1	
10	Accelerator lever cable (조속 레버 케이블)	T400-2110	1	
11	Rubber cover (고무 덮개)	T400-2111	1	
12	Bracket for accelerator lever (조속용 레버 브라켓)	T400-2112	1	
13	Nut (너트)	T400-2113	3	
14	Washer (와셔)	T400-2114	3	
15	Flat Bolt (접시볼트)	T400-2115	3	

22. Control valve system for Joystick
(조이스틱 콘트롤밸브 장치부)

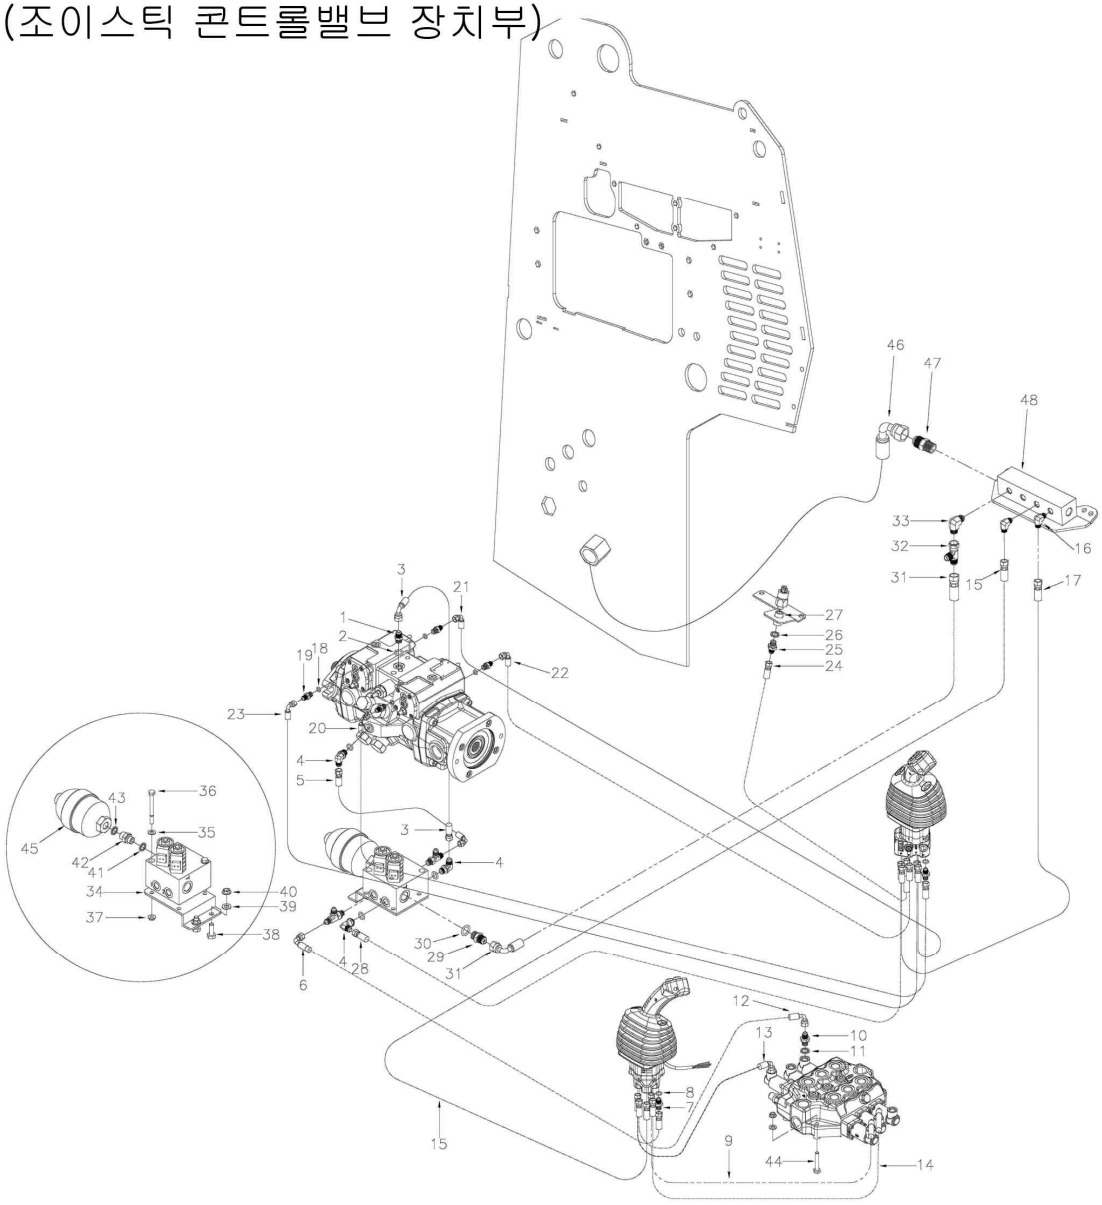


22. Control valve system for Joystick (조이스틱 콘트롤밸브 장치부)				
No.	Name	Part No.	Quantity	Remarks
1	Coupling nipple (연결 니쁠)	330T4-1801	1	
2	O-ring (오 링)	330T4-1802	1	
3	Hose (coupling nipple*main solenoid valve) (호스(연결닛쁠*메인쏠밸브))	330T4-1803	2	
4	Coupling Nipple EL (연결 니쁠 EL)	330T4-1804	3	
5	Hose (coupling nipple*main solenoid valve) (호스(연결닛쁠*메인쏠밸브))	330T4-1805	3	
6	Hose (main solenoid valve (J1) * Joystick (boom*bucket)P) (호스(메인쏠밸브(J1)*조이스틱(붐*버켓)P)	330T4-1806	1	
7	Nipple, Joystick (조이스틱 니쁠)	330T4-1807	1	
8	O-ring (오 링)	330T4-1808	1	
9	Hose (Joystick 1 * Control valve1) (호스(조이스틱 1*컨트롤밸브 1))	330T4-1809	2	
10	Nipple, Control valve (니쁠 컨트롤 밸브)	330T4-1810	2	
11	Bonded seal (본디드씰)	330T4-1811	2	
12	Hose (Control valve for bucket * joystick2) (호스 (컨트롤 밸브 버켓*조이스틱 2))	330T4-1812	2	
13	Hose (Control valve for bucket * joystick3) (호스 (컨트롤 밸브 버켓*조이스틱 3))	330T4-1813	1	
14	Hose (Control valve for bucket * joystick4) (호스 (컨트롤 밸브 버켓*조이스틱 4))	330T4-1814	1	
15	Hose (lift arm&bucket, control valve (T)*combined pipe) (호스(컨트롤밸브(붐,버켓(T))*합류관)	T400T4-2215	2	
16	Nipple EL (니쁠 EL)	330T4-1816	1	
17	Hose (joystick valve for tavel (T) *combined pipe) (호스 (조이스틱 밸브(주행(T))*합류관)	T400T4-2217	1	
18	O-ring (오 링)	330T4-1818	1	
19	Nipple, Pump (펌프 니쁠(C,D,E,F)	330T4-1819	2	
20	Hose (pump C*joystick valve for tavel (C)) (호스((펌프 C*조이스틱 밸브(주행 C))	330T4-1820	2	
21	Hose (pump D*joystick valve for tavel (D)) (호스((펌프 D*조이스틱 밸브(주행 D))	330T4-1821	1	
22	Hose (pump E*joystick valve for tavel (E)) (호스((펌프 E*조이스틱 밸브(주행 E))	330T4-1822	1	
23	Hose (pump F*joystick valve for tavel (F)) (호스((펌프 F*조이스틱 밸브(주행 F))	330T4-1823	1	
24	Hose (joystick valve for tavel (5)*pressure switch) (호스(조이스틱 밸브(주행 5)*압력스위치))	330T4-1824	1	

22. Control valve system for Joystick
(조이스틱 콘트롤밸브 장치부)

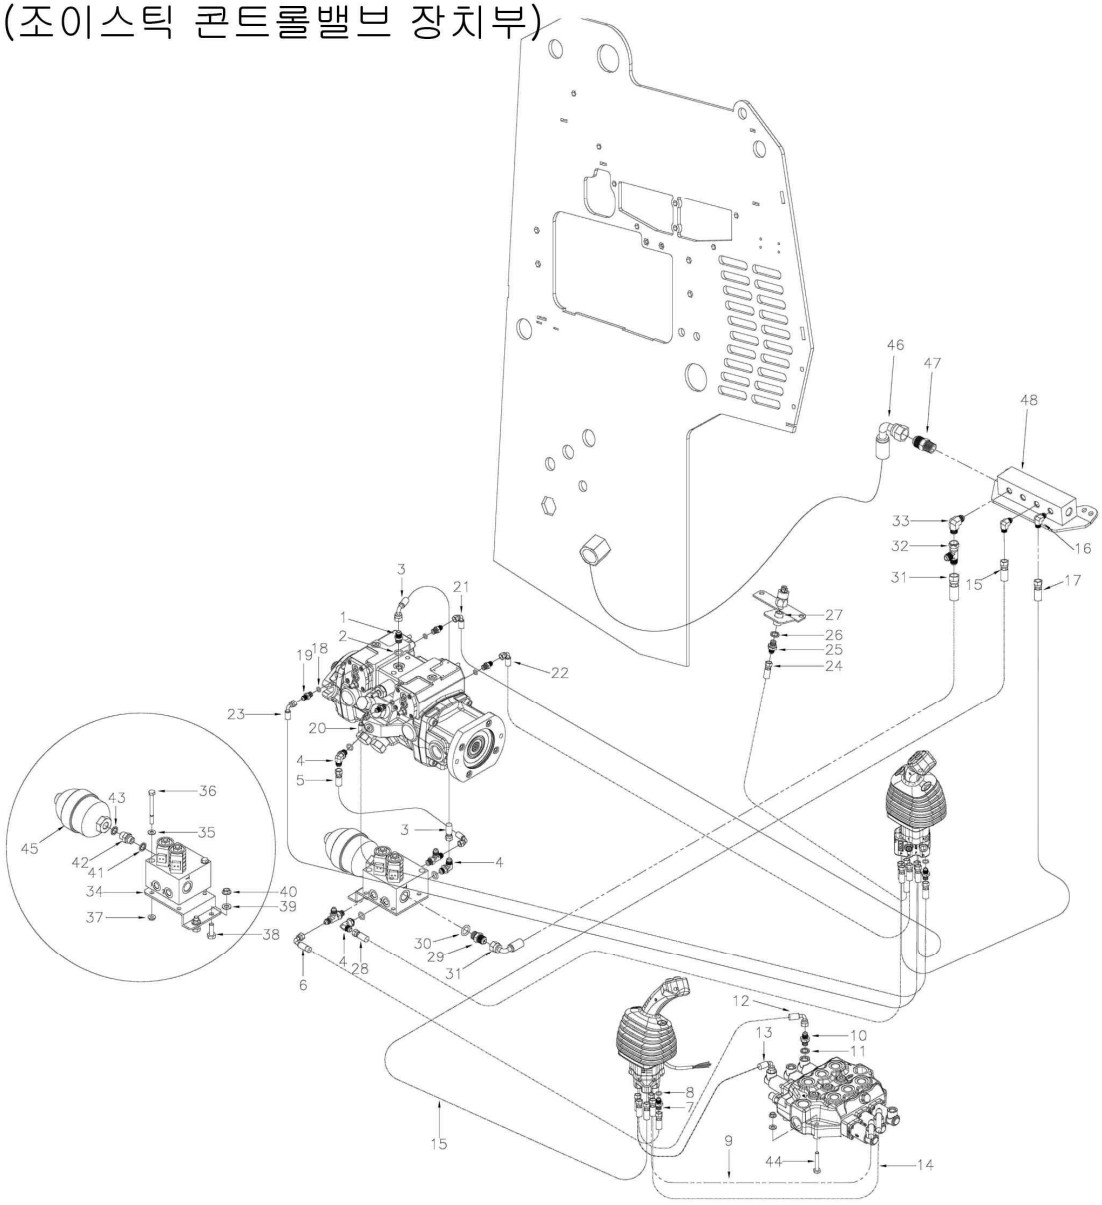


22. Control valve system for Joystick (조이스틱 콘트롤밸브 장치부) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
25	Nipple,Fixed plate for pressure switch (니쁠,압력스위치 고정판)	330T4-1825	1	
26	Bonded seal (본디드씰)	330T4-1826	1	
27	Fixed plate for pressure switch (압력스위치 고정판)	330T4-1827	1	
28	Hose (main solenoid valve (J2)*joystick valve for tavel (P)) (호스(메인쏠밸브(J2)*조이스틱 밸브(주행 P))	330T4-1828	2	
29	Nipple (니쁠)	T400T4-2229	2	
30	O-ring (오링)	T400T4-2230	1	
31	Hose (main solenoid valve T*combined pipe) (호스 (메인쏠밸브(T))*합류관))	T400T4-2231	1	
32	Distributing nipple t (분배 니쁠 T)	T400T4-2232	1	
33	Nipple El (니쁠 EL)	T400T4-2233	1	
34	Fixed plate for main solenoid valve (메인쏠밸브 고정판)	T400T4-2234	1	
35	Washer (와셔)	T400T4-2235	1	
36	Bolt (볼트)	T400T4-2236	2	
37	Nut (너트)	T400T4-2237	2	
38	Bolt (볼트)	T400T4-2238	3	
39	Washer (와셔)	T400T4-2239	1	
40	Nut (너트)	T400T4-2240	1	
41	Bonded seal (본디드씰)	T400T4-2241	1	
42	Nipple (니쁠)	T400T4-2242	1	
43	Bonded seal (본디드씰)	T400T4-2243	1	
44	Bolt (볼트)	T400T4-2244	1	
45	Accumulator (어큐물레이터)	330T4-1836	1	
46	Hose (combined pipe F*tank) (호스 (합류관 F*탱크))	T400T4-2246	1	
47	Nipple (니쁠)	T400T4-2247	1	
48	Combined pipe (합류관)	T400T4-2248	1	

23. Engine, Kubota (엔진, 구보다)

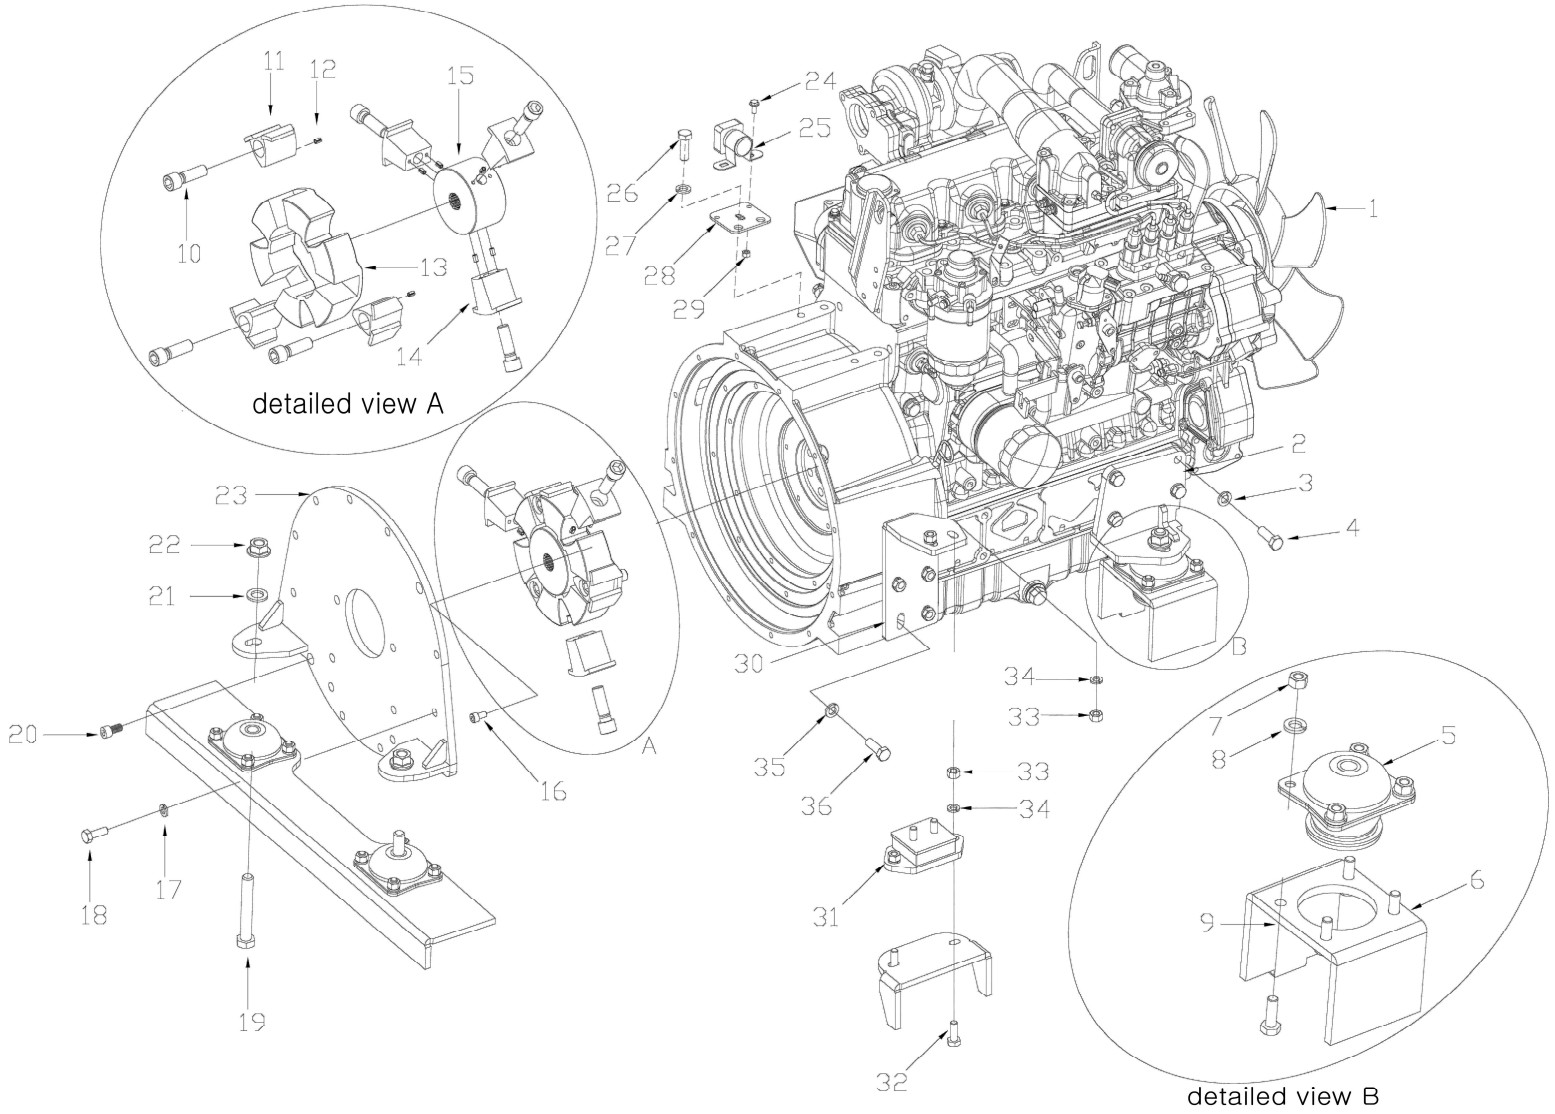


23-1. Engine, Kubota (엔진, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Fan (팬)	T400-2301	1	
2	Fixed plate for engine (엔진 고정판)	T400-2302	2	
3	Spring washer (스프링 와셔)	T400-2303	8	
4	Bolt (볼트)	T400-2304	8	
5	Vibroisolating rubber (방진 고무)	T400-2305	4	
6	Fixed plate for vibroisolating rubber (고무 고정판)	T400-2306	2	
7	Nut (너트)	T400-2307	32	
8	Spring washer (스프링 와셔)	T400-2308	32	
9	Bolt (볼트)	T400-2309	32	
10	Wrench Bolt (렌치 볼트)	T400-2310	6	
11	Insert (인서트)	T400-2311	3	
12	Pin spring (스프링 핀)	T400-2312	9	
13	Element (엘레멘트)	T400-2313	1	
14	Insert (인서트)	T400-2314	3	
15	Hub (허브)	T400-2315	1	
16	Wrench Bolt (렌치 볼트)	T400-2316	2	
17	Spring washer (스프링 와셔)	T400-2317	16	
18	Bolt (볼트)	T400-2318	16	
19	Bolt (볼트)	T400-2319	4	
20	Wrench Bolt (렌치 볼트)	T400-2320	2	
21	Washer (와셔)	T400-2321	16	
22	Bolt (볼트)	T400-2322	16	
23	Fixed plate for pump (펌프 고정판)	T400-2323	1	
24	Bolt (볼트)	T400-2324	1	
25	Start relay (스타트 릴레이)	T400-2325	1	

23. Engine, Kubota (엔진, 구보다)

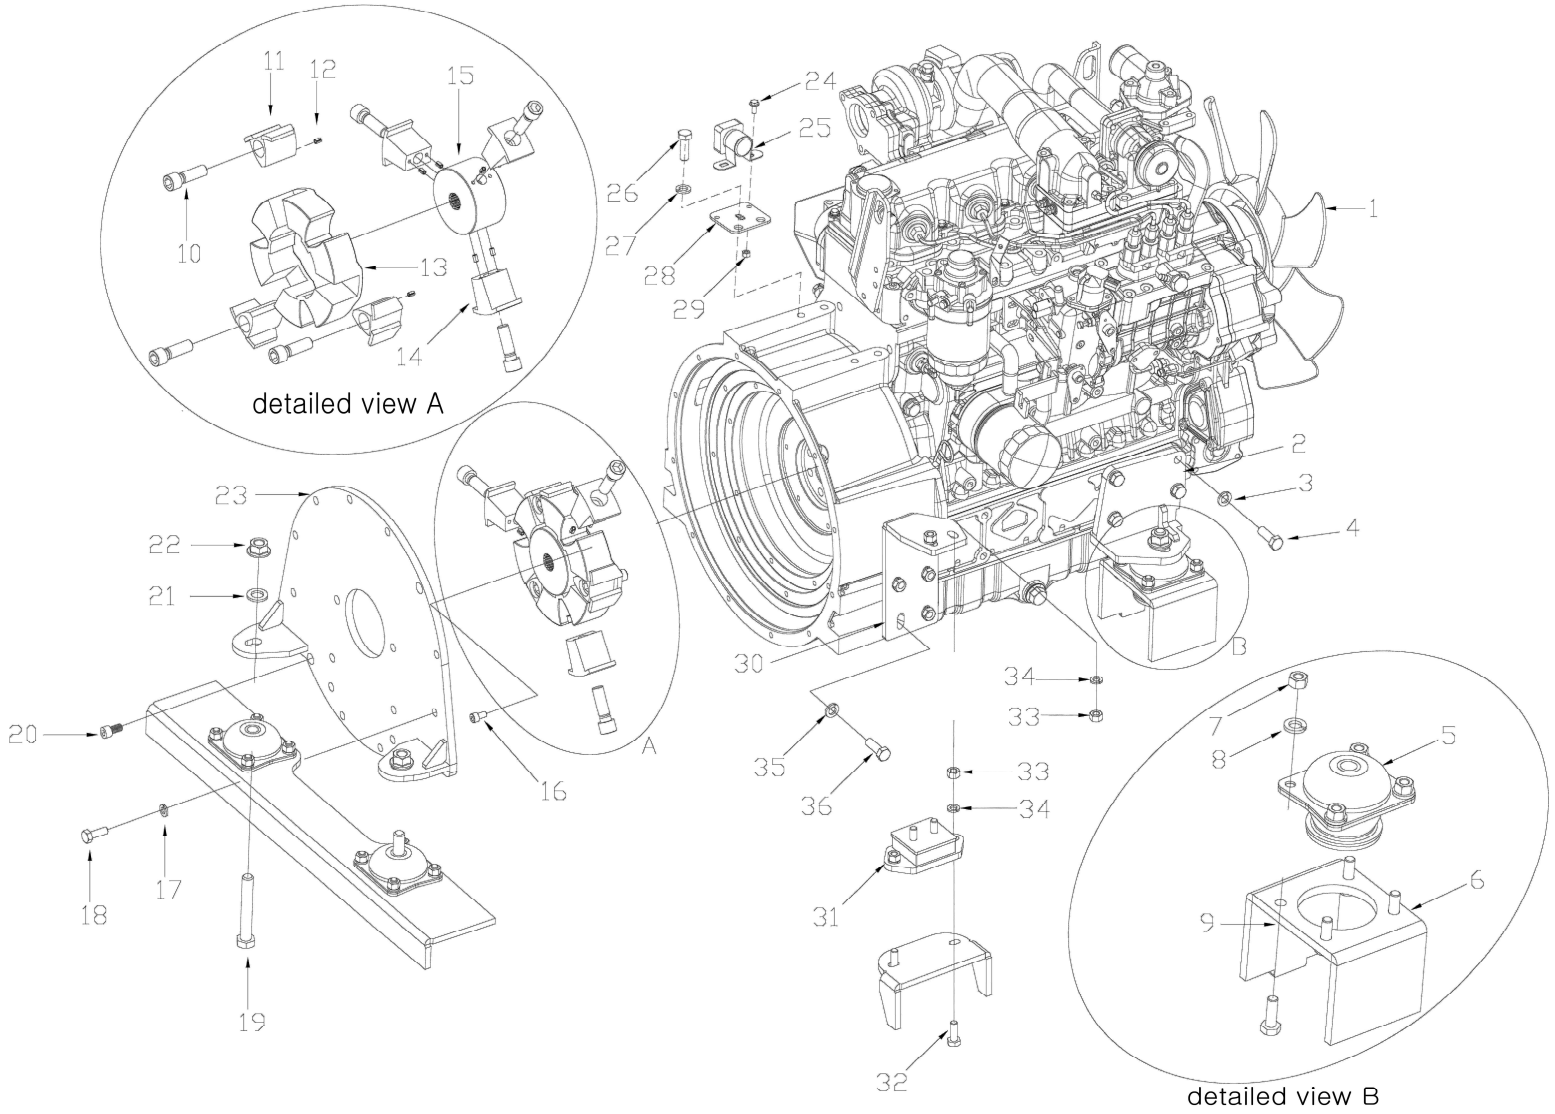


23. Engine, Kubota (엔진, 구보다) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Bolt (볼트)	T400-2326	4	
27	Spring washer (스프링 와셔)	T400-2327	4	
28	Fixed plate for start relay (스타트 릴레이 고정판)	T400-2328	1	
29	Nut (너트)	T400-2329	4	
30	Aux. fixed plate for engine RH/LH (보조 엔진 고정판(RH, LH))	T400-2330	2	
31	Vibroisolating rubber (방진 고무)	T400-2331	2	
32	Bolt (볼트)	T400-2332	4	
33	Nut (너트)	T400-2333	4	
34	Spring washer (스프링 와셔)	T400-2334	4	
35	Spring washer (스프링 와셔)	T400-2335	8	
36	Bolt (볼트)	T400-2336	8	

24. Pump (펌프)

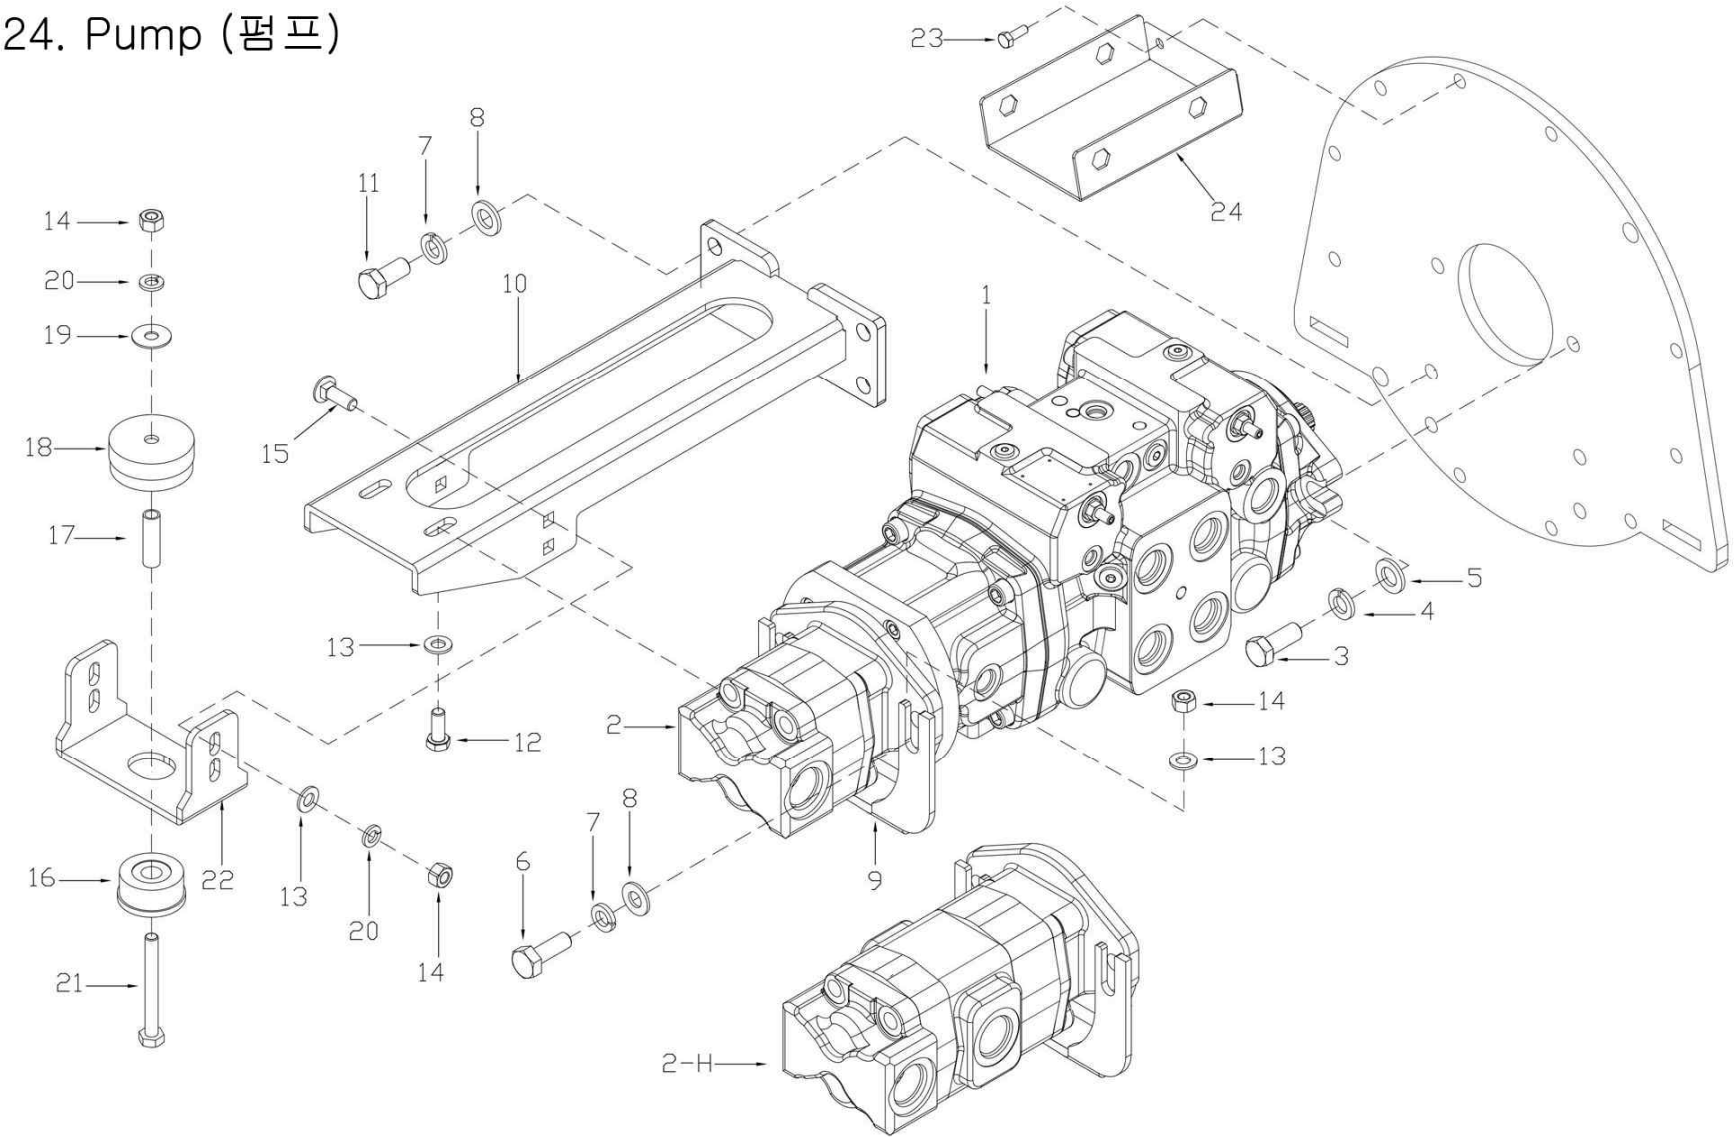
23
24
8
7
11
14
20
19
10
1
18
15
17
5
4
3
13
14
12
2
13
8
7
6
16
22
13
20
14
9
21
2-H


24. Pump (펌프)				
No.	Name	Part No.	Quantity	Remarks
1	Pump (펌프)	330T4-2001	1	
2	Aux. pump (기어 펌프)	330T4-2002	1	
2-H	Aux. pump for Hi-Flow / Option (기어 펌프-하이플로우)-옵션	330T4-2002-1		
3	Bolt (볼트)	330T4-2003	2	
4	Spring washer (스프링 와셔)	330T4-2004	2	
5	Washer (와셔)	330T4-2005	2	
6	Bolt (볼트)	330T4-2006	2	
7	Spring washer (스프링 와셔)	330T4-2007	5	
8	Washer (와셔)	330T4-2008	5	
9	Coupling plate (연결판)	330T4-2009	1	
10	Fixed plate for pump (펌프 고정판)	330T4-2010	1	
11	Bolt (볼트)	330T4-2011	4	
12	Bolt (볼트)	330T4-2012	2	
13	Washer (와셔)	330T4-2013	8	
14	Nut (너트)	330T4-2014	6	
15	Bolt (볼트)	330T4-2015	4	
16	Rubber support (고무 받침)	330T4-2016	1	
17	Spacer (간격통)	330T4-2017	1	
18	Vibroisolating rubber (방진 고무)	330T4-2018	1	
19	Washer (와셔)	330T4-2019	1	
20	Spring washer (스프링 와셔)	330T4-2020	1	
21	Bolt (볼트)	330T4-2021	1	
22	Supporting bracket for pump (펌프 받침 브라켓)	330T4-2022	1	
23	Bolt (볼트)	330T4-2023	2	
24	Bracket for pressure gauge (압력 게이지 브라켓)	330T4-2024	1	

25. Radiator, Kubota (라디에이터, 구보다)

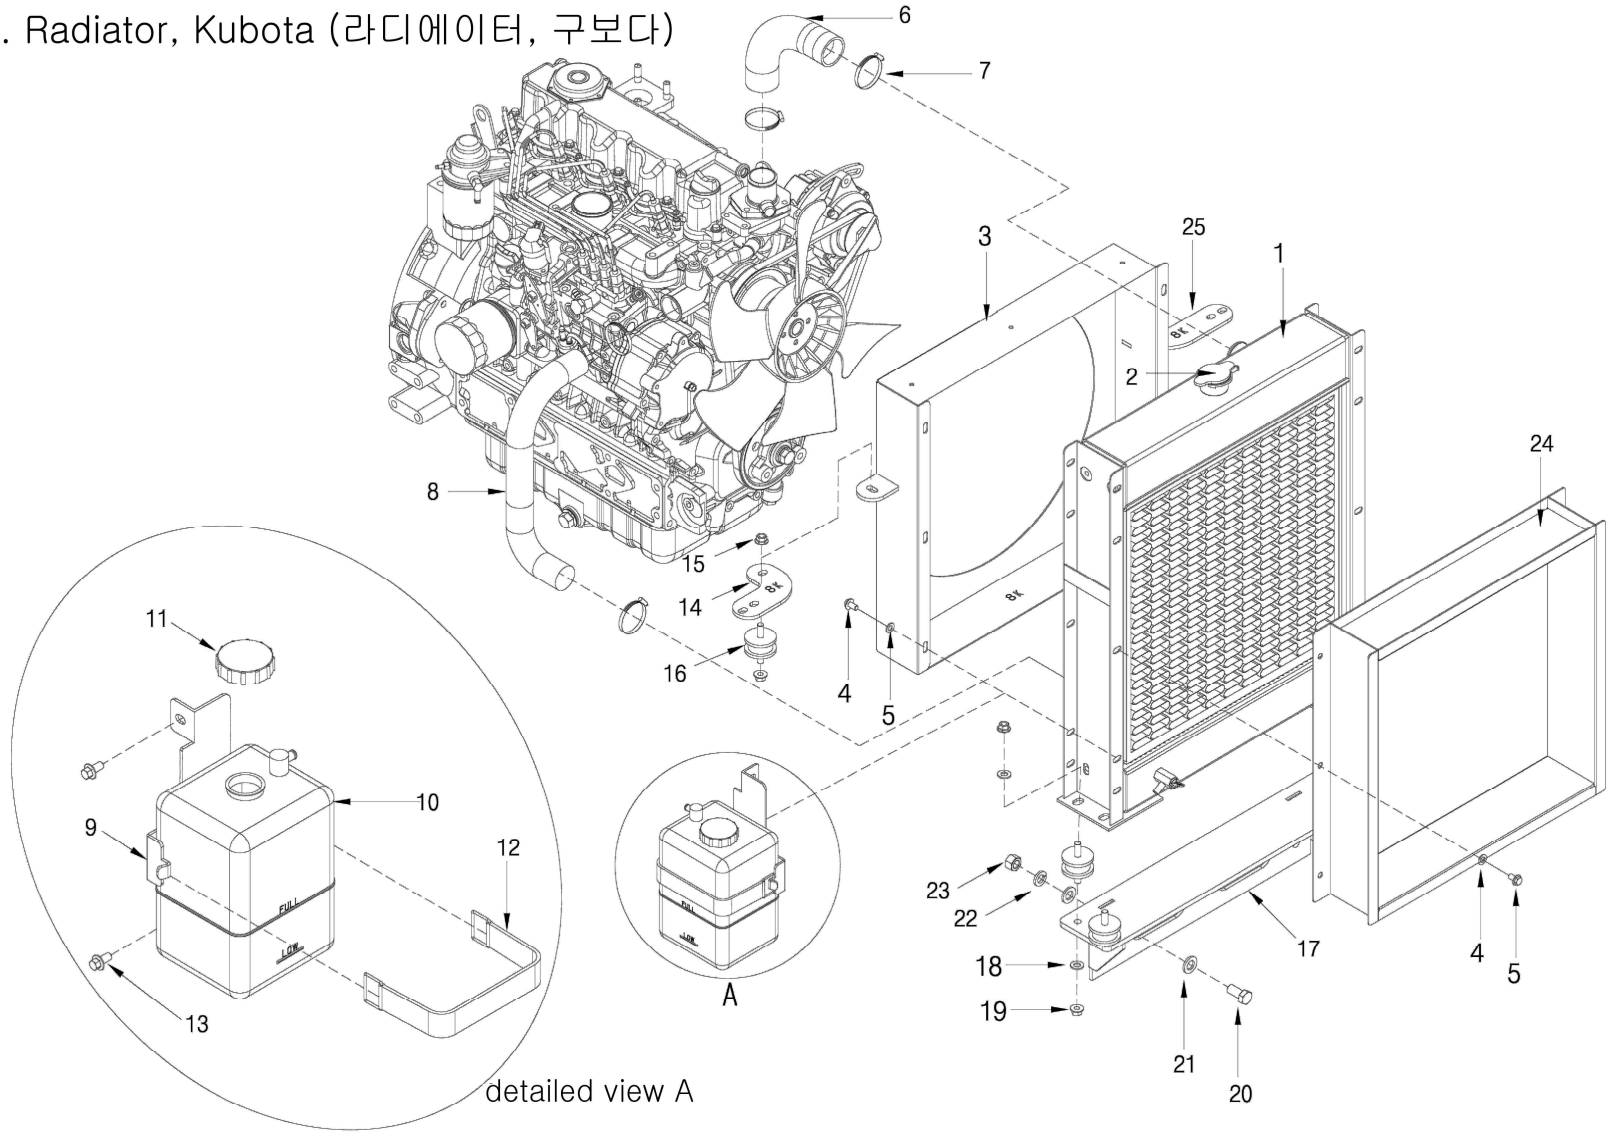


25-1. Radiator, Kubota (라디에이터, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Radiator (라디에이터)	T400-2501	1	
2	Radiator cap (라디에이터 캡)	T400-2502	1	
3	Fan cover (팬 커버)	T400-2503	1	
4	Bolt (볼트)	T400-2504	14	
5	Washer (와셔)	T400-2505	14	
6	Upper radiator hose (상단 라디에이터 호스)	T400-2506	1	
7	Hose band (호스 밴드)	T400-2507	4	
8	Lower radiator hose (하단 라디에이터 호스)	T400-2508	1	
A	Aux. water tank assy (보조 물 탱크 조합)	T400-2509	1	
9	Fixed plate for aux. water tank (보조 물 탱크용 고정판)	T400-2510A	1	
10	Aux. water tank (보조 물 탱크)	T400-2510-1	1	
11	Water tank cap (보조 물 탱크 캡)	T400-2510-2	1	
12	A fixed band (고정밴드)	T400-2510-3	1	
13	Bolt (볼트)	T400-2510-4	2	
14	A fixed plate (고정판)	T400-2514	1	
15	Nut (너트)	T400-2515	12	
16	Vibroisolating rubber (방진 고무)	T400-2516	6	
17	A fixed bracket (고정 브라켓)(LH)	T400-2517	1	
18	Spring washer (스프링 와셔)	T400-2518	4	
19	Nut (너트)	T400-2519	4	
20	Bolt (볼트)	T400-2520	2	
21	Washer (와셔)	T400-2521	4	
22	Spring washer (스프링 와셔)	T400-2522	2	
23	Nut (너트)	T400-2523	2	
24	Cooler guide (쿨러 가이드)	T400-2524	1	

25. Radiator, Kubota (라디에이터, 구보다)

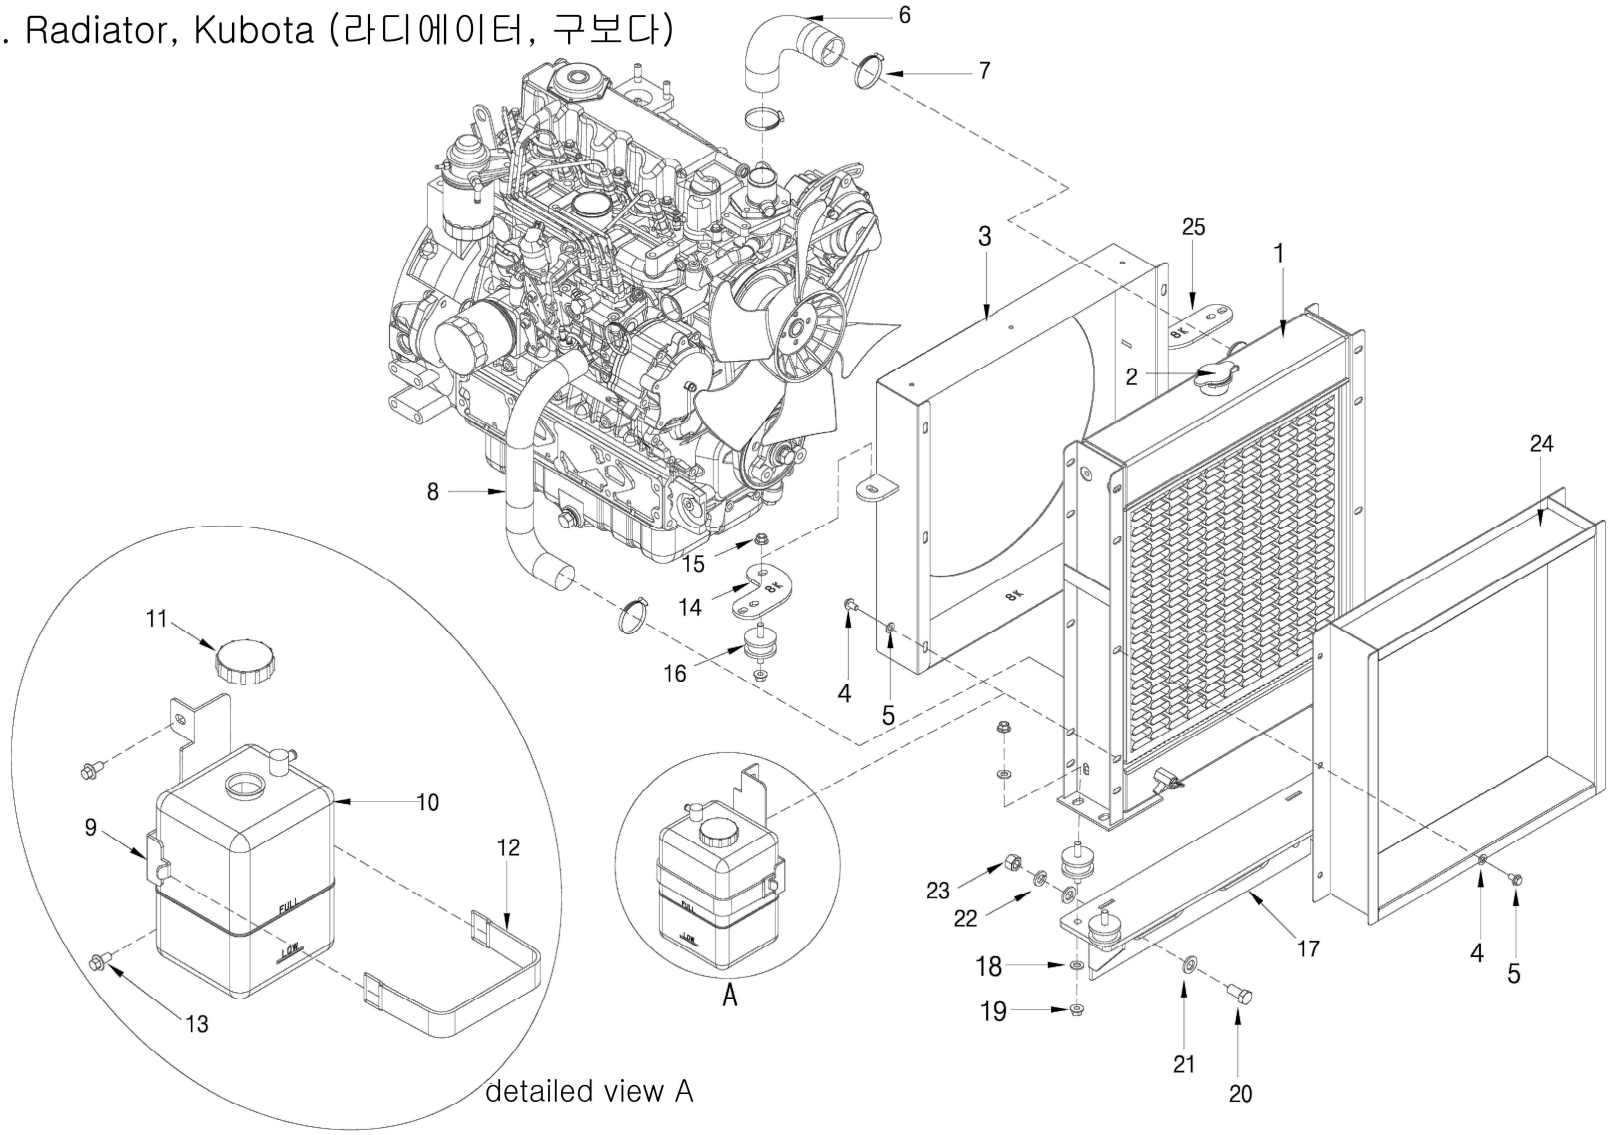


25. Radiator, Kubota (라디에이터, 구보다) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
25	A fixed bracket (고정 브라켓)(RH)	T400-2525	1	

26. Muffler, Kubota (소음기, 구보다)

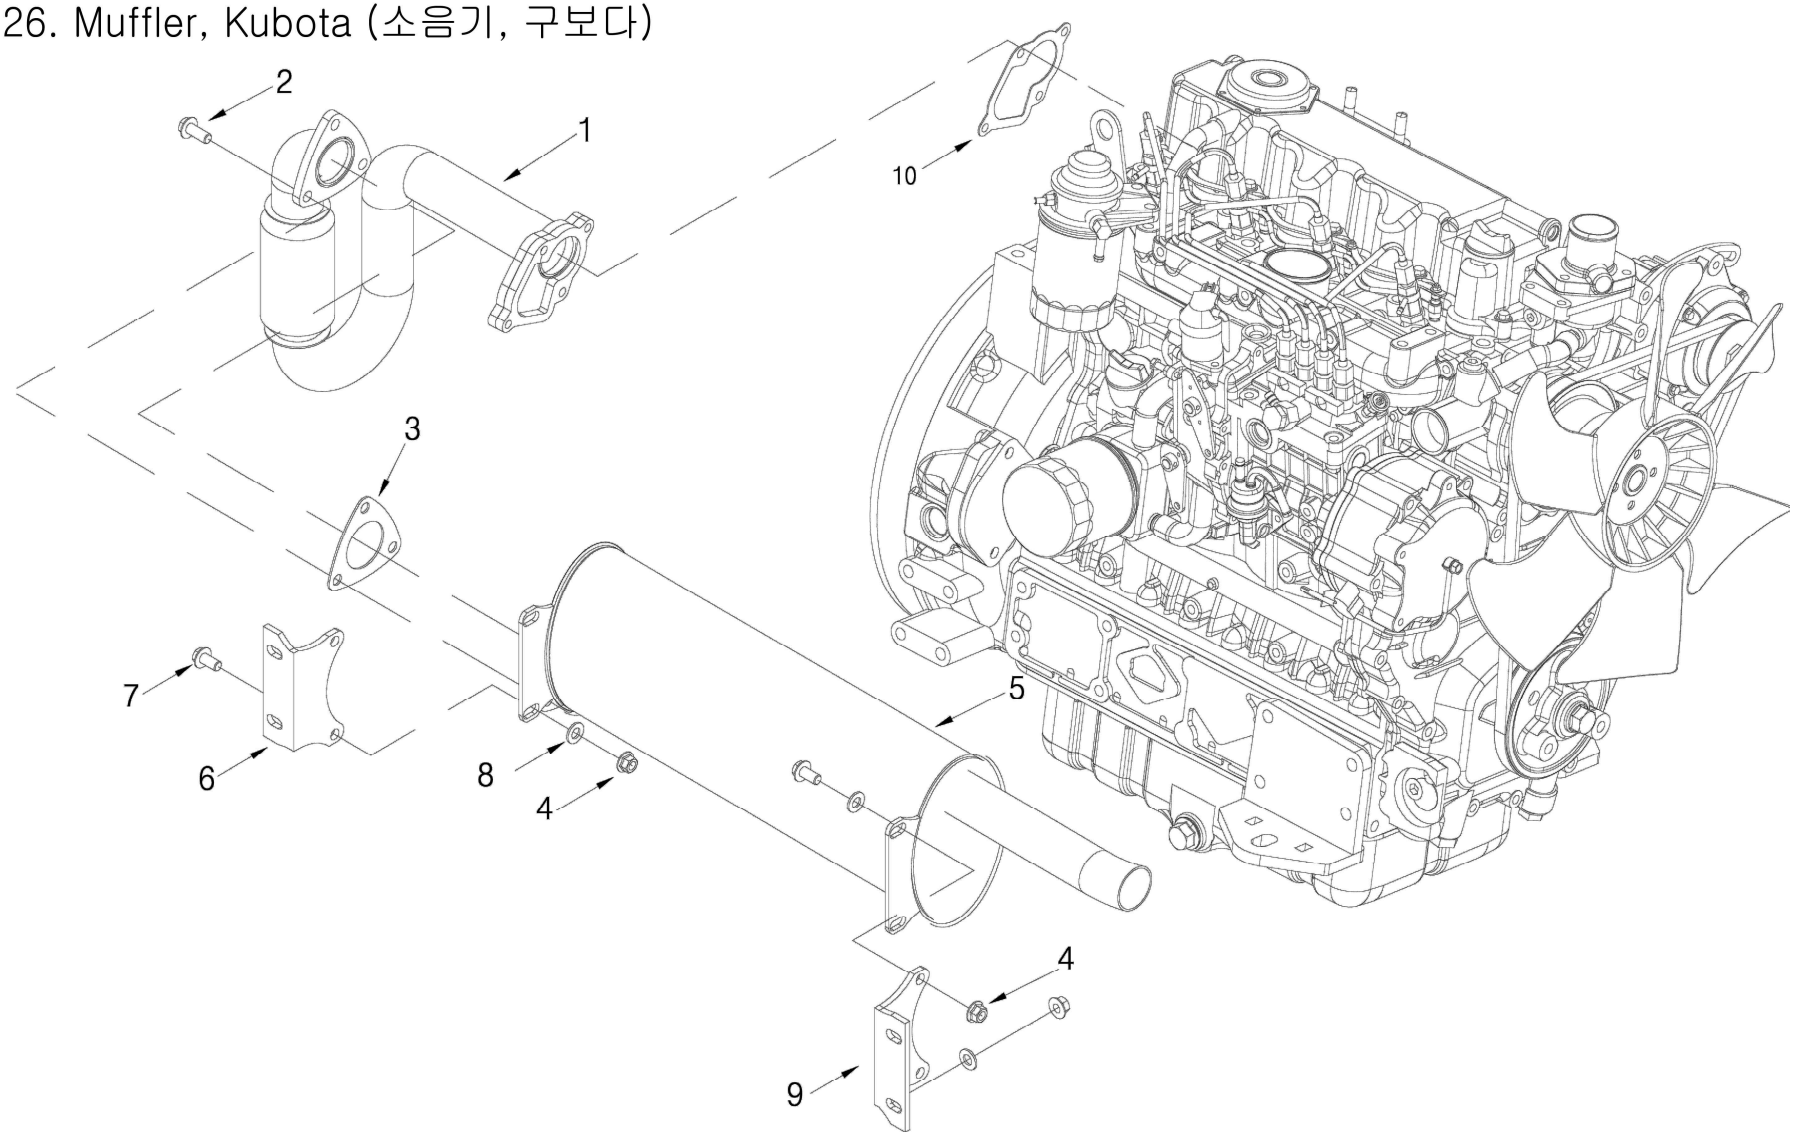


26-1. Muffler, Kubota (소음기, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Coupling tube (연결관)	T400-2601	1	
2	Band (밴드)-연결관	T400-2602	3	
3	Gasket (가스켓)	T400-2603	1	
4	Nut (너트)	T400-2604	11	
5	Muffler (소음기)	T400-2605	1	
6	Front Fixed plate (고정판)	T400-2606	1	
7	Bolt (볼트)	T400-2607	4	
8	Washer (와셔)	T400-2608	8	
9	Rear Fixed plate (고정판)	T400-2609	1	
10	Gasket (가스켓)	T400-2610	1	

27. Air cleaner, Kubota (에어크리너, 구보다)

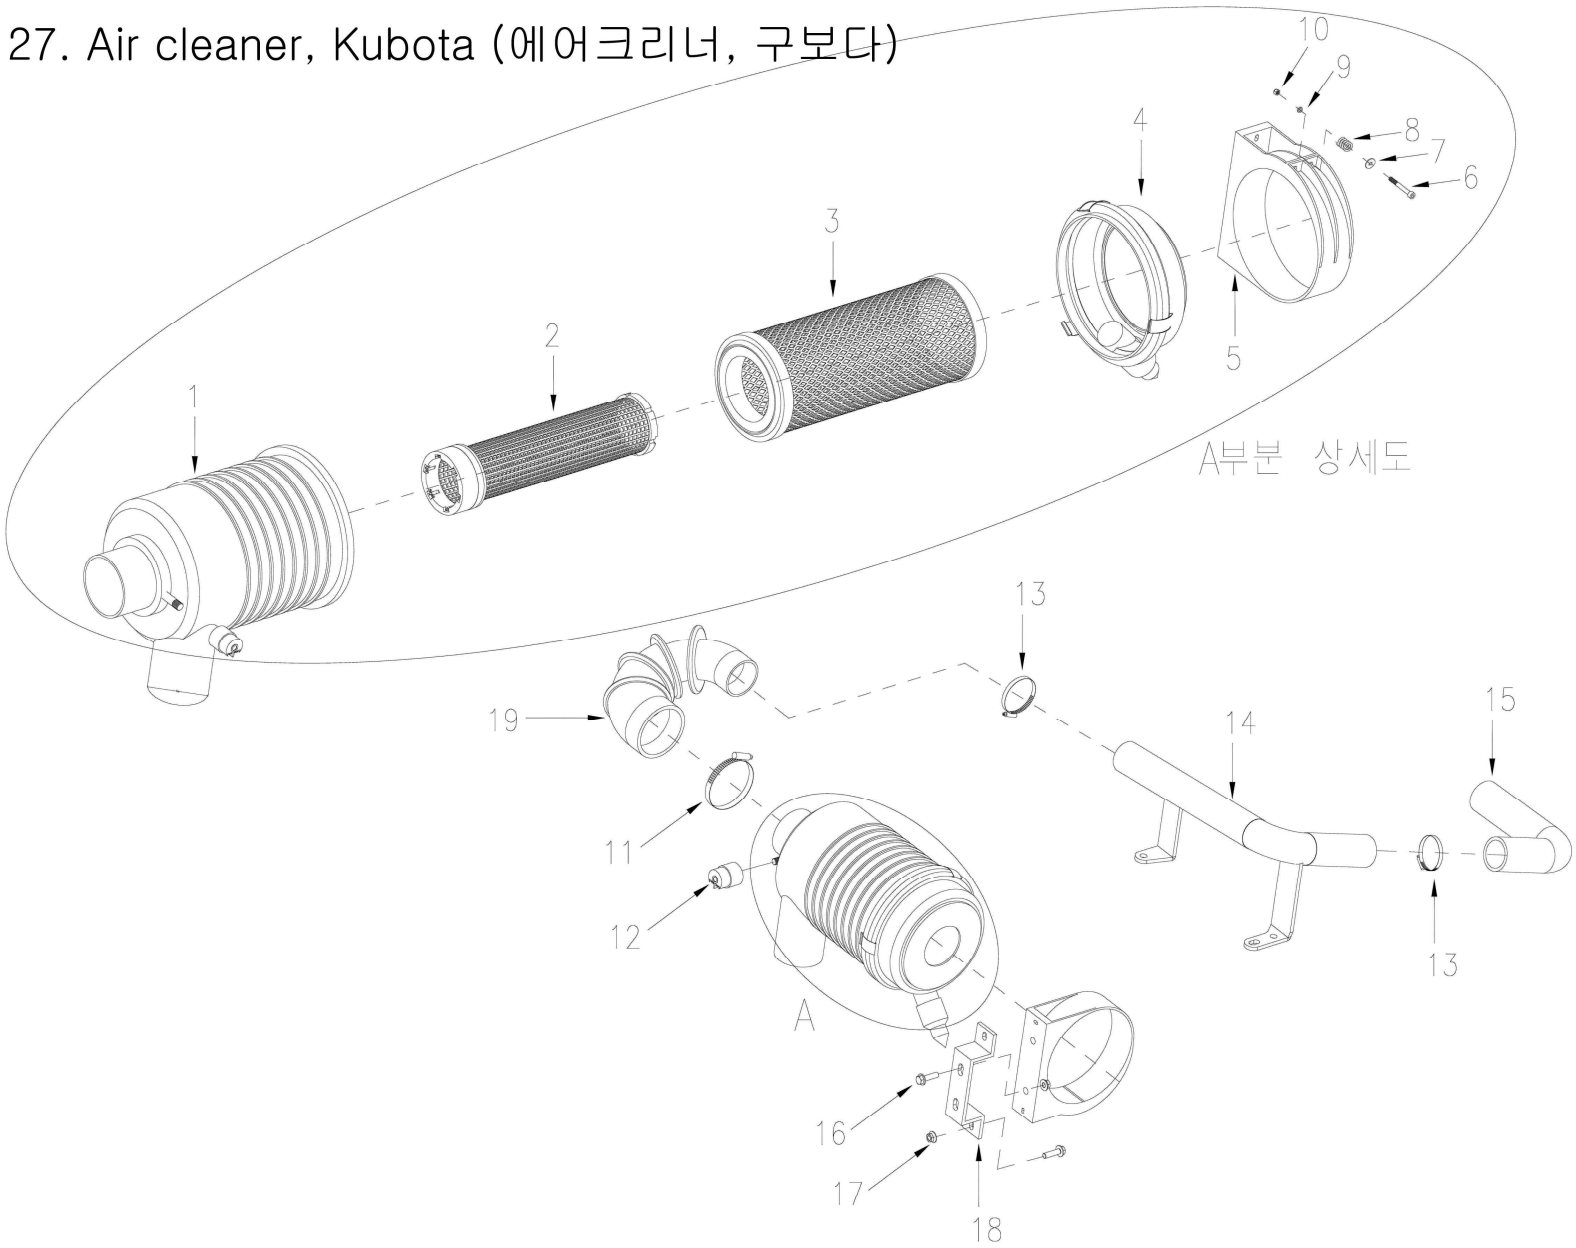


27-1. Air cleaner, Kubota (에어크리너, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Air Cleaner assy (에어크리너 조합)	T400-2701	1	
2	Air Cleaner Case (에어크리너 케이스)	T400-2702	1	
3	Inner filter element (내측 에어크리너 필터)	T400-2703	1	
4	Outer Filter element (외측 에어크리너 필터)	T400-2704	1	
5	Bottom cap (하단캡)	T400-2705	1	
6	Clamp (클램프)	T400-2706	1	
7	Bolt (볼트)	T400-2707	2	
8	Washer (와셔)	T400-2708	2	
9	Spring washer (스프링 와셔)	T400-2709	2	
10	Nut (너트)	T400-2710	2	
11	Band (밴드)	T400-2711	2	
12	Air bleeder (에어 브리져)	T400-2712	1	
13	Band (밴드)	T400-2713	2	
14	Coupling tube (연결관)	T400-2714	1	
15	Air Cleaner hose (에어크리너 호스)	T400-2715	1	
16	Bolt (볼트)	T400-2716	4	
17	Nut (너트)	T400-2717	4	
18	A fix plate (고정판)	T400-2718	1	
19	Connecting hose,air cleaner (에어크리너 연결호스)	T400-2719	1	

28. Hydraulic tank and fuel tank (유압 및 연료 탱크)

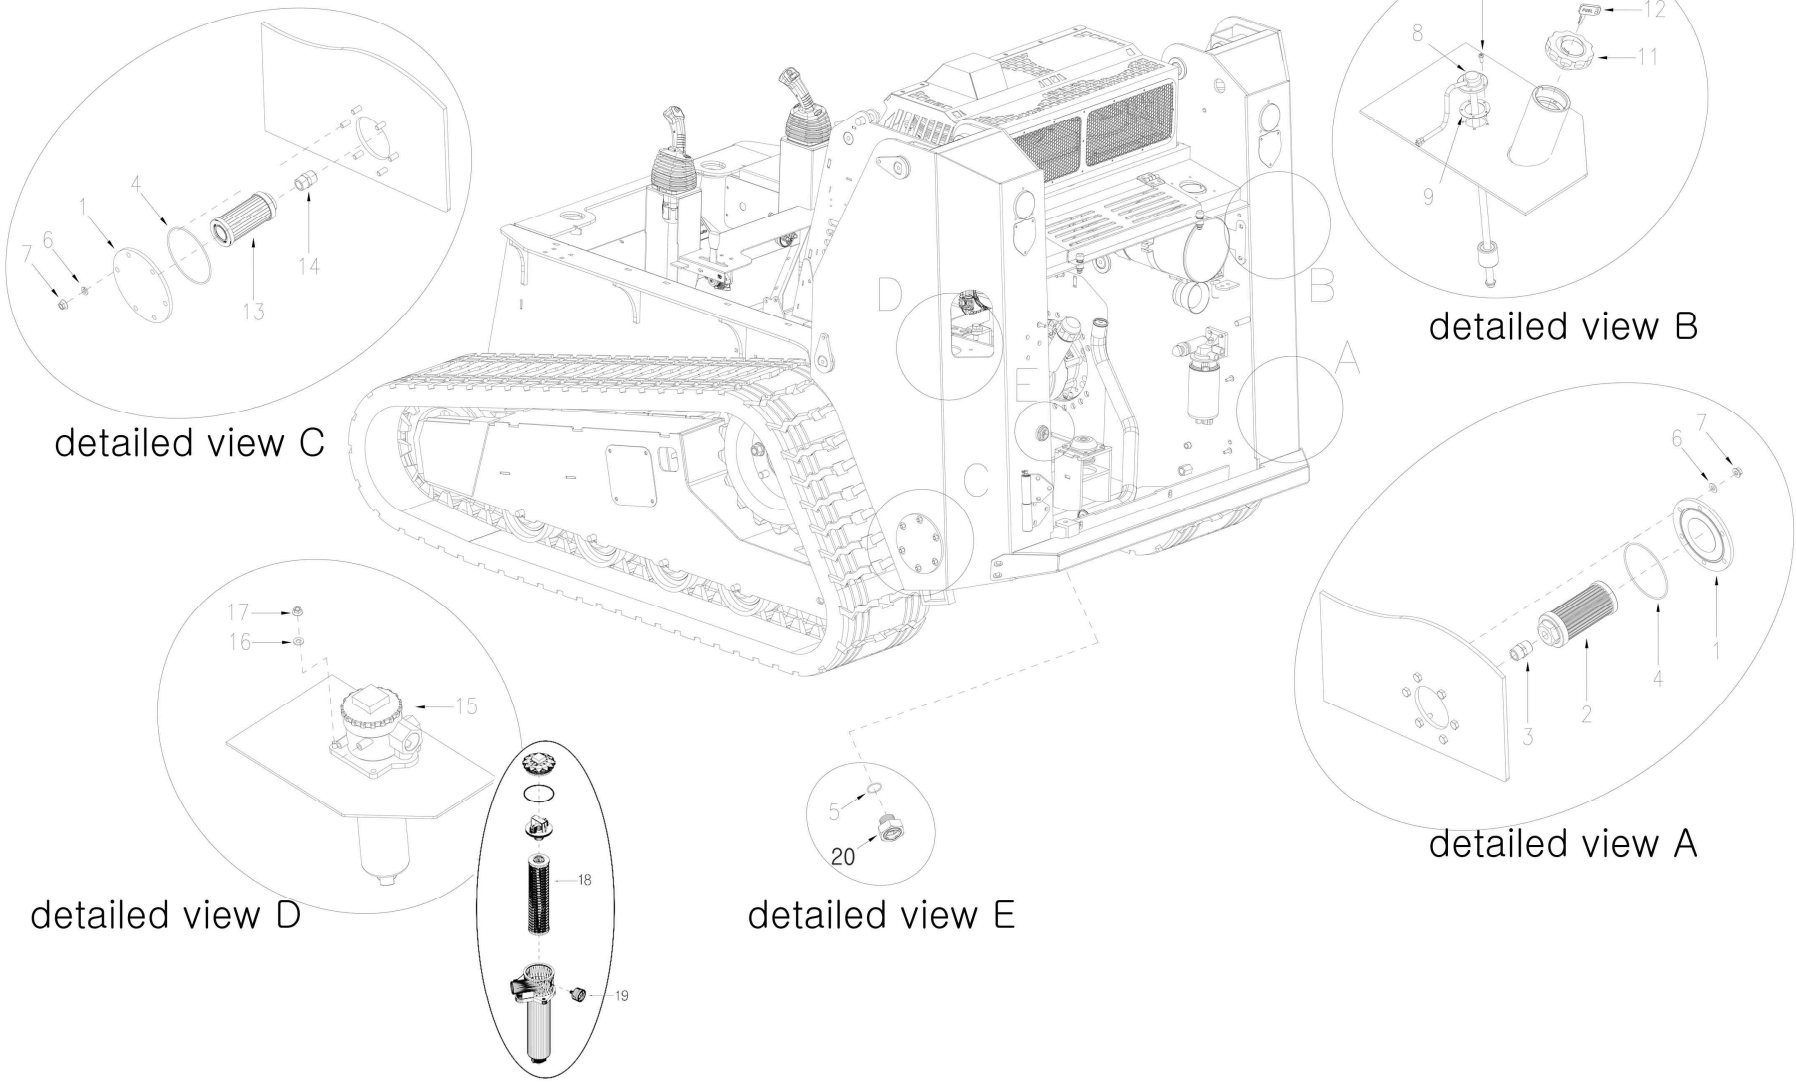


28. Hydraulic tank and fuel tank (유압 및 연료 탱크)				
No.	Name	Part No.	Quantity	Remarks
1	Fixed plate for filter (필터 고정판)	T400T4-2801	1	
2	Suction filter for fuel (fuel filter) (석션 필터, 경유)	T400T4-2802	1	
3	Coupling nipple (연결 니쁠)	T400T4-2803	1	
4	O-ring (오 링)	T400T4-2804	2	
5	O-ring (오 링)	T400T4-2805	1	
6	Washer (와셔)	T400T4-2806	12	
7	Nut (너트)	T400T4-2807	12	
8	Fuel Sensor (연료 센서)	T400T4-2808	1	
9	Gasket (가스켓)	T400T4-2809	1	
10	Bolt (볼트)	T400T4-2810	5	
11	Fuel cap (연료 캡)	T400T4-2811	1	
12	key (열쇠)	T400T4-2812	1	
13	Suction filter for hyd' oil (hyd' oil filter) (석션 필터, 유압)	T400T4-2813	1	
14	Coupling nipple (연결 니쁠)	T400T4-2814	1	
15	Dual filter assy (suction * spin-on) (복합필터조합 석션*리턴)	T400T4-2815A	1	
16	Washer (와셔)	T400T4-2816	4	
17	Nut (너트)	T400T4-2817	4	
18	Filter (필터)	T400T4-2815-1	1	
19	Pressure gauge (압력 게이지)	T400T4-2815-2	1	
20	Hyd' oil level gauge (유량 게이지)	T400T4-2819	1	

29. Precleaner (프리크리너)

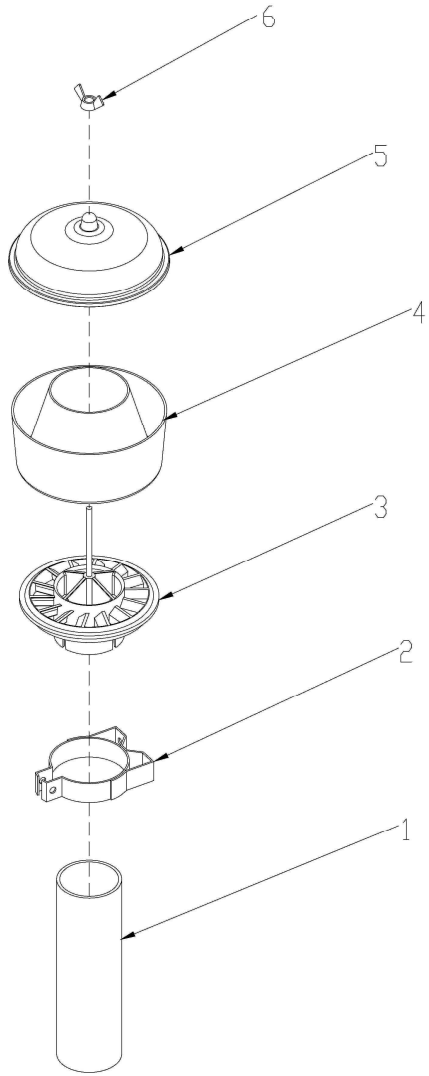


29. Precleaner (프리크리너)				
No.	Name	Part No.	Quantity	Remarks
1	Precleaner hose (프리크리너 호스)	T400T4-2901	1	
2	Band (밴드)	T400T4-2902	1	
3	Precleaner holder (프리크리너 잡이)	T400T4-2903	1	
4	Precleaner case (프리크리너 케이스)	T400T4-2904	1	
5	Precleaner cover (프리크리너 커버)	T400T4-2905	1	
6	Thumb nut (나비 너트)	T400T4-2906	1	

30. Fuel line, Kubota (연료라인, 구보다)

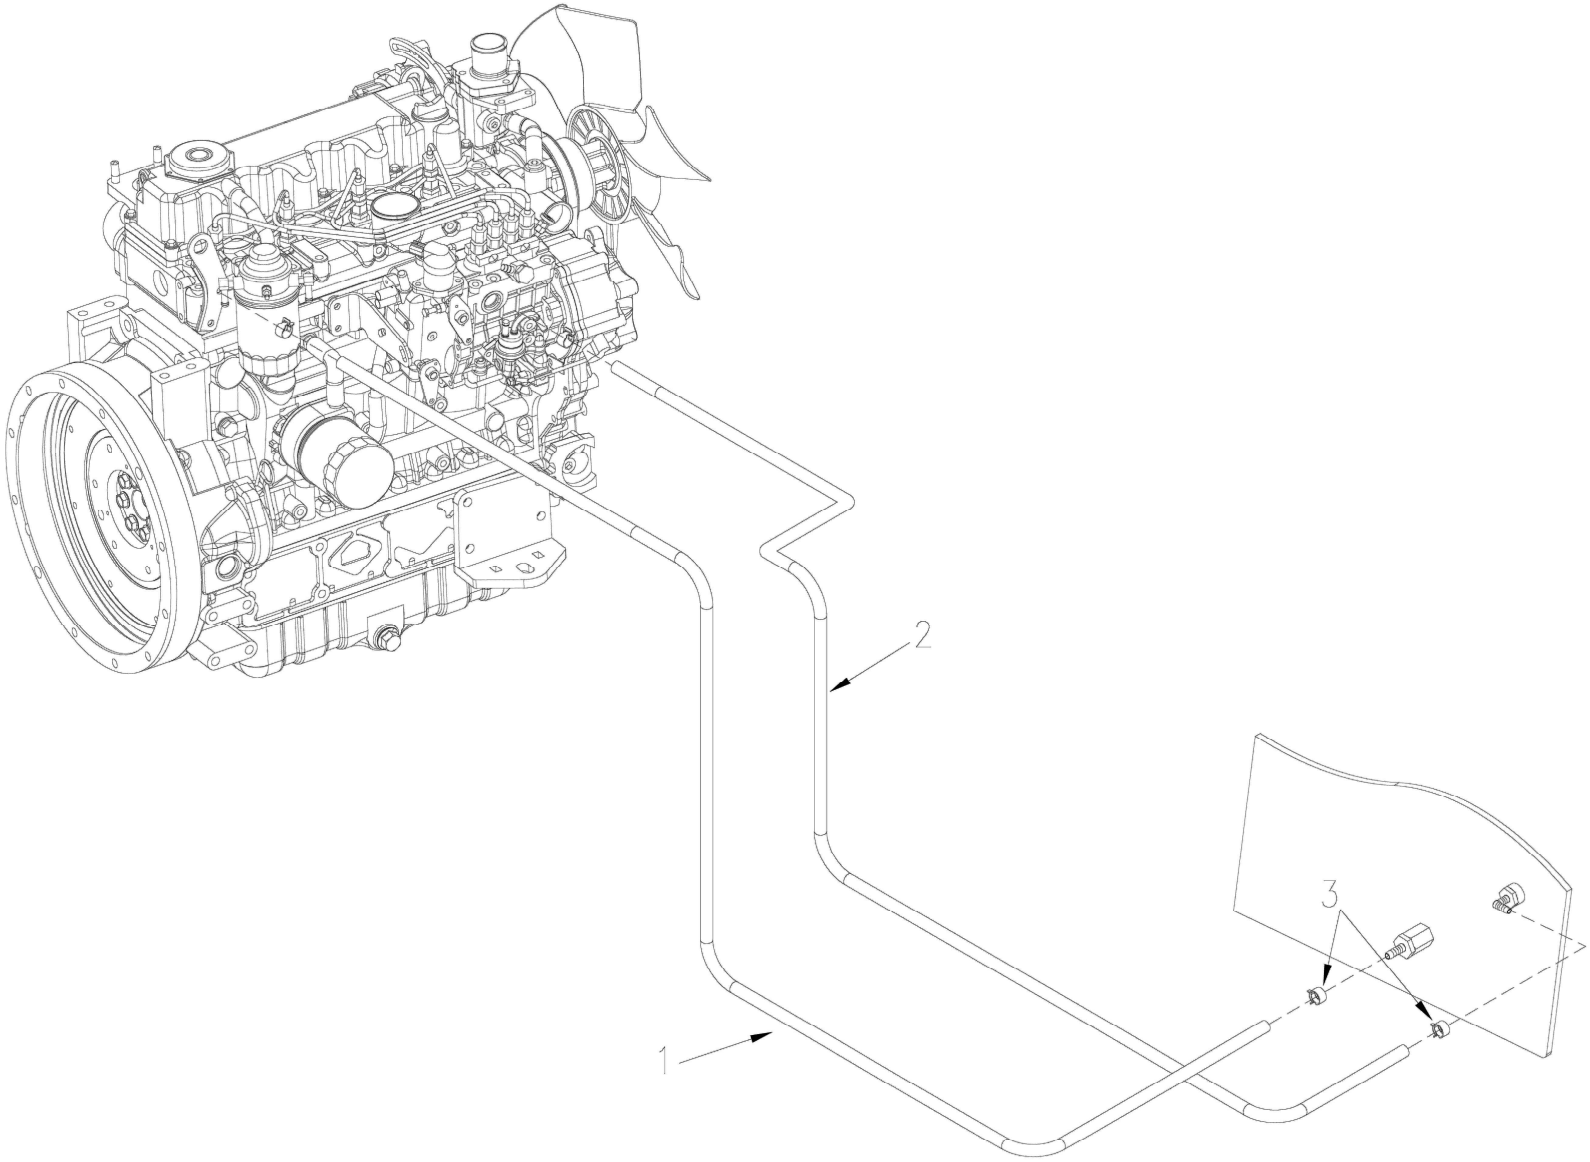


30-1. Fuel line, Kubota (연료라인, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Input hose (입력호스)	T400-3001	1	
2	Drain hose (퇴유호스)	T400-3002	4	
3	Band (밴드)	T400-3003	1	

31. Hydraulic line of lift arm (주붐 유압 라인)

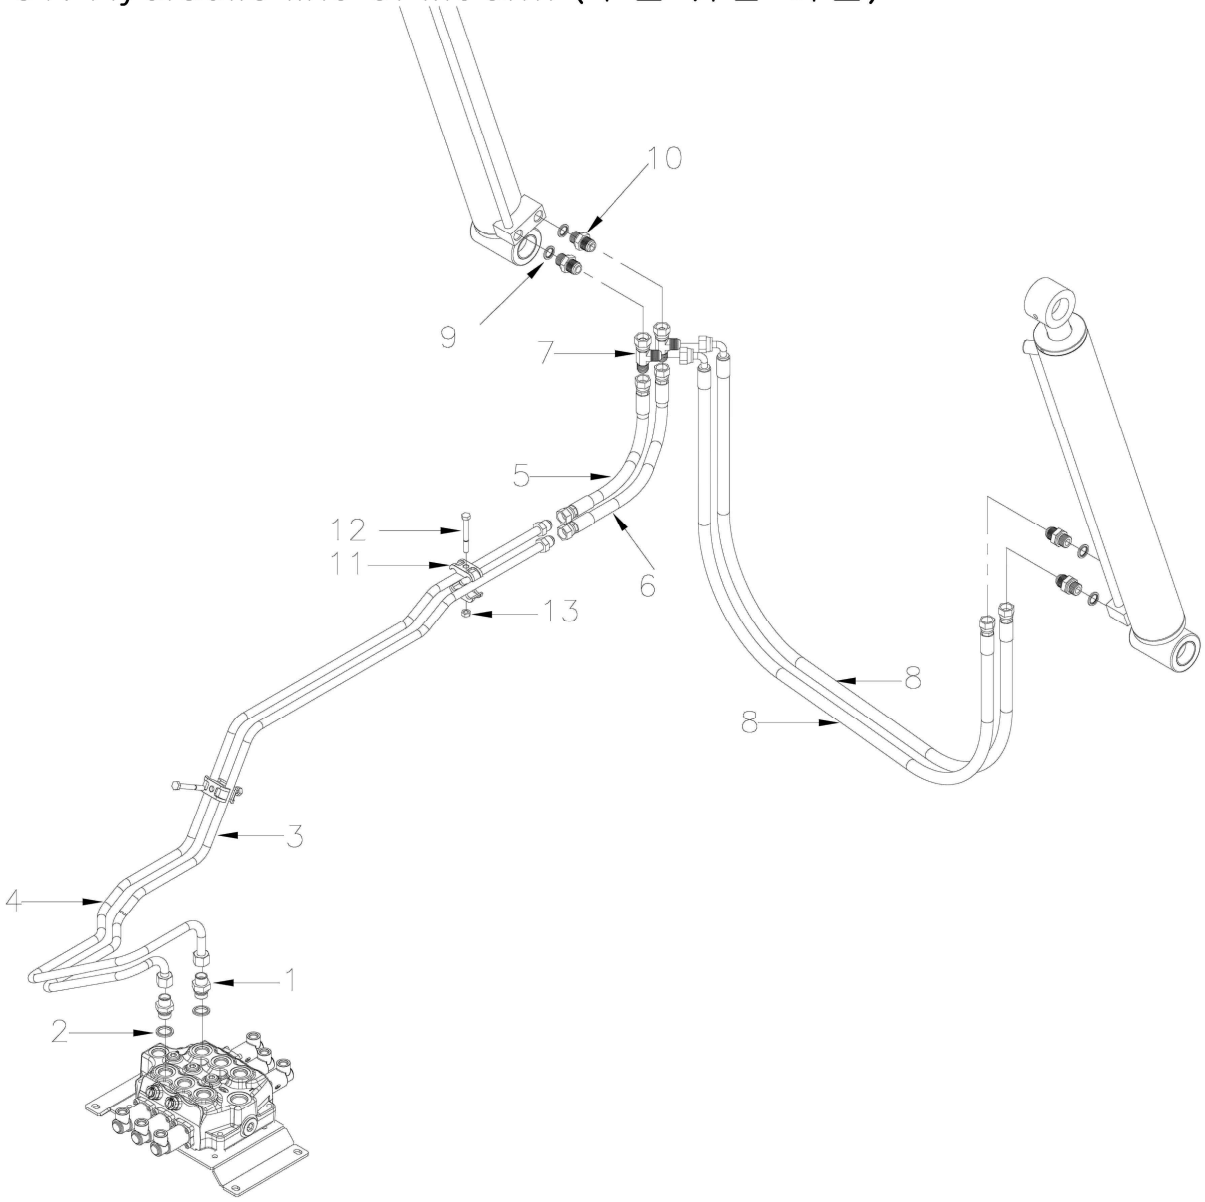


31. Hydraulic line of lift arm (주붐 유압 라인)				
No.	Name	Part No.	Quantity	Remarks
1	Hose nipple, control valve (호스 니쁠, 콘트롤 밸브)	T400T4-3101	1	
2	Bonded seal (본디드 씰)	T400T4-3102	1	
3	Steel pipe (coupling nipple&hose) (철배관(연결니쁠*호스))	T400T4-3103	1	
4	Steel pipe (coupling nipple&hose) (철배관(연결니쁠*호스))	T400T4-3104	2	
5	Hose (Steel pipe*Distributing nipple) (호스(철배관*분배니쁠))	T400T4-3105	1	
6	Hose (Steel pipe*Distributing nipple) (호스(철배관*분배니쁠))	T400T4-3106	12	
7	Distributing nipple (분배 니쁠)	T400T4-3107	12	
8	Hose (coupling nipple*lift cylinder) (호스 (연결니쁠*붐실린더))	T400T4-3108	1	
9	Bonded seal (본디드 씰)	T400T4-3109	1	
10	Hose nipple (호스 니쁠)	T400T4-3110	5	
11	Clamp (크램프)	T400T4-3111	1	
12	Bolt (볼트)	T400T4-3112	1	
13	Nut (너트)	T400T4-3113	1	

32. Hydraulic line of bucket (버켓 유압 라인)

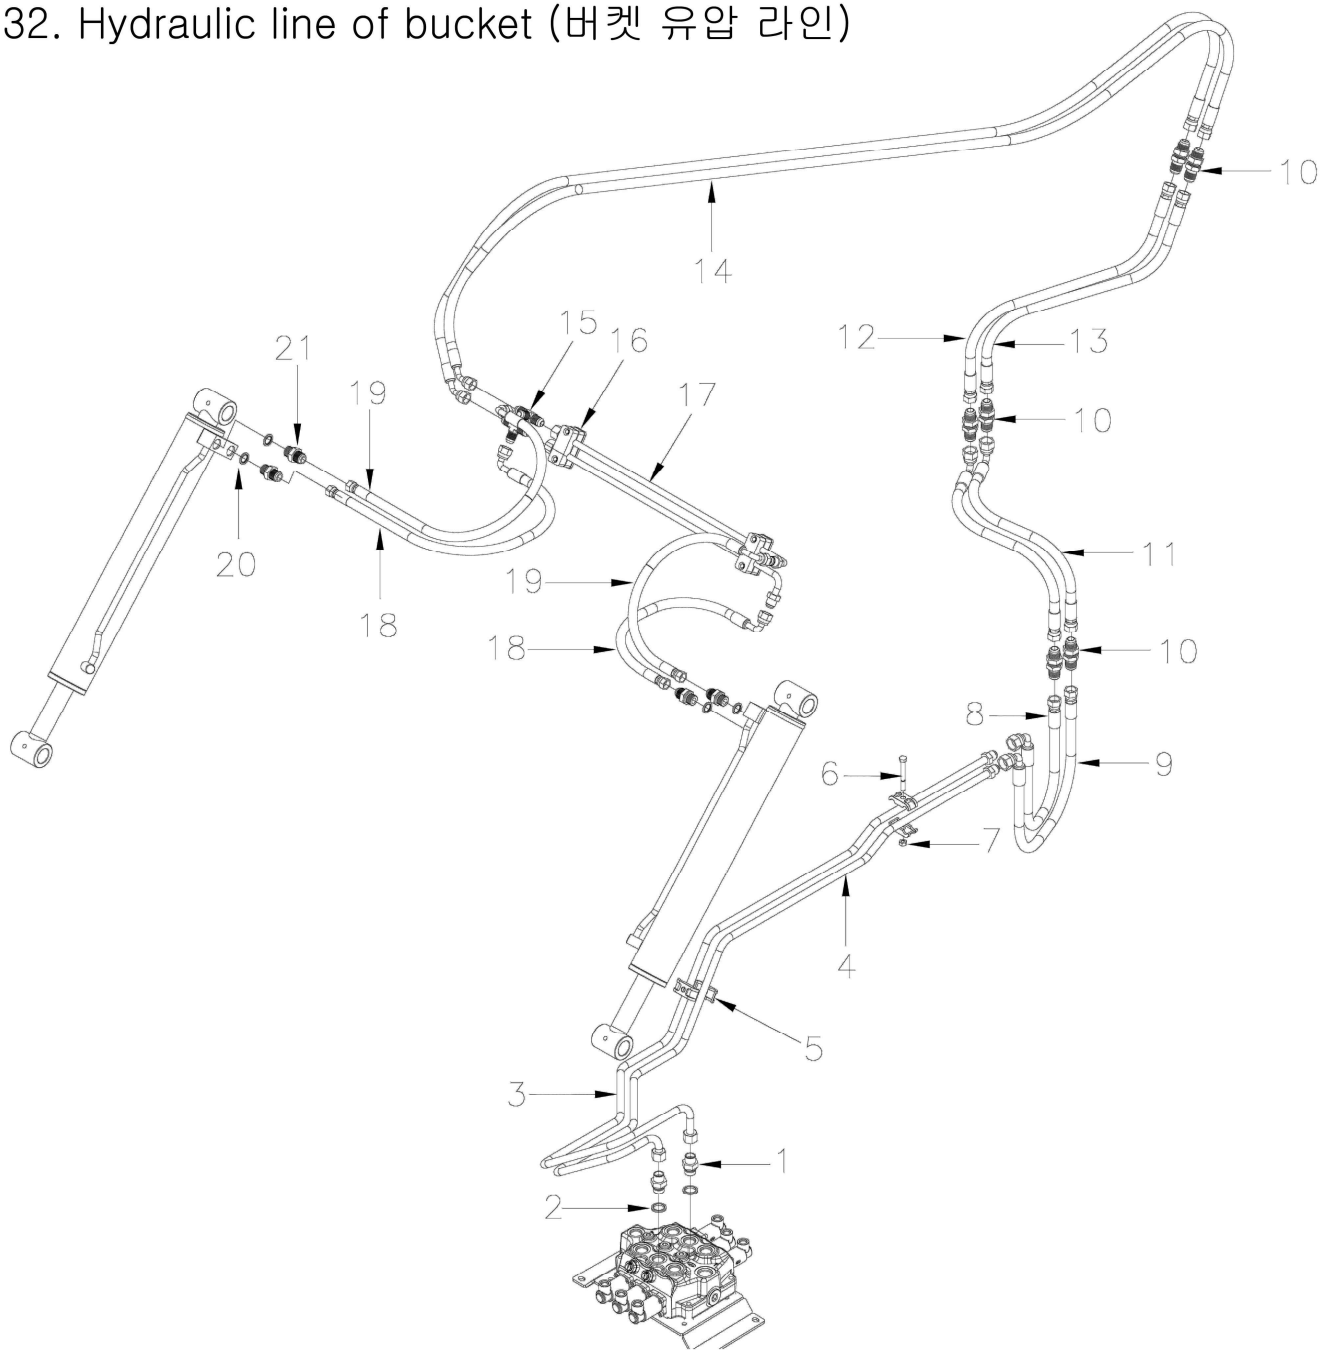


32. Hydraulic line of bucket (버켓 유압 라인)				
No.	Name	Part No.	Quantity	Remarks
1	Hose nipple, control valve (호스 니쁠, 콘트롤 밸브)	T400T4-3201	2	
2	Bonded seal (본디드 씰)	T400T4-3202	2	
3	Steel pipe (coupleing nipple*Hose) (철배관 (연결 니쁠 * 호스))	T400T4-3203	1	
4	Steel pipe (coupleing nipple*Hose) (철배관 (연결 니쁠 * 호스))	T400T4-3204	1	
5	Clamp (클램프)	T400T4-3205	2	
6	Bolt (볼트)	T400T4-3206	2	
7	Nut (너트)	T400T4-3207	2	
8	Hose (coupling nipple*steel pipe) (호스(연결 니쁠* 철배관))	T400T4-3208	1	
9	Hose (coupling nipple*steel pipe) (호스(연결 니쁠*철배관))	T400T4-3209	1	
10	Coupling nipple (연결니쁠)	T400T4-3210	6	
11	Hose (coupling nipple * coupling nipple) (호스 (연결 니쁠*연결니쁠))	T400T4-3211	2	
12	Hose (coupling nipple * coupling nipple) (호스 (연결 니쁠*연결니쁠))	T400T4-3212	1	
13	Hose (coupling nipple * coupling nipple) (호스 (연결 니쁠*연결니쁠))	T400T4-3213	1	
14	Hose (coupling nipple*steel pipe) (호스(연결 니쁠* 철배관))	T400T4-3214	2	
15	Coupling nipple (연결니쁠)	T400T4-3215	2	
16	Clamp (크램프)	T400T4-3216	2	
17	Steel pipe (철 배관)	T400T4-3217	2	
18	Hose (Steel pipe*tilting forward, tilt cylinder) (호스(철배관*버켓실린더 오므림))	T400T4-3218	2	
19	Hose (Steel pipe*curling up, tilt cylinder) (호스(철배관*버켓실린더 펴짐))	T400T4-3219	2	
20	Bonded seal (본디드 씰)	T400T4-3220	4	
21	Hose nipple (호스니쁠)	T400T4-3221	4	

33. Aux. hydraulic line (보조 유압 라인)

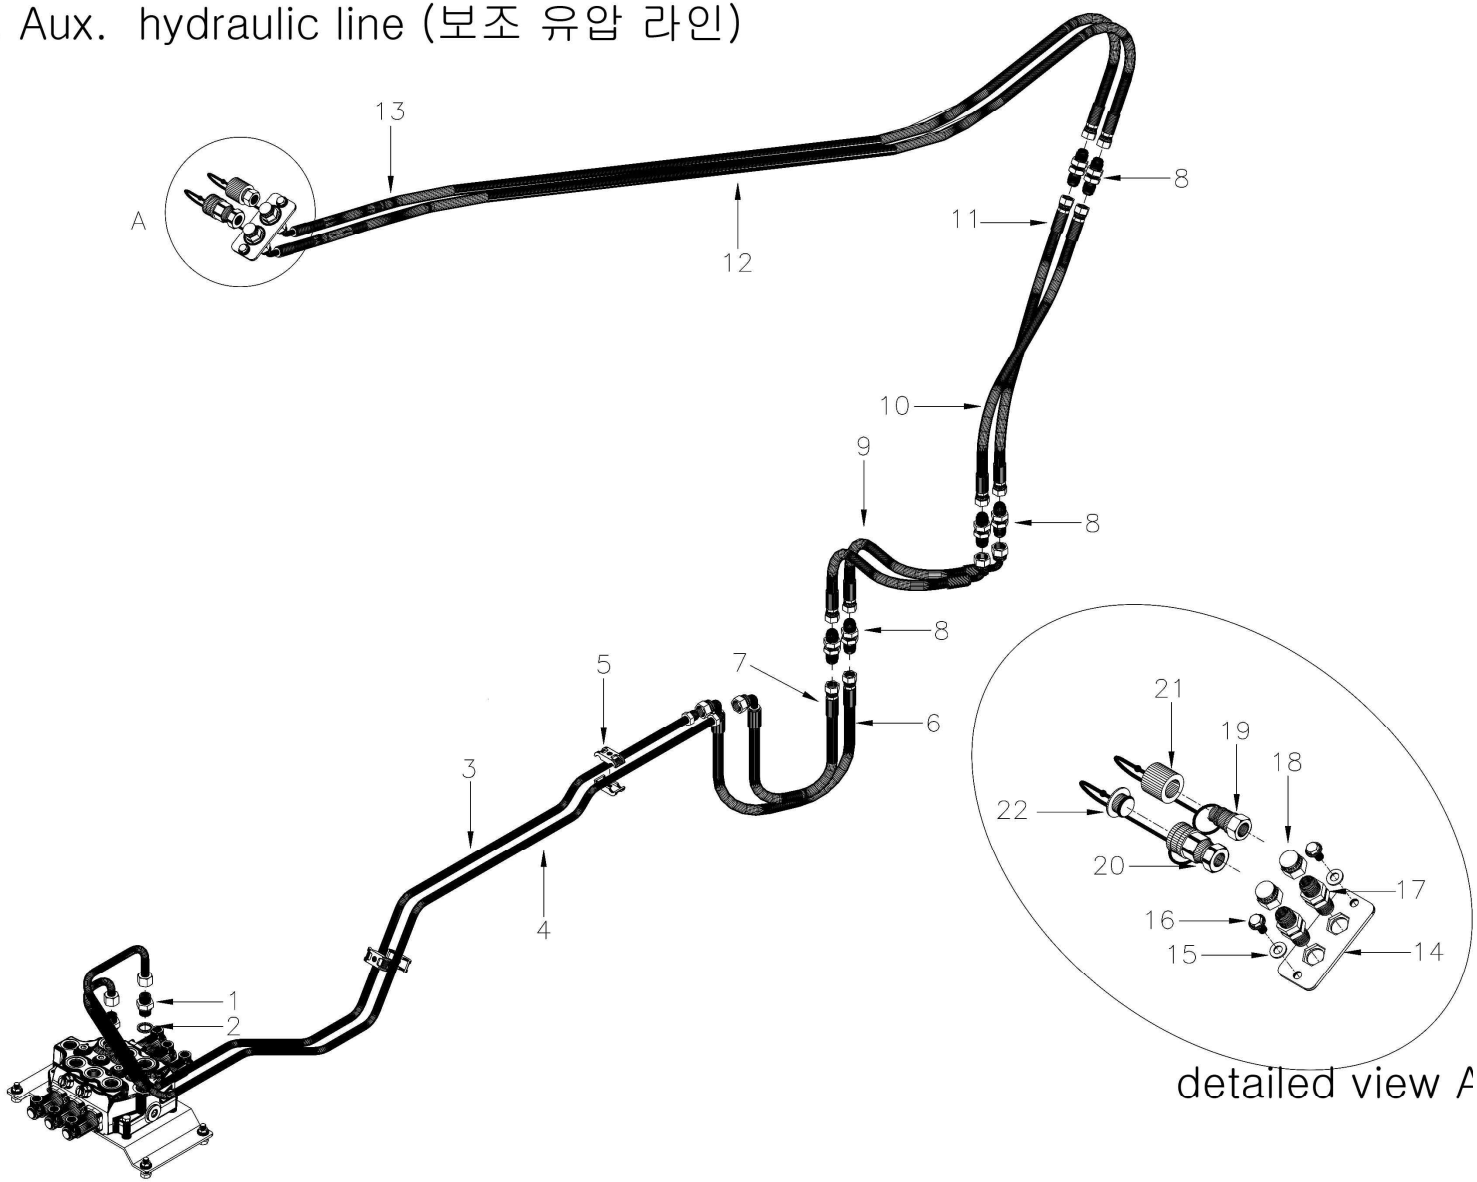


33. Aux. hydraulic line (보조 유압 라인)				
No.	Name	Part No.	Quantity	Remarks
1	Hose nipple ST, control valve (호스니쁠 ST, 콘트롤밸브)	T400T4-3301	2	
2	Bonded seal (본디드 씰)	T400T4-3302	2	
3	Steel pipe (Control valve*distributing nipple) (철배관(콘트롤밸브*분배니쁠))	T400T4-3303	1	
4	Steel pipe (Control valve*distributing nipple) (철배관(콘트롤밸브*분배니쁠))	T400T4-3304	1	
5	Clamp (크램프)	T400T4-3305	2	
6	Hose (Control valve*Coupling nipple) (호스(콘트롤밸브*연결니쁠))	T400T4-3306	1	
7	Hose (Control valve*Coupling nipple) (호스(콘트롤밸브*연결니쁠))	T400T4-3307	1	
8	Hose nipple (호스니쁠)	T400T4-3308	6	
9	Hose (coupling nipple*coupling nipple) (호스(연결니쁠*연결니쁠))	T400T4-3309	2	
10	Hose (coupling nipple*coupling nipple) (호스(연결니쁠*연결니쁠))	T400T4-3310	1	
11	Hose (coupling nipple*coupling nipple) (호스(연결니쁠*연결니쁠))	T400T4-3311	1	
12	Hose (coupling nipple*quick coupling) (호스(연결니쁠*퀵커플링))	T400T4-3312	1	
13	Hose (coupling nipple*quick coupling) (호스(연결니쁠*퀵커플링))	T400T4-3313	1	
14	Fixed plate (고정 판)	T400T4-3314	1	
15	Washer (와셔)	T400T4-3315	2	
16	Bolt (볼트)	T400T4-3316	2	
17	Hose nipple ST (호스니쁠 ST)	T400T4-3317	2	
18	Nipple L (니쁠 L)	T400T4-3318	2	
19	Quick coupling, input (퀵 커플링, 입력)	T400T4-3319	1	
20	Quick coupling, output (퀵 커플링, 출력)	T400T4-3320	1	
21	Cap, Quick coupling, input (퀵 커플링, 입력)-커플링 캡	T400T4-3321	1	
22	Cap, Quick coupling, output (퀵 커플링, 출력)-커플링 캡	T400T4-3322	1	

34. Main hydraulic line (메인 유압 라인)

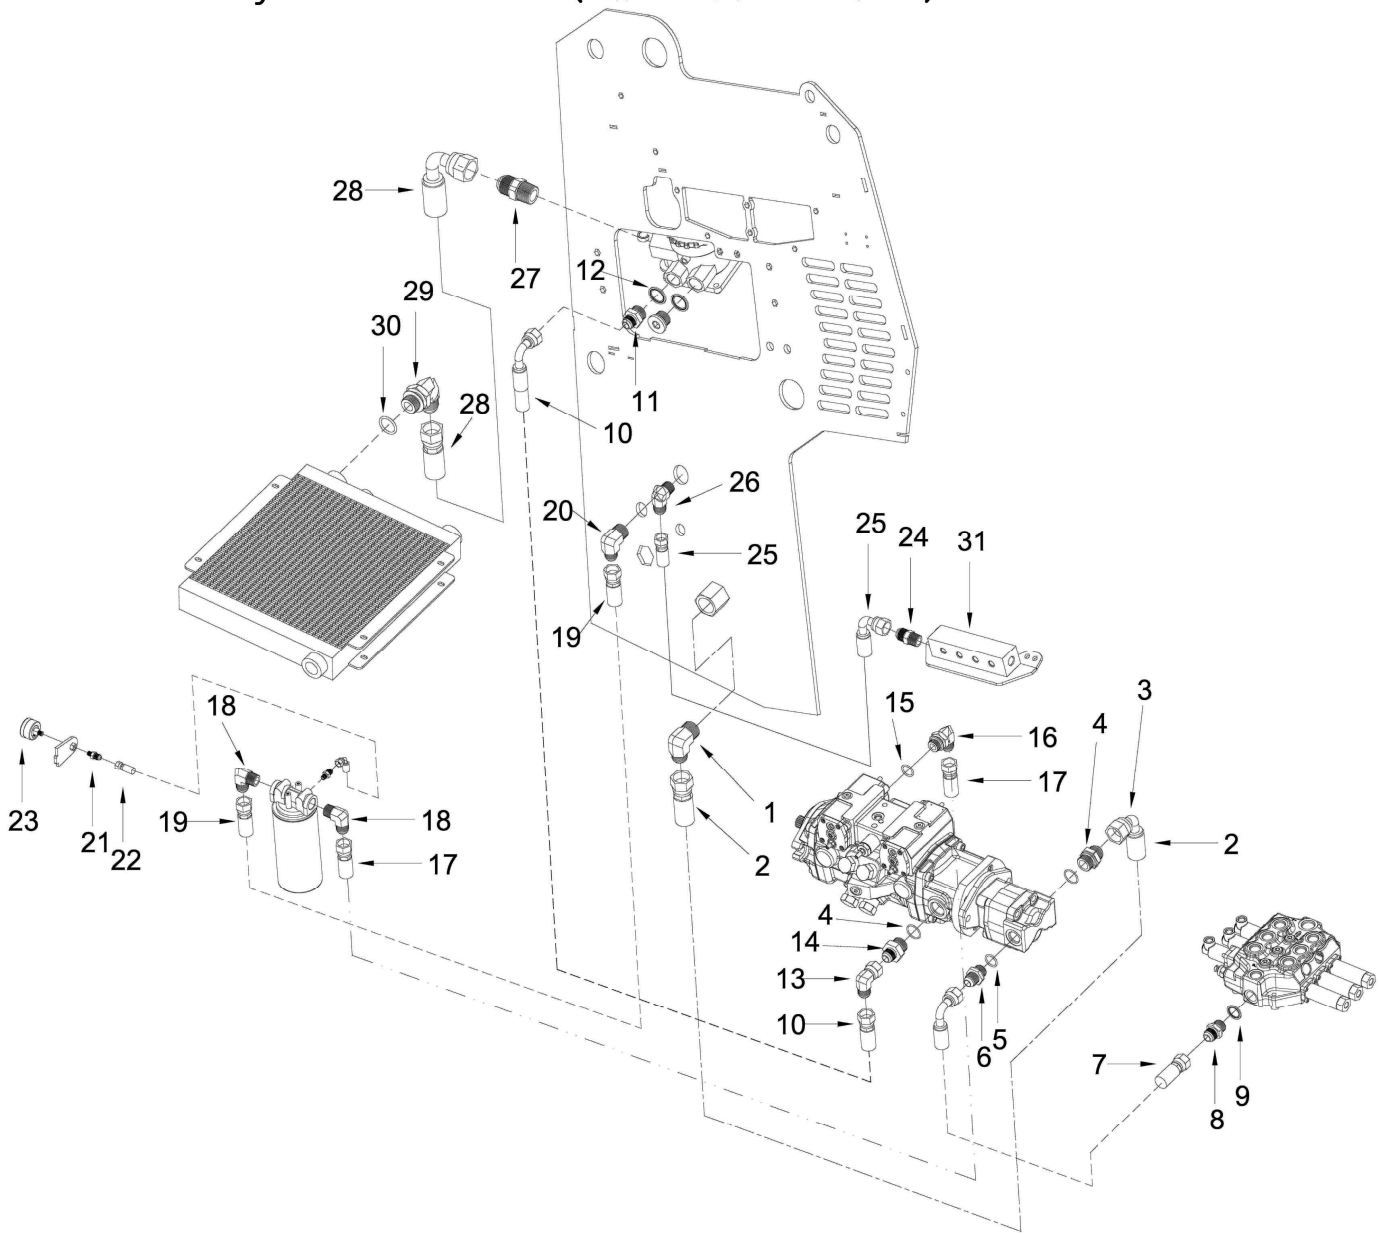


34. Main hydraulic line (메인 유압 라인)				
No.	Name	Part No.	Quantity	Remarks
1	Hose nipple ST, suction filter (셕션 필터용 호스 니쁠 ST)	T400T4-3401	1	
2	Hose (tank*input, Aux. pump) (호스 (탱크*기어 펌프,입력))	T400T4-3402	1	
3	Hose nipple ST, input, Aux. pump ((호스 니쁠 ST, 기어 펌프 입력))	T400T4-3403	1	
4	O-ring (오 링)	T400T4-3404	1	
5	O-ring (오 링)	T400T4-3405	2	
6	Hose nipple ST, output, Aux. pump (호스 니쁠 ST, 기어 펌프 출력)	T400T4-3406	1	
7	Hose (output, aux. pump*input, control valve) (호스(기어 펌프,출력*콘트롤 밸브, 입력))	T400T4-3407	2	
8	Hose nipple ST, control valve (호스 니쁠 ST, 콘트롤 밸브)	T400T4-3408	1	
9	Bonded Seal (본디드씰)	T400T4-3409	1	
10	Bonded Seal (본디드씰)	T400T4-3410	1	
11	Nipple (니쁠)	T400T4-3411	1	
12	Hose (control valve T*input, oil cooler) (호스(콘트롤밸브 T * 쿨러입력))	T400T4-3412	2	
13	Hose nipple (호스니쁠)	T400T4-3413	1	
14	O-ring (오 링)	T400T4-3414	2	
15	Hose (oil cooler*input, dual filter) (호스(오일쿨러*복합필터,입력))	T400T4-3415	2	
16	Hose nipple (호스니쁠)	T400T4-3416	1	
17	Hose nipple (호스니쁠)	T400T4-3417	2	
18	Bonded Seal (본디드씰)	T400T4-3418	2	
19	Hose (output, dual filter*input, chagre pump) (호스(이중필터출력,충전펌프 입력))	T400T4-3419	2	
20	Hose nipple (호스 니쁠)	T400T4-3420	1	
21	Hose (tank*combined pipe T) (호스(탱크*합류관 T))	T400T4-3421	1	
22	Nipple (니쁠)	T400T4-3422	1	
23	Hose (호스)	T400T4-3423	1	
24	Combined pipe assy (합류관 조합)	T400T4-3424	1	

35. Hydraulic line of drive part (구동부 유압 라인)

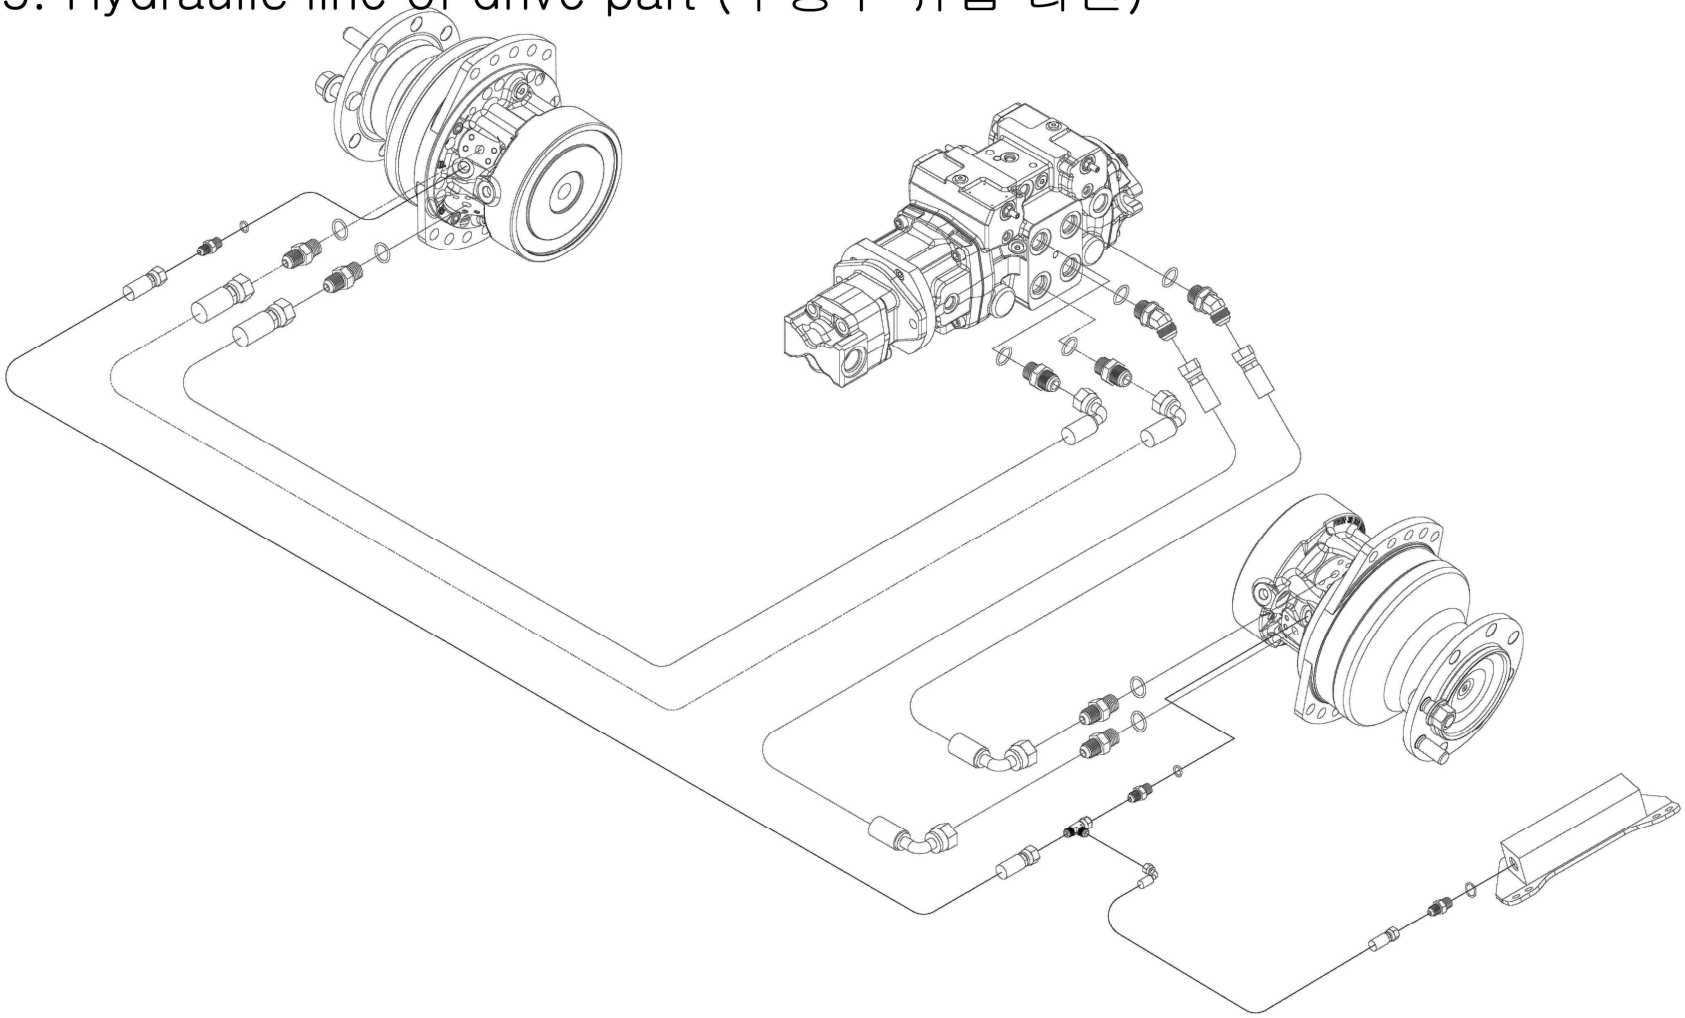


35. Hydraulic line of drive part (구동부 유압 라인)				
No.	Name	Part No.	Quantity	Remarks
1	Hose nipple ST, drive pump (구동 펌프 2*호스 니쁠 ST)	T400T4-3501	2	
2	O-ring (오 링)	T400T4-3502	4	
3	Hose (drive pump 2*drive motor RH,lower) (호스 (구동 펌프 2*구동 모터) RH-하)	T400T4-3503	2	
4	Hose nipple T, charge motor (구동 모터 호스 니쁠)	T400T4-3504	2	
5	Hose (drive pump 2*drive motor RH, upper) (호스 (구동 펌프 2*구동 모터) RH-상)	T400T4-3505	4	
6	Hose nipple EL, charge pump (충전펌프 호스 니쁠 EL)	T400T4-3506	2	
7	Hose (drive pump 1*drive motor LH, upper) (호스 (구동 펌프 1*구동 모터) LH-상)	T400T4-3507	4	
8	Hose (drive pump 1*drive motor LH, lower) (호스 (구동 펌프 1*구동 모터) LH-하)	T400T4-3508	2	
9	O-ring (오 링)	T400T4-3509	2	
10	Hose nipple, charge pump (충전 펌프 호스 니쁠)	T400T4-3510	2	
11	Hose (drain, drive motor*coupling nipple) (호스(구동모터 드레인*연결니쁠))	T400T4-3511	2	
12	Hose (coupling nipple*combined pipe) (호스(연결니쁠 * 합류관))	T400T4-3512	2	
13	Hose nipple T (drive motor*combined pipe) (호스니쁠 t (구동 모터*합류관))	T400T4-3513	1	
14	Hose nipple (호스니쁠)	T400T4-3514	1	
15	Hose (coupling nipple*combined pipe) (호스(연결니쁠 * 합류관))	T400T4-3515	1	
16	Hose nipple (호스니쁠)	T400T4-3516	1	
17	O-ring (오 링)	T400T4-3517	1	

36. Hydraulic line of hyd' parking brake (유압주차브레이크 유압라인)

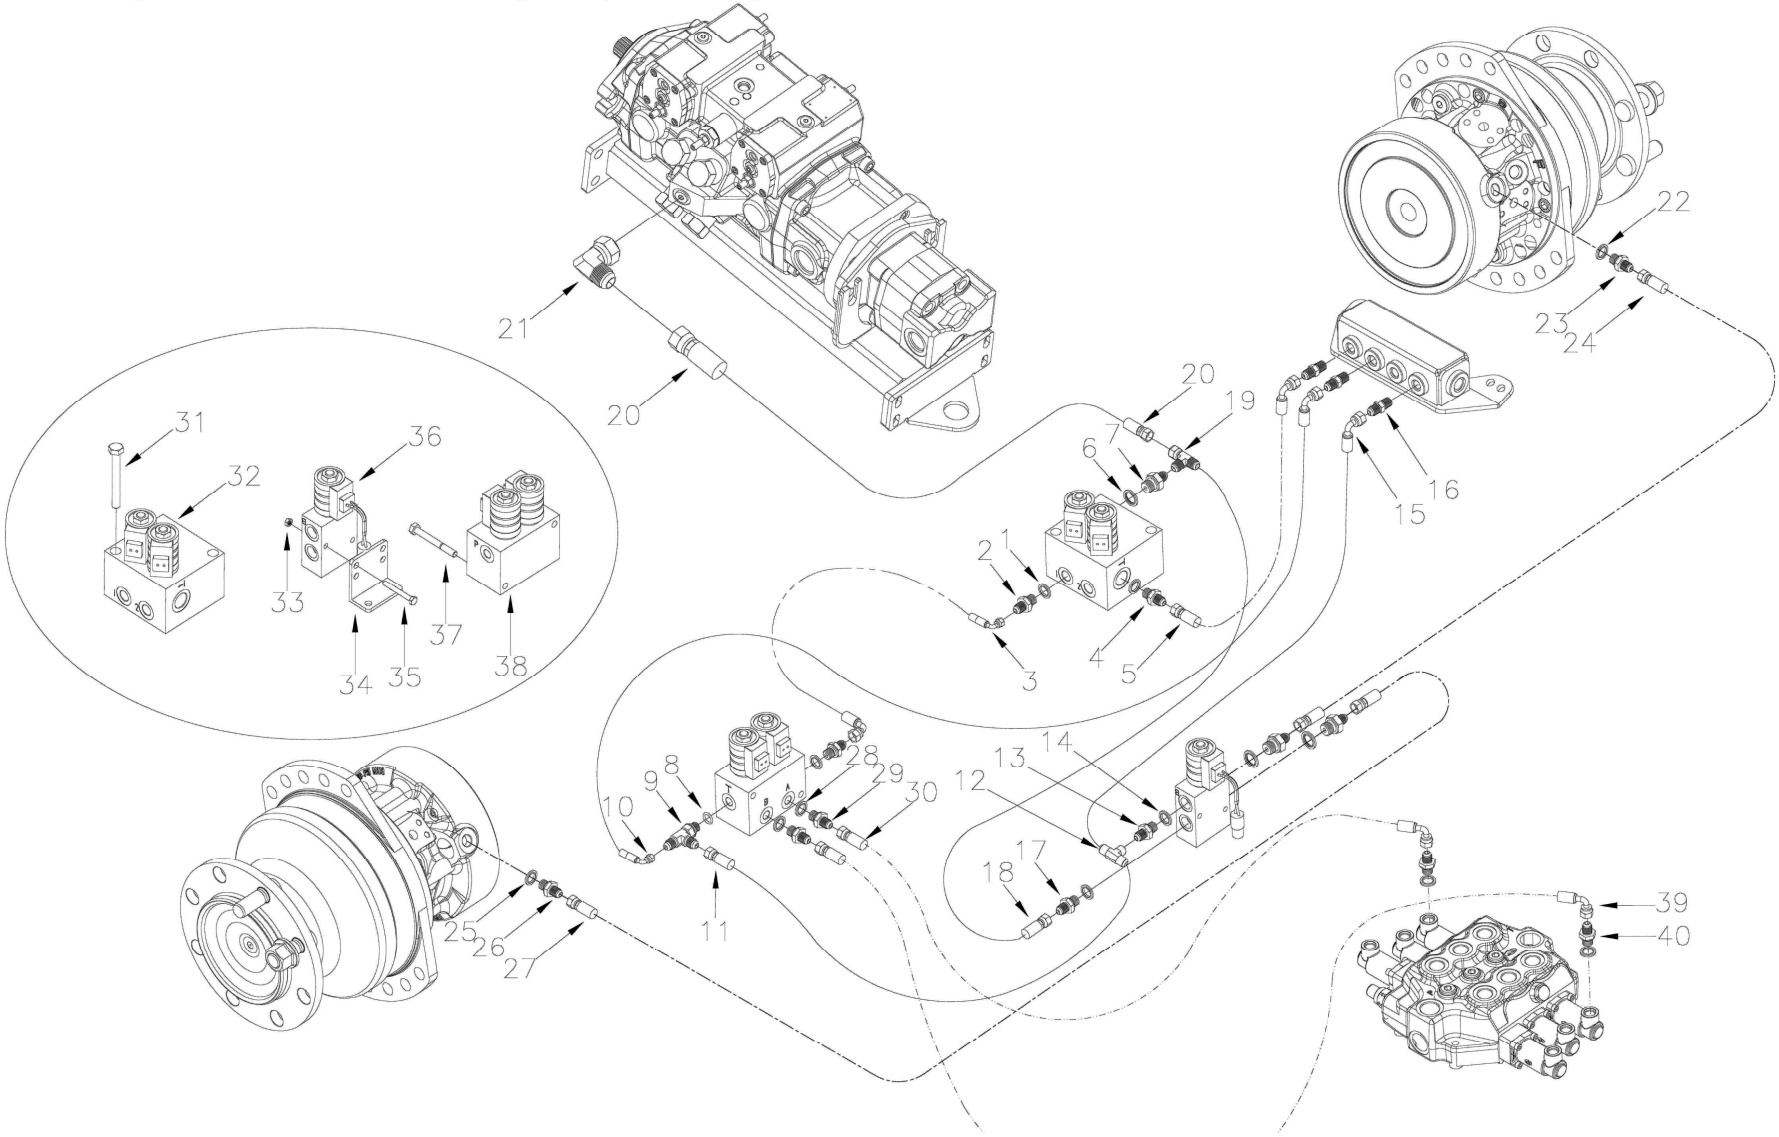


36. Hydraulic line of hyd' parking brake (유압주차브레이크 유압라인)				
No.	Name	Part No.	Quantity	Remarks
1	O-ring (오 링)	T400T4-3601	2	
2	Hose nipple ST (main solenoid valve*hydraulics solenoid valve) (호스니쁠 ST (메인쏠밸브*보조유압쏠밸브))	T400T4-3602	2	
3	Hose (main solenoid valve*aux. solenoid valve) (호스(메인쏠밸브*보조유압쏠밸브))	T400T4-3603	2	
4	Hose nipple ST (main solenoid valve T*combined pipe4) (호스니쁠 ST (메인쏠밸브*합류관 4))	T400T4-3604	2	
5	Hose (main solenoid valve T,combined pipe4) (호스(메인쏠밸브*합류관 4))	T400T4-3605	2	
6	O-ring (오 링)	T400T4-3606	2	
7	Hose nipple ST (main solenoid valve* safety solenoid valve*charge pump G1) (호스니쁠 ST (메인쏠밸브*안전쏠밸브 5 구*차지펌프 G1))	T400T4-3607	1	
8	O-ring (오 링)	T400T4-3608	1	
9	Distributing nipple T (분배니쁠 T)	T400T4-3609	1	
10	Hose (aux. solenoid valve T *combined pipe3) (호스(보조유압쏠밸브 T*합류관 3))	T400T4-3610	2	
11	Hose (aux. solenoid valve T*safety solenoid valve*combined pipe1) (호스(보조유압쏠밸브 T*안전쏠밸브 5 구*합류관 1))	T400T4-3611	1	
12	Distributing nipple T (분배니쁠 T)	T400T4-3612	1	
13	Hose nipple ST (aux. solenoid valve T*safety solenoid valve*combined pipe1) (호스니쁠 ST (보조유압쏠밸브 T*안전쏠밸브 5 구*합류관 1))	T400T4-3613	1	
14	O-ring (오 링)	T400T4-3614	2	
15	Hose (combined pipe1*safety solenoid valve*aux. solenoid valve T) (호스(합류관 1*안전쏠밸브 5 구*보조유압쏠밸브 T))	T400T4-3615	1	
16	Hose nipple ST (combined pipe1*safety solenoid valve*aux. solenoid valve T) (호스니쁠 St (합류관 1*안전쏠밸브 5 구*보조유압쏠밸브 T))	T400T4-3616	3	
17	Hose nipple ST (safety solenoid valve*main solenoid valve*charge pump G1) (호스니쁠 St (안전쏠밸브 5 구*메인쏠밸브*차지펌프 G1))	T400T4-3617	1	

36. Hydraulic line of hyd' parking brake (유압주차브레이크 유압라인)

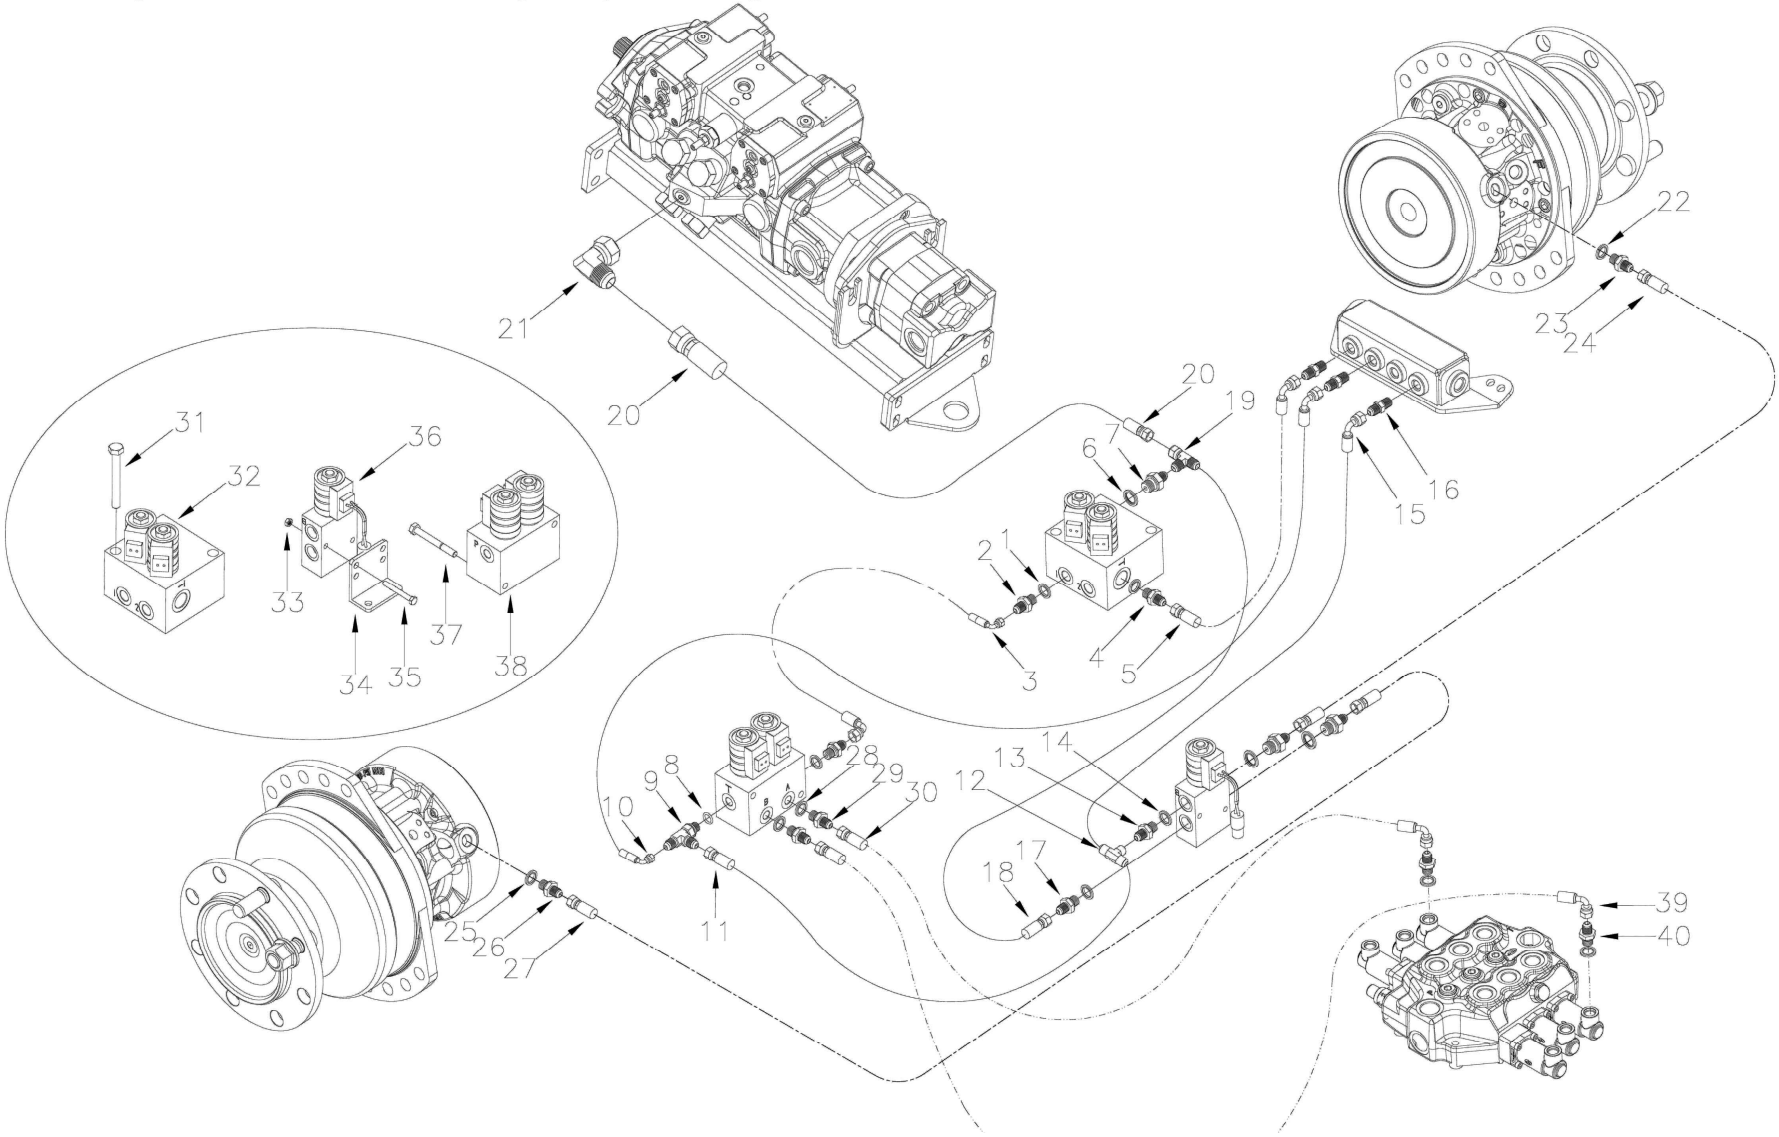


36. Hydraulic line of hyd' parking brake (유압주차브레이크 유압라인) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
18	Hose (safety solenoid valve*main solenoid valve*charge pump G1) (호스(안전쏠밸브 5 구*메인쏠밸브*차지펌프 G1))	T400T4-3618	1	
19	Distributing nipple T (분배니쁠 T)	T400T4-3619	1	
20	Hose (main solenoid valve*safety solenoid valve*charge pump G1) (호스(메인쏠밸브*안전쏠밸브 5 구*차지펌프 G1))	T400T4-3620	2	
21	Coupling nipple (연결 니쁠)	T400T4-3621	1	
22	O-ring (오 링)	T400T4-3622	2	
23	Hose nipple ST (safety solenoid valve*drive motor LH) 호스니쁠 St (안전쏠밸브 5 구*구동모터 좌)	T400T4-3623	2	
24	Hose (safety solenoid valve*drive motor LH) (호스(안전쏠밸브 5 구*구동모터 좌))	T400T4-3624	2	
25	O-ring (오링)	T400T4-3625	2	
26	Hose nipple ST (safety solenoid valve*drive motor RH) (호스니쁠 St (안전쏠밸브 5 구*구동모터 우))	T400T4-3626	2	
27	Hose (safety solenoid valve*drive motor RH) (호스(안전쏠밸브 5 구*구동모터 우))	T400T4-3627	2	
28	O-ring (오링)	T400T4-3628	4	
29	Hose nipple ST (aux. solenoid valve A*control Valve) (호스니쁠 St (보조유압쏠밸브 A*콘트롤밸브))	T400T4-3629	2	
30	Hose (aux. solenoid valve A*control Valve) (호스(보조유압쏠밸브 A*콘트롤밸브))	T400T4-3630	2	
31	Bolt (볼트)	T400T4-3631	2	
32	Main solenoid valve (메인 쏠밸브)	T400T4-3632	1	
33	Nut (너트)	T400T4-3633	2	
34	Fixed plate for 4way valve (4WAY 밸브 고정판)	T400T4-3634	1	
35	Bolt (볼트)	T400T4-3635	2	
36	Safety solenoid valve (안전쏠밸브 5 구)	T400T4-3636	1	
37	Bolt (볼트)	T400T4-3637	2	

36. Hydraulic line of hyd' parking brake (유압주차브레이크 유압라인)

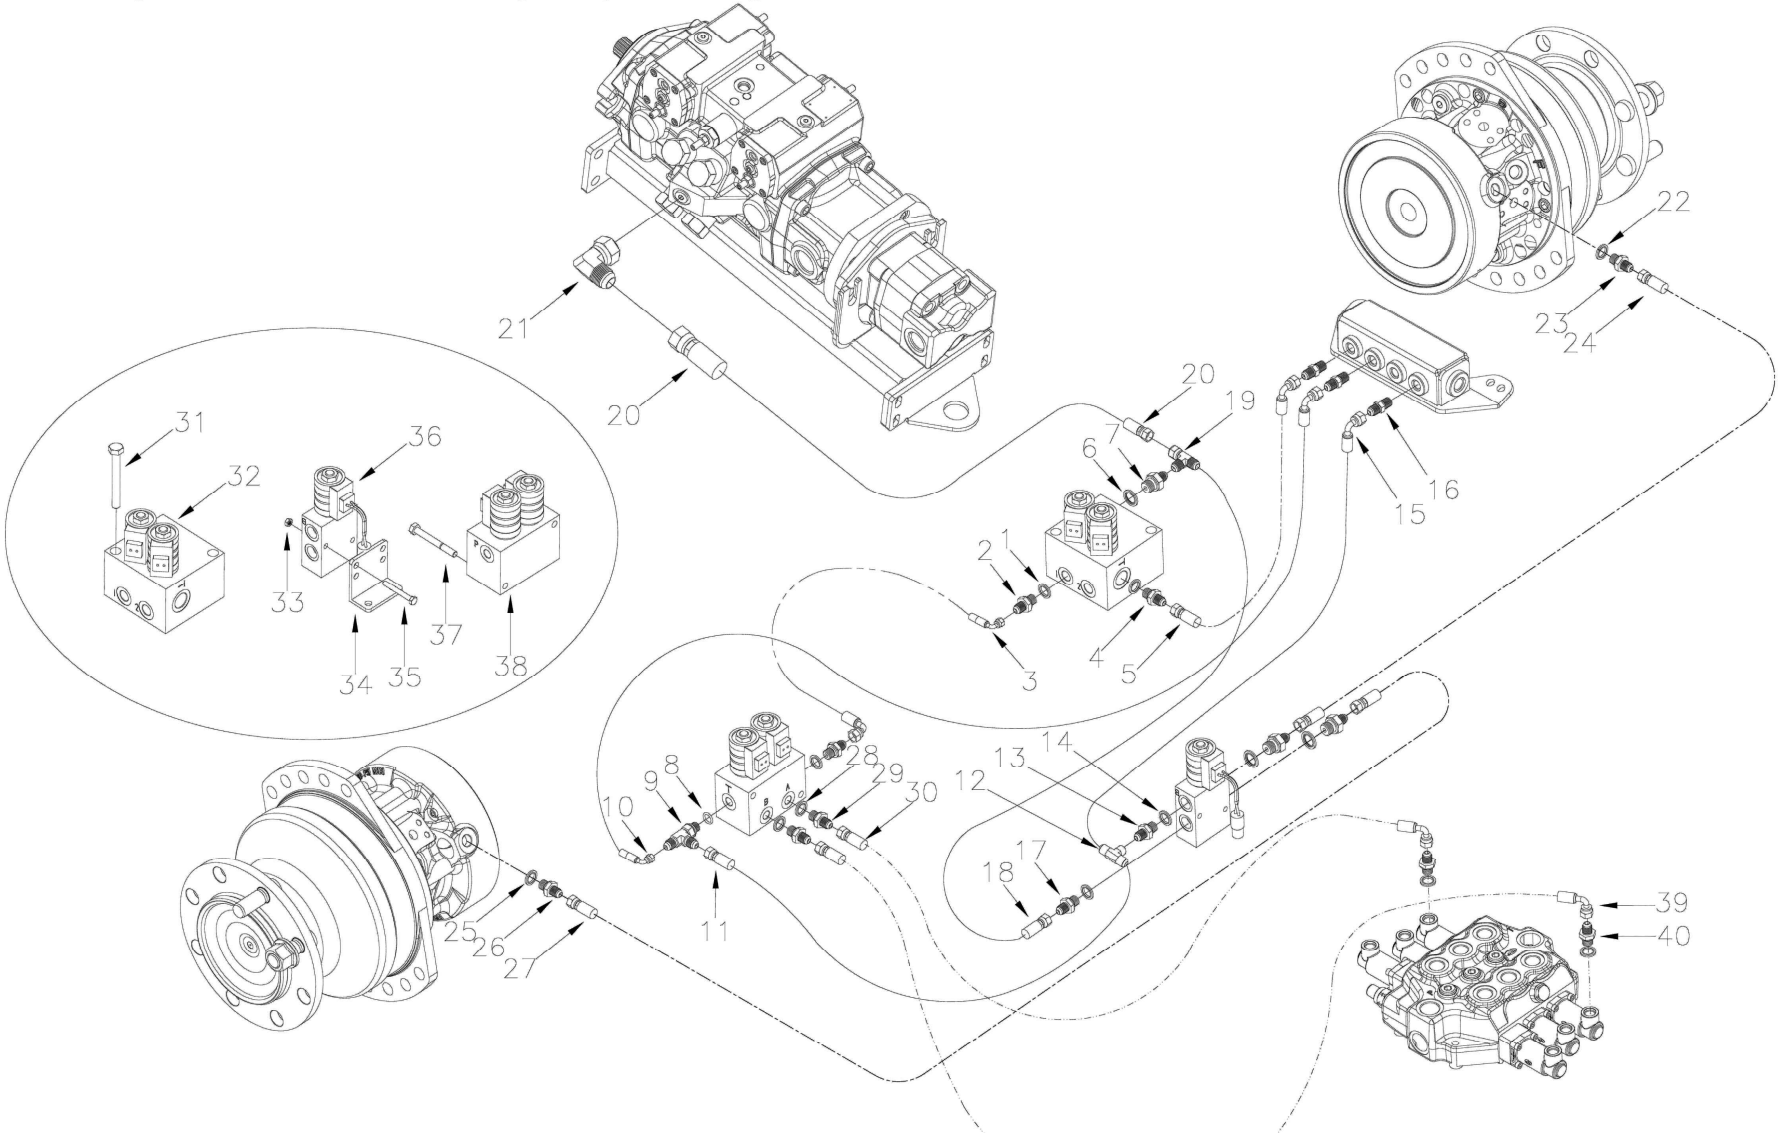


36. Hydraulic line of hyd' parking brake (유압주차브레이크 유압라인) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
38	Aux. solenoid valve (보조 쏠 밸브)	T400T4-3638	1	
39	Hose (aux. solenoid valve B*control Valve) (호스(보조유압쏠밸브 B*콘트롤밸브))	T400T4-3639	2	
40	Hose nipple ST (aux. solenoid valve B*control Valve) (호스 니쁠 St (보조유압쏠밸브 B*콘트롤밸브))	T400T4-3640	2	

37. Hydraulic line of high flow system (하이플로우 유압라인)

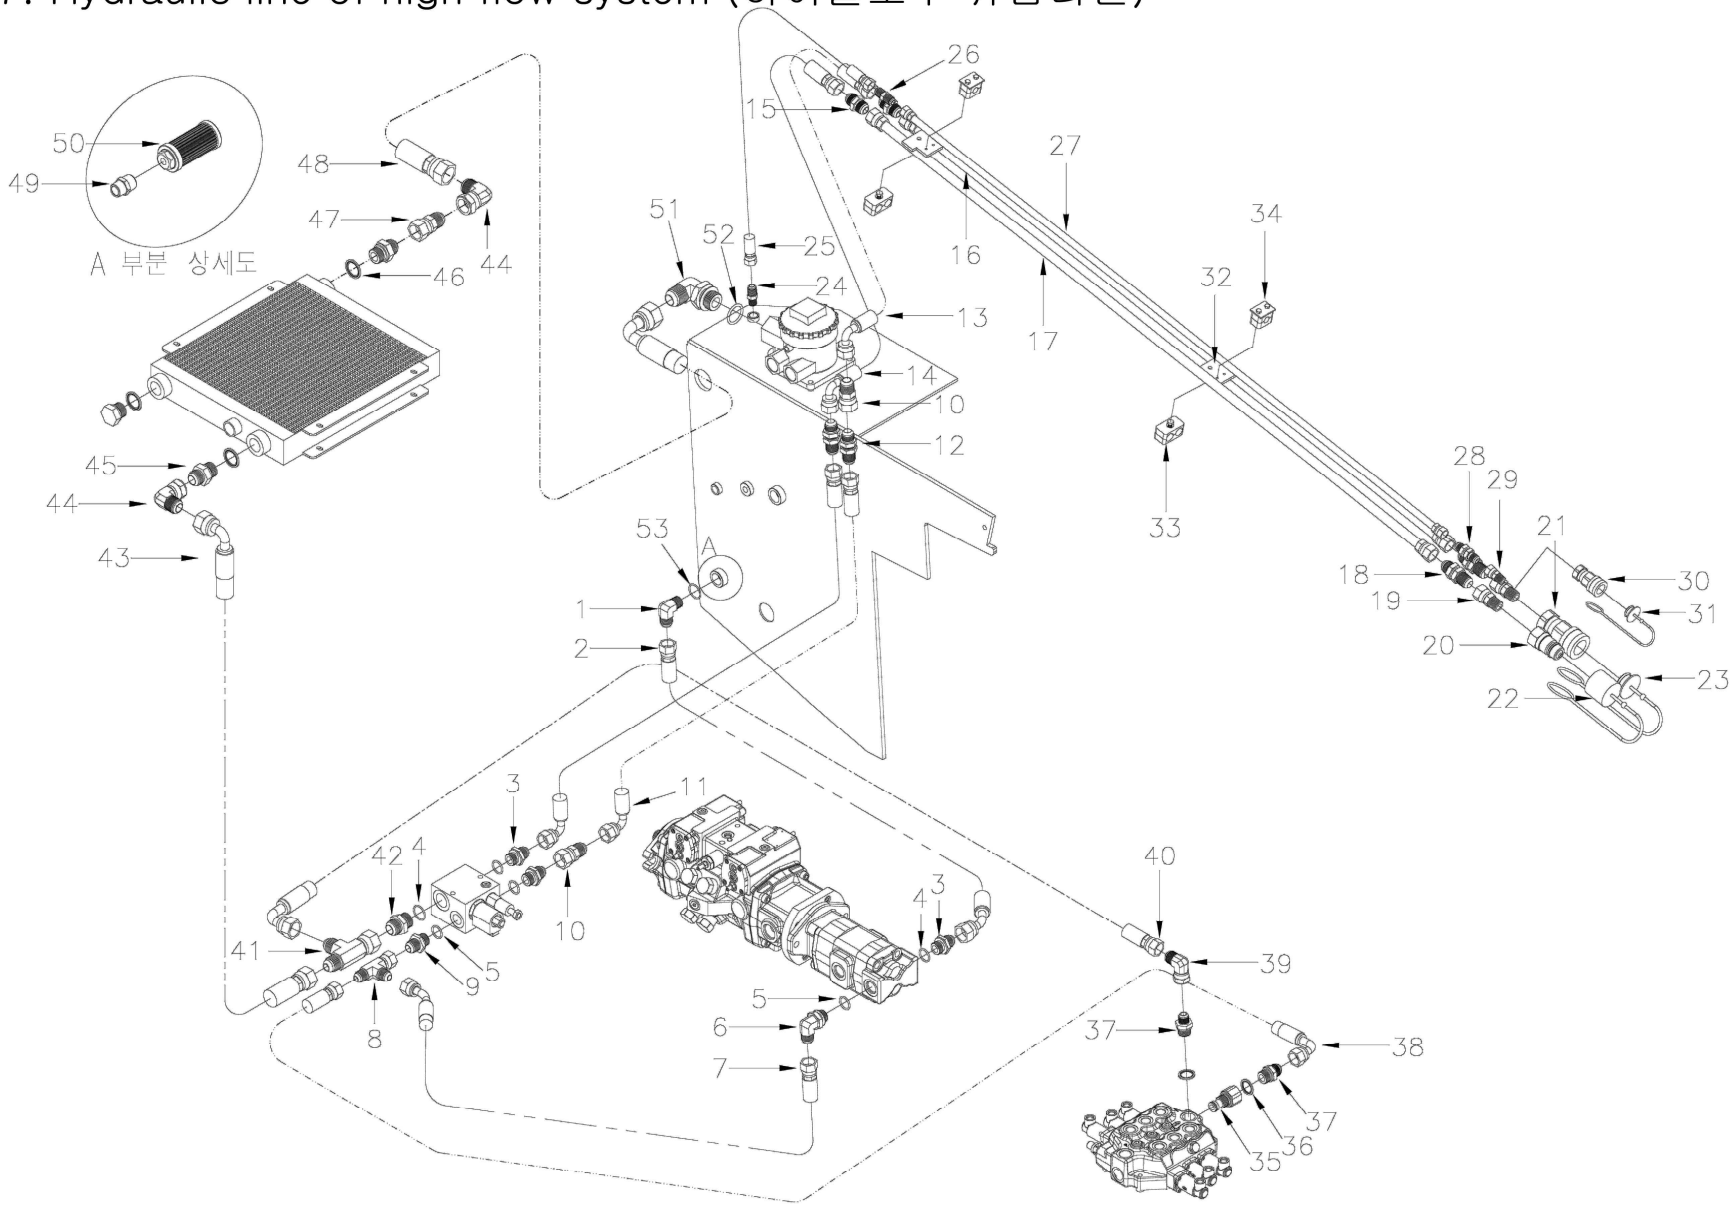


37. Hydraulic line of high flow system (하이플로우 유압라인)				
No.	Name	Part No.	Quantity	Remarks
1	Nipple L (니쁠 L)	T400T4-3701	1	
2	Hose (hose nipple*pressure oil tank) (호스(연결니쁠*유압탱크))	T400T4-3702	1	
3	Nipple (니쁠)	T400T4-3703	2	
4	O-ring (오 링)	T400T4-3704	3	
5	O-ring (오 링)	T400T4-3705	3	
6	Hose nipple L, output, Aux. pump (호스니쁠 L, 기어펌프 출력)	T400T4-3706	1	
7	Hose (Pressure oil pump*distributing Nipple EL) (호스(유압펌프 출력 * 분배 니쁠 EL))	T400T4-3707	1	
8	Distributing nipple T (분배 니쁠 T)	T400T4-3708	1	
9	Nipple (니쁠)	T400T4-3709	1	
10	Coupling nipple (연결 니쁠)	T400T4-3710	2	
11	Hose (high-flow block*coupling nipple) (호스(하이플로우블럭*연결니쁠))	T400T4-3711	2	
12	Coupling nipple (연결 니쁠)	T400T4-3712	2	
13	Hose (coupling nipple*high-flow steel pipe) (호스(연결니쁠*하이플로우 철파이프))	T400T4-3713	1	
14	Hose (coupling nipple*high-flow steel pipe) (호스(연결니쁠*하이플로우 철파이프))	T400T4-3714	1	
15	Coupling nipple (연결 니쁠)	T400T4-3715	2	
16	Hose (coupling nipple*steel pipe) (호스(연결니쁠*철배관))	T400T4-3716	1	
17	Hose (coupling nipple*steel pipe) (호스(연결니쁠*철배관))	T400T4-3717	1	
18	Coupling nipple (연결 니쁠)	T400T4-3718	2	
19	Coupling nipple (연결 니쁠)	T400T4-3719	2	
20	Quick coupling, input (퀵 커플링, 출력)	T400T4-3720	1	
21	Quick coupling, output (퀵 커플링, 입력)	T400T4-3721	1	
22	Cap, Quick coupling, input (퀵 커플링, 출력)-커프링 캡	T400T4-3722	1	
23	Cap, Quick coupling, output (퀵 커플링, 입력)-커프링 캡	T400T4-3723	1	
24	Nipple (니쁠)	T400T4-3724	1	
25	Hose (pressure oil tank*high-flow steel pipe) (호스 (유압탱크*하이플로우 철파이프))	T400T4-3725	1	

37. Hydraulic line of high flow system (하이플로우 유압라인)

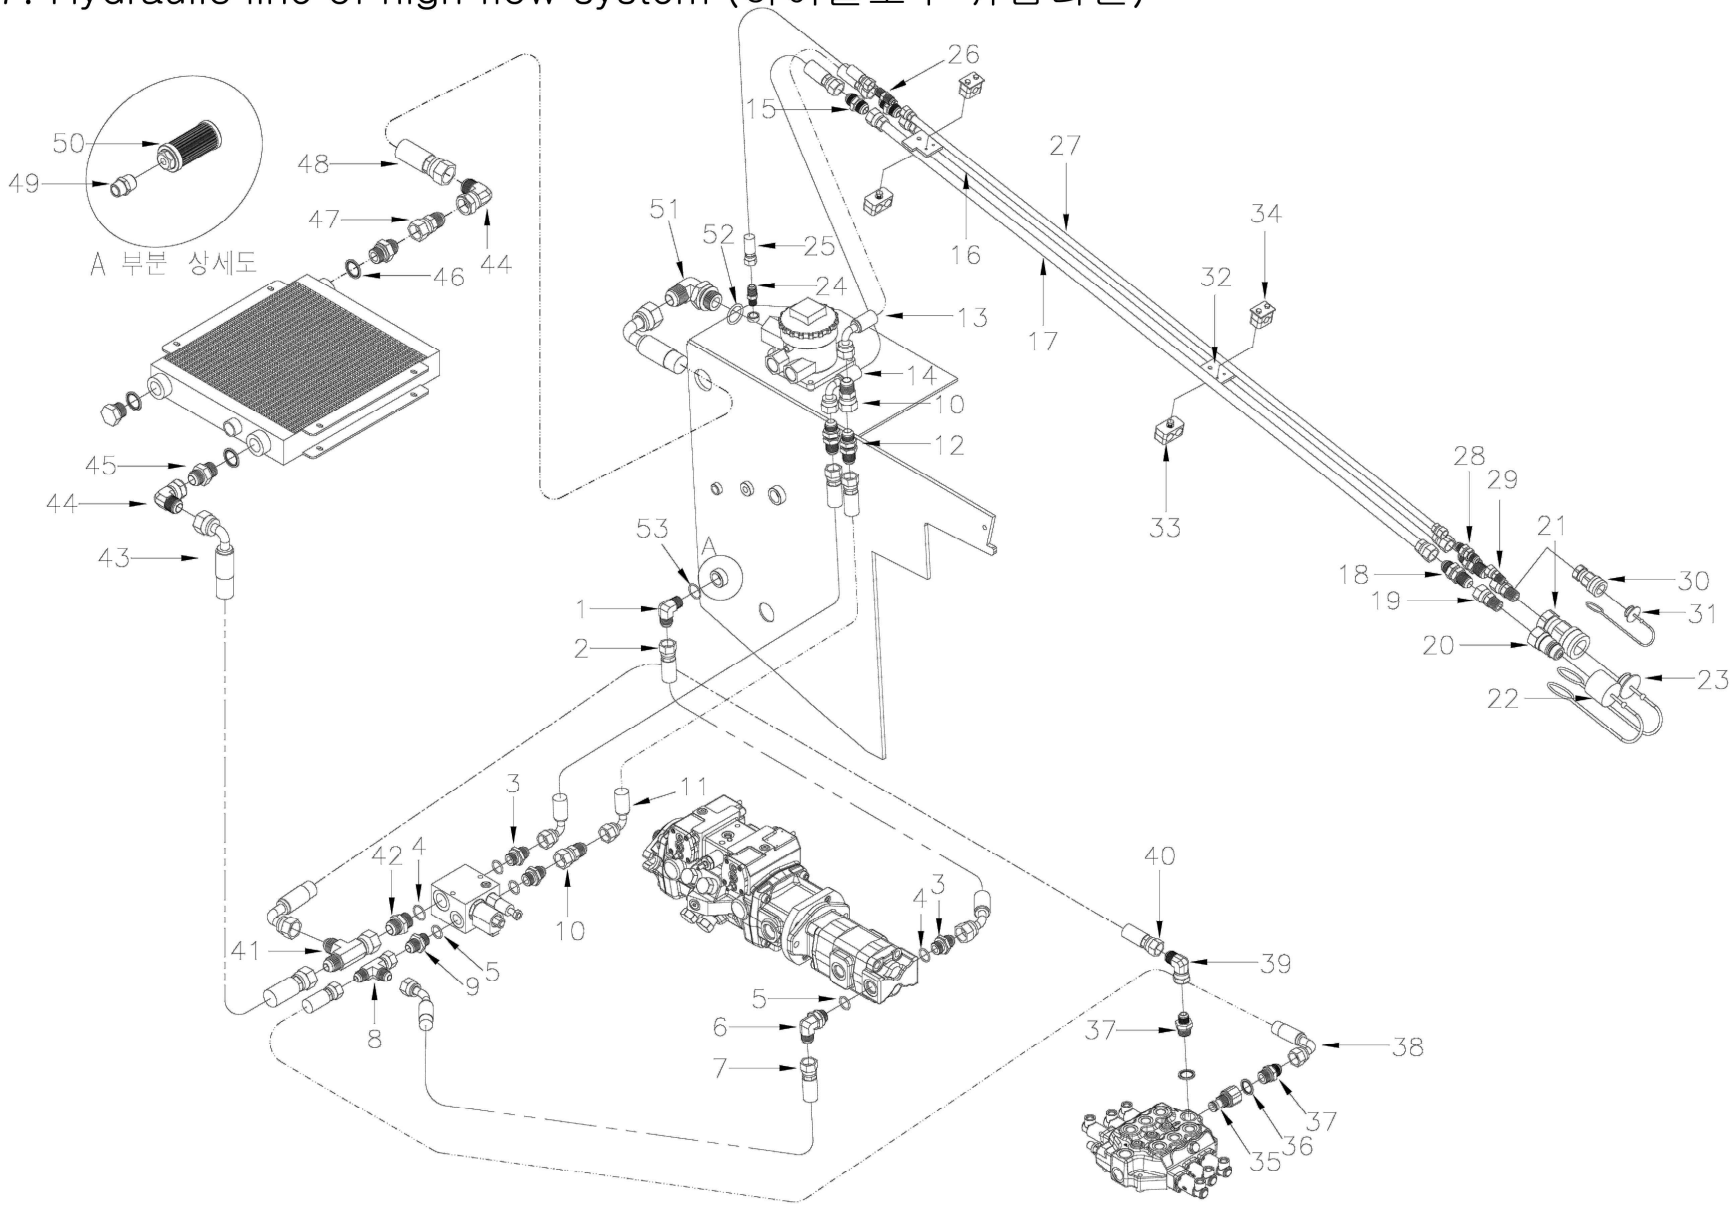


37. Hydraulic line of high flow system (하이플로우 유압라인) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Coupling nipple (연결 니쁠)	T400T4-3726	1	
27	Hose (coupling nipple*steel pipe) (호스(연결니쁠*철배관))	T400T4-3727	1	
28	Coupling nipple (연결 니쁠)	T400T4-3728	1	
29	Coupling nipple (연결 니쁠)	T400T4-3729	1	
30	Quick coupling, input (퀵 커플링, 입력)	T400T4-3730	1	
31	Cap, Quick coupling, input (퀵 커플링, 입력)-커프링 캡	T400T4-3731	1	
32	A Fixed plate (고정판)	T400T4-3732	2	
33	Pipe Clamp (크램프)	T400T4-3733	2	
34	Pipe Clamp (크램프)	T400T4-3734	2	
35	Carry over (캐리오버)	T400T4-3735	1	
36	Bonded Seal (본디드 씰)	T400T4-3736	2	
37	Nipple (니쁠)	T400T4-3737	2	
38	Hose (mcv carry over*distributing nipple ST) 호스(MCV 캐리오버*분배니쁠 ST)	T400T4-3738	1	
39	Coupling nipple L (연결 니쁠 L)	T400T4-3739	1	
40	Hose (control valve*distributing Nipple EL) (호스(컨트롤밸브*분배니쁠 EL))	T400T4-3740	1	
41	Distributing nipple t (분배 니쁠 T)	T400T4-3741	1	
42	Nipple (니쁠)	T400T4-3742	1	
43	Hose (high-flow block*Oil cooler (electric)) (호스(하이플로우블럭*오일쿨러))	T400T4-3743	1	
44	Nipple (니쁠)	T400T4-3744	2	
45	O-ring (오 링)	T400T4-3745	2	
46	Bonded seal (본디드 씰)	T400T4-3746	3	
47	Coupling nipple (연결 니쁠)	T400T4-3747	1	
48	Hose (Oil cooler (electric)*daul filter) (호스(오일쿨러(전기식)*복합필터))	T400T4-3748	1	
49	Nipple (니쁠)	T400T4-3749	1	
50	Suction filter for hyd' oil (hyd' oil filter) (셕션필터, 유압)	T400T4-3750	1	

37. Hydraulic line of high flow system (하이플로우 유압라인)

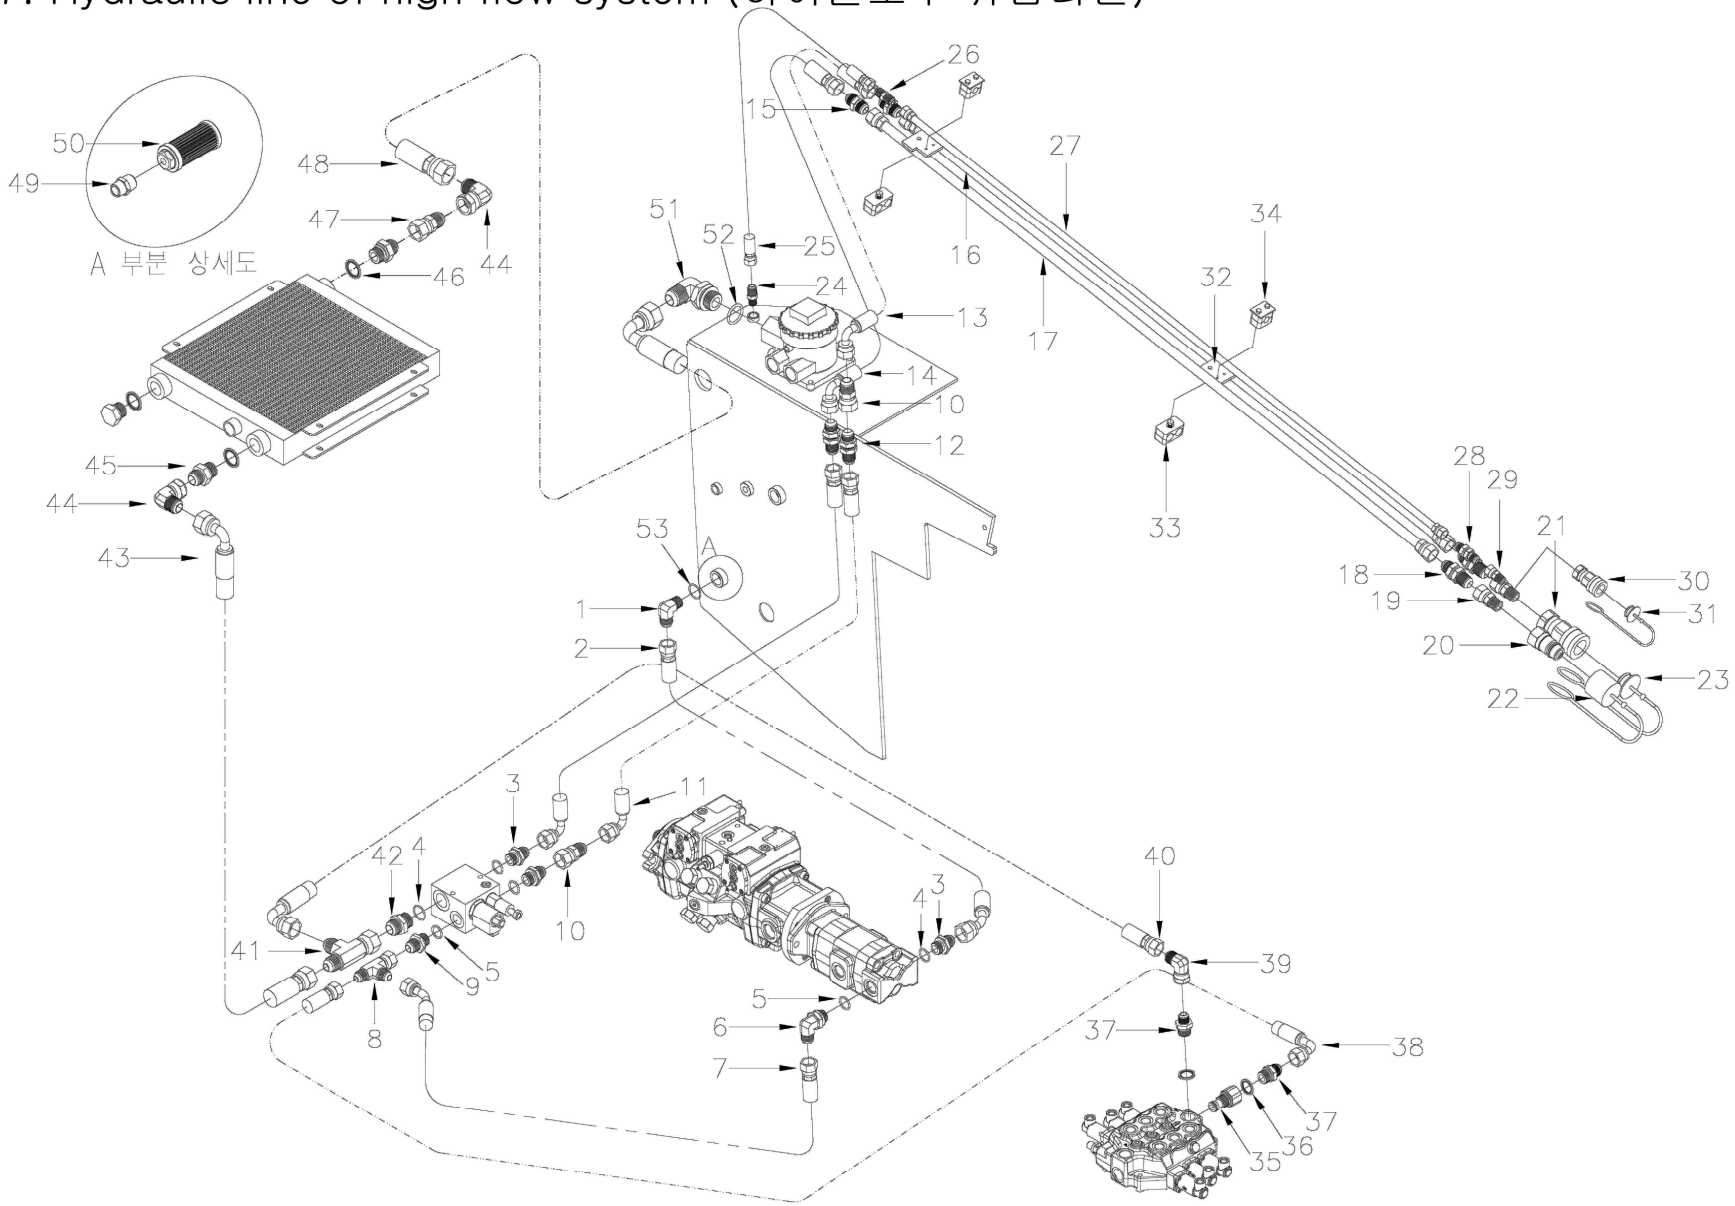


37. Hydraulic line of high flow system (하이플로우 유압라인) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
51	Nipple (니쁠)	T400T4-3751	2	
52	O-ring (오링)	T400T4-3752	2	
53	O-ring (오링)	T400T4-3753	1	

38. Hydraulic line of extended boom (이단붐 유압 라인)

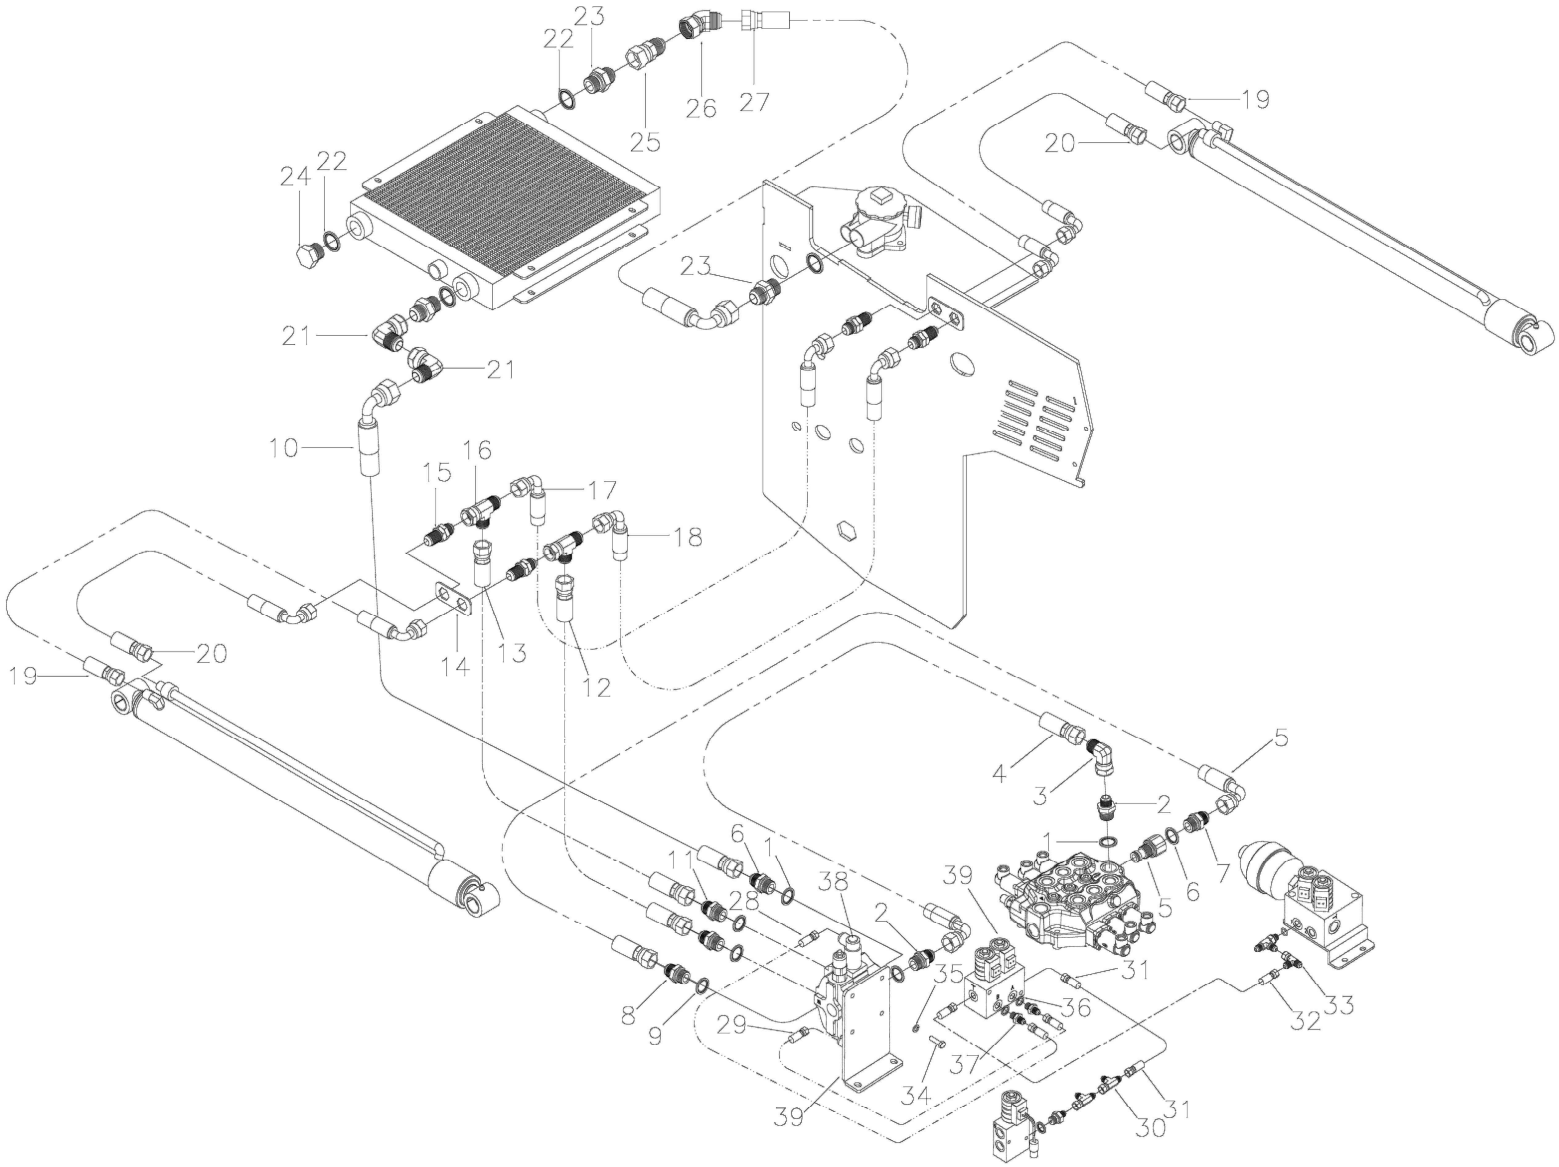


38. Hydraulic line of extended boom (이단붐 유압 라인)				
No.	Name	Part No.	Quantity	Remarks
1	Bonded seal (본디드 씰)	T400T4-3801	4	
2	Nipple (니쁠)	T400T4-3802	2	
3	Nipple L (니쁠 L)	T400T4-3803	1	
4	Hose (control valve*coupling nipple) (호스(컨트롤 밸브*연결니쁠))	T400T4-3804	1	
5	Carry over (캐리오버)	T400T4-3805	1	
6	Nipple (니쁠)	T400T4-3806	2	
7	Hose (mcv carry over*coupling nipple) (호스 (캐리오버*연결니쁠))	T400T4-3807	1	
8	Nipple (니쁠)	T400T4-3808	1	
9	Bonded seal (본디드 씰)	T400T4-3809	3	
10	Hose (valve for extended boom*coupling nipple) (호스(이단붐 밸브*연결니쁠))	T400T4-3810	1	
11	Nipple (니쁠)	T400T4-3811	2	
12	Hose (valve for extended boom*distributing nipple EL) (호스(이단붐 밸브*분배니쁠 EL)	T400T4-3812	1	
13	Hose (valve for extended boom*distributing nipple EL) (호스(이단붐 밸브*분배니쁠 EL)	T400T4-3813	1	
14	A fixed plate (고정판)	T400T4-3814	2	
15	Coupling nipple (연결 니쁠)	T400T4-3815	4	
16	Distributing nipple T (분배 니쁠 T)	T400T4-3816	2	
17	Hose (distributing nipple ST*coupling nipple) (호스(분배 니쁠 ST*연결 니쁠))	T400T4-3817	1	
18	Hose (distributing nipple ST*coupling nipple) (호스(분배 니쁠 ST*연결 니쁠))	T400T4-3818	1	
19	Hose (coupling nipple*extension, extended cylinder) (호스(연결 니쁠*이단붐 실린더 상승))	T400T4-3819	2	
20	Hose (coupling nipple*shrinkage, extended cylinder) (호스(연결 니쁠*이단붐 실린더 하강))	T400T4-3820	2	
21	Nipple L (니쁠 L)	T400T4-3821	2	
22	Bonded seal (본디드 씰)	T400T4-3822	4	
23	Nipple (니쁠)	T400T4-3823	3	
24	Stopper (마개)	T400T4-3824	1	
25	Coupling nipple (연결 니쁠)	T400T4-3825	1	

38. Hydraulic line of extended boom (이단붐 유압 라인)

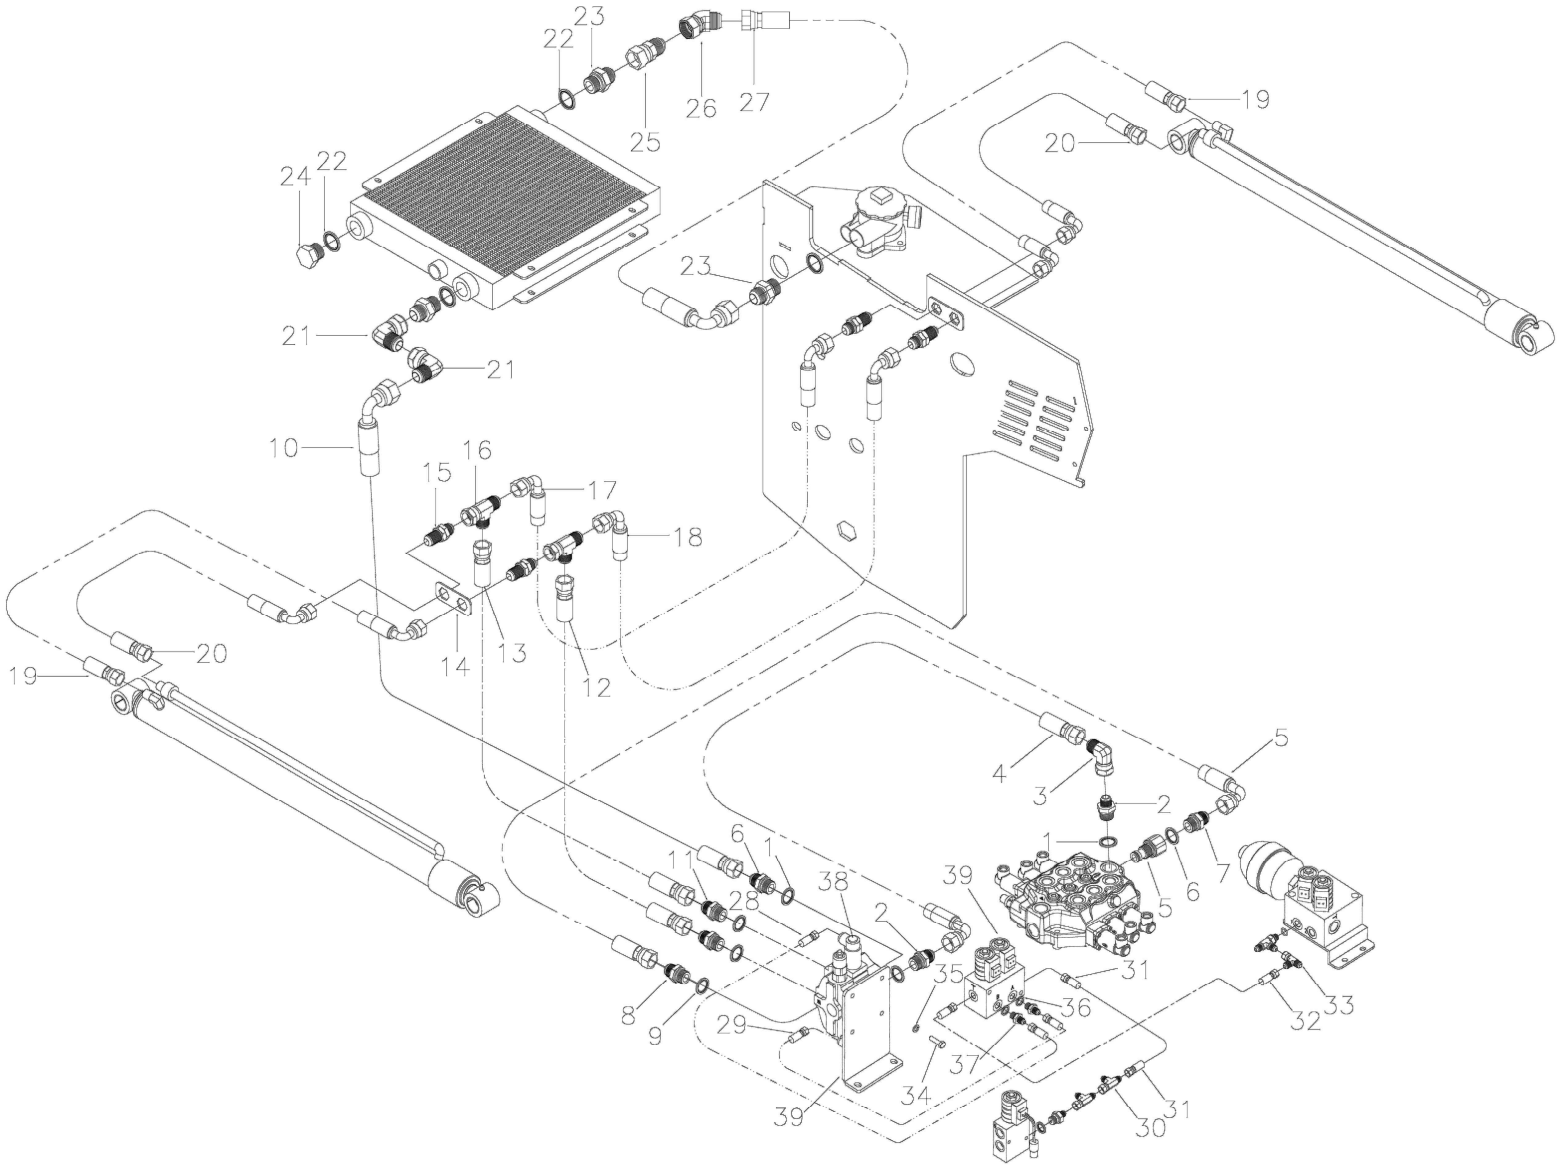


38. Hydraulic line of extended boom (이단붐 유압 라인) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Coupling nipple 45˚ (연결 니쁠 45˚)	T400T4-3826	1	
27	Hose (electric oil cooler*dual filrer) (호스(오일쿨러(전기식)*복합필터))	T400T4-3827	1	
28	Hose (valve for extended boom*aux. solenoid valve for extended boom) (호스 (이단붐 밸브*이단붐보조쏠밸브))	T400T4-3828	1	
29	Hose (valve for extended boom*aux. solenoid valve for extended boom) (호스 (이단붐 밸브*이단붐보조쏠밸브))	T400T4-3829	1	
30	Coupling nipple (연결 니쁠)	T400T4-3830	1	
31	Hose (4 way valve*aux.solenoid valve for extended boom) (호스(4 way 밸브*이단붐 보조쏠밸브))	T400T4-3831	1	
32	Hose (Main solenoid valve*aux.solenoid valve for extended boom (호스(메인 쏠밸브*이단붐 보조쏠밸브))	T400T4-3832	1	
33	Coupling nipple (연결 니쁠)	T400T4-3833	1	
34	Bolt (볼트)	T400T4-3834	4	
35	Spring washer (스프링 와셔)	T400T4-3835	4	
36	Gasket (가스켓)	T400T4-3836	2	
37	Nipple (니쁠)	T400T4-3837	2	
38	Valve for extended boom(이단붐 밸브)	T400T4-3838	1	
39	Fixed bracket for valve, extended boom (이단붐 밸브 고정 브라켓)	T400T4-3839	1	

39. Air Conditioner system, Kubota (에어컨 장치, 구보다)

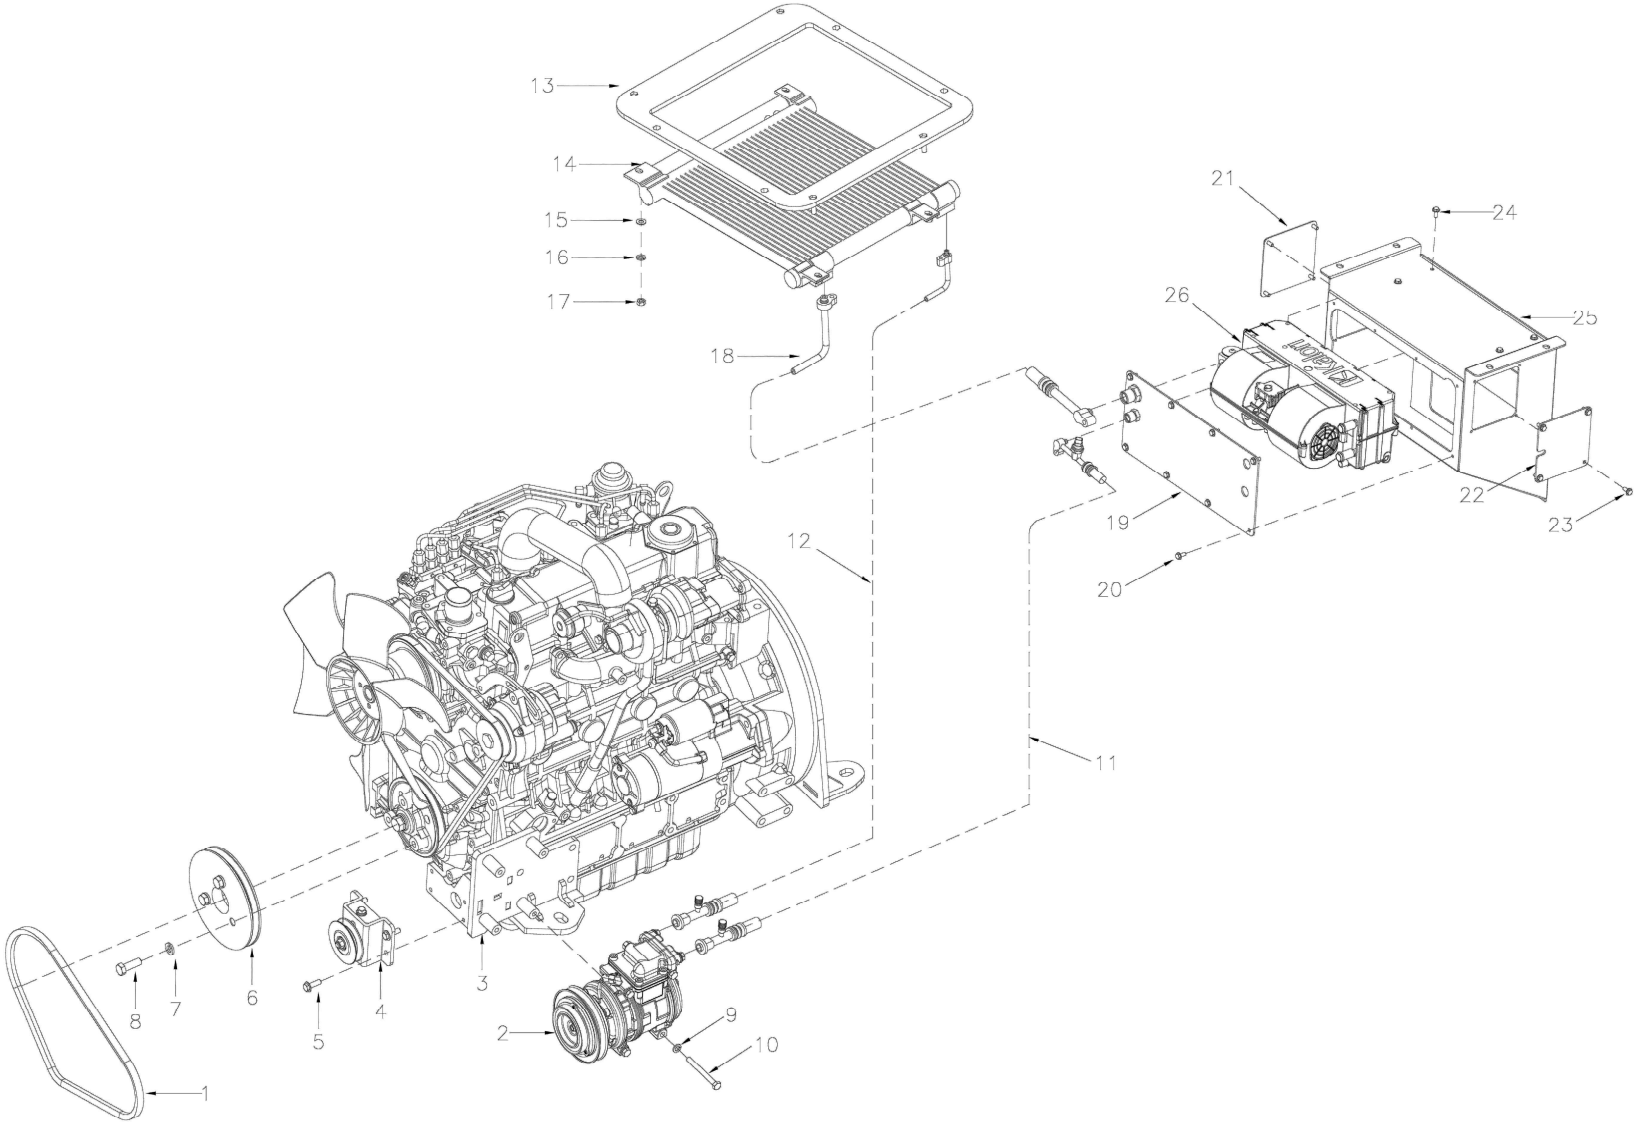


39-1. Air Conditioner system, Kubota (에어컨 장치,구보다)				
1	Belt (벨트)	T400-3901	1	
2	Compressure (콤프레셔)	T400-3902	1	
3	Fixed plate for compressure (콤프레셔 고정판)	T400-3903	1	
4	Tensioner ass'y (텐션 조합)	T400-3904	1	
5	Bolt (볼트)	T400-3905	4	
6	Pully (풀리)	T400-3906	1	
7	Spring washer (스프링 와셔)	T400-3907	3	
8	Bolt (볼트)	T400-3908	3	
9	Spring washer (스프링 와셔)	T400-3909	4	
10	Bolt (볼트)	T400-3910	4	
11	Hose (evaparater*compressure) (호스(에바*콤프레셔))	T400-3911	1	
12	Hose (Compressure*condenser) (호스(콤프레셔*콘덴서))	T400-3912	1	
13	Fixed plate for condenser (콘덴서 고정판)	T400-3913	1	
14	Cooler assy (condenser) (쿨러 조합(콘덴서))	T400-3914	1	
15	Vibroisolating rubber (방진 고무)	T400-3915	4	
16	Washer (와셔)	T400-3916	4	
17	Nut (너트)	T400-3917	4	
18	Hose (evaporater*condensor) (호스(에바*컨덴서))	T400-3918	1	
19	Front cover, Evaporater (에바 정면 커버)	T400-3919	1	
20	Bolt (볼트)	T400-3920	8	
21	Right cover, Evaporater (에바 우측 커버)	T400-3921	1	
22	Left cover, Evaporater (에바 좌측 커버)	T400-3922	1	
23	Bolt (볼트)	T400-3923	8	
24	Bolt (볼트)	T400-3924	4	
25	Evaporater case (에바 케이스)	T400-3925	1	
26	Evaporater assy (에바 조합)	T400-3926	1	

40. Heater system, Kubota (히터 장치, 구보다)

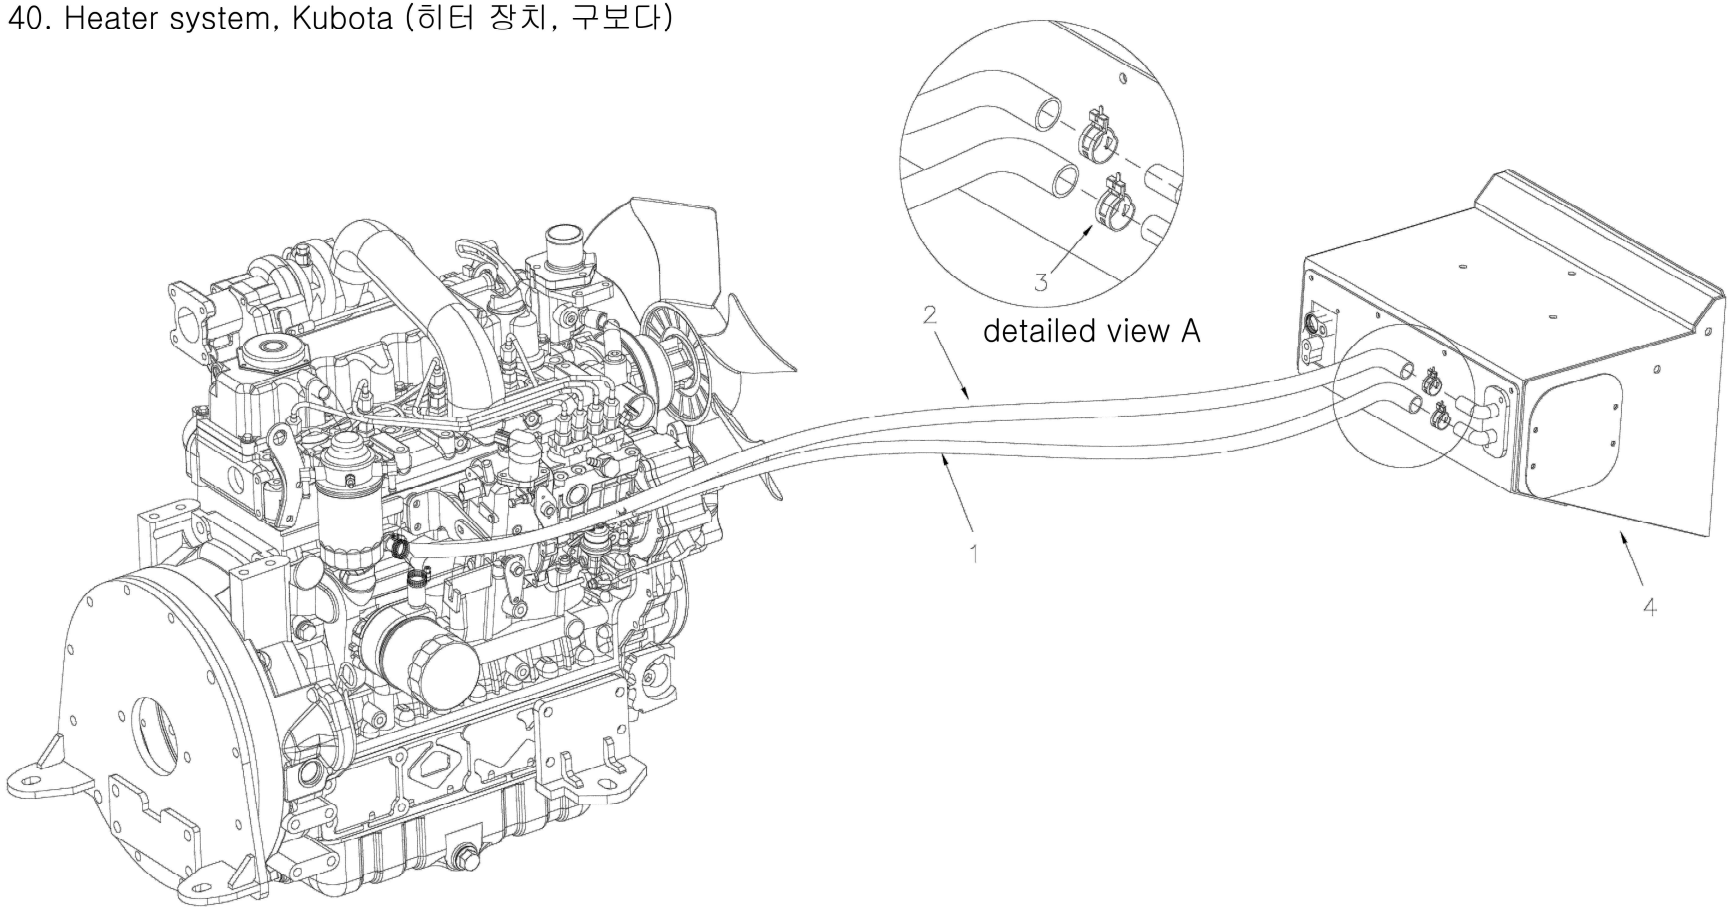


40-1. Heater system, Kubota (히터 장치, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Lower Hose (하단호스)	T400-4001	1	
2	Upper Hose (상단호스)	T400-4002	1	
3	Pipe Clamp (파이프 클램프)	T400-4003	4	
4	Evaporater Module (에바모듈)	T400-4004	1	

41. Electric Cooler assy (전기식 쿨러 조합)

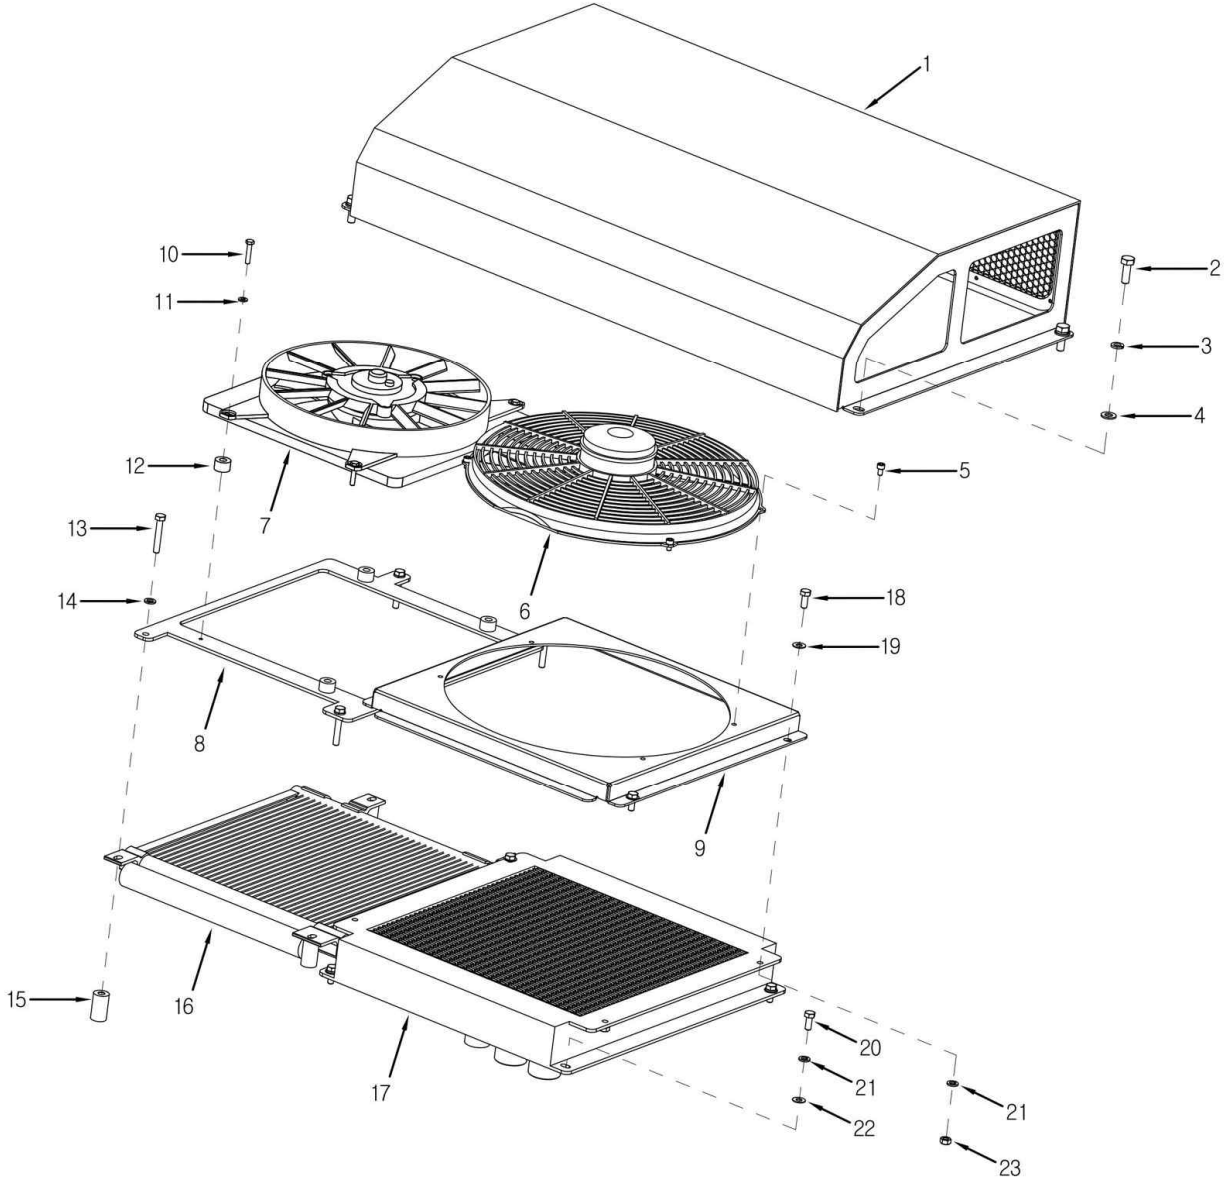


41. Electric Cooler assy (전기식 쿨러 조합)				
No.	Name	Part No.	Quantity	Remarks
1	Cover assy (커버조합)	330T4-1101	1	
2	Bolt (볼트)	330T4-1102	4	
3	Spring Washer (스프링 와셔)	330T4-1103	4	
4	Washer (와셔)	330T4-1104	4	
5	Bolt (볼트)	330T4-1105	4	
6	Fan assy (팬조합)	330T4-1106	1	
7	Fan assy, air conditioner (Optional item) (팬조합)-에어컨 옵션	330T4-1107	1	
8	Fixing plate for fan, air conditioner (Optional item) (팬 고정 판)-에어컨옵션	330T4-1108	1	
9	Fing plate for fan (팬 고정 판)	330T4-1109	1	
10	Bolt (볼트)	330T4-1110	4	
11	Washer (와셔)	330T4-1111	4	
12	Spacer for fan assy (간격통-팬조합용)	330T4-1112	4	
13	Bolt (볼트)	330T4-1113	4	
14	Spring Washer (스프링 와셔)	330T4-1114	4	
15	Spacer for condenser assy (간격통-컨덴셔용)	330T4-1115	4	
16	Condenser (컨덴셔)	330T4-1116	1	
17	Electric Oil Cooler (전기식오일쿨러)	330T4-1117	1	
18	Bolt (볼트)	330T4-1118	4	
19	Washer (와셔)	330T4-1119	4	
20	Bolt (볼트)	330T4-1120	4	
21	Spring Washer (스프링 와셔)	330T4-1121	8	
22	Washer (와셔)	330T4-1122	4	
23	Nut (너트)	330T4-1123	4	

41-1. Hydraulic oil cooler assy (유압식쿨러모듈)

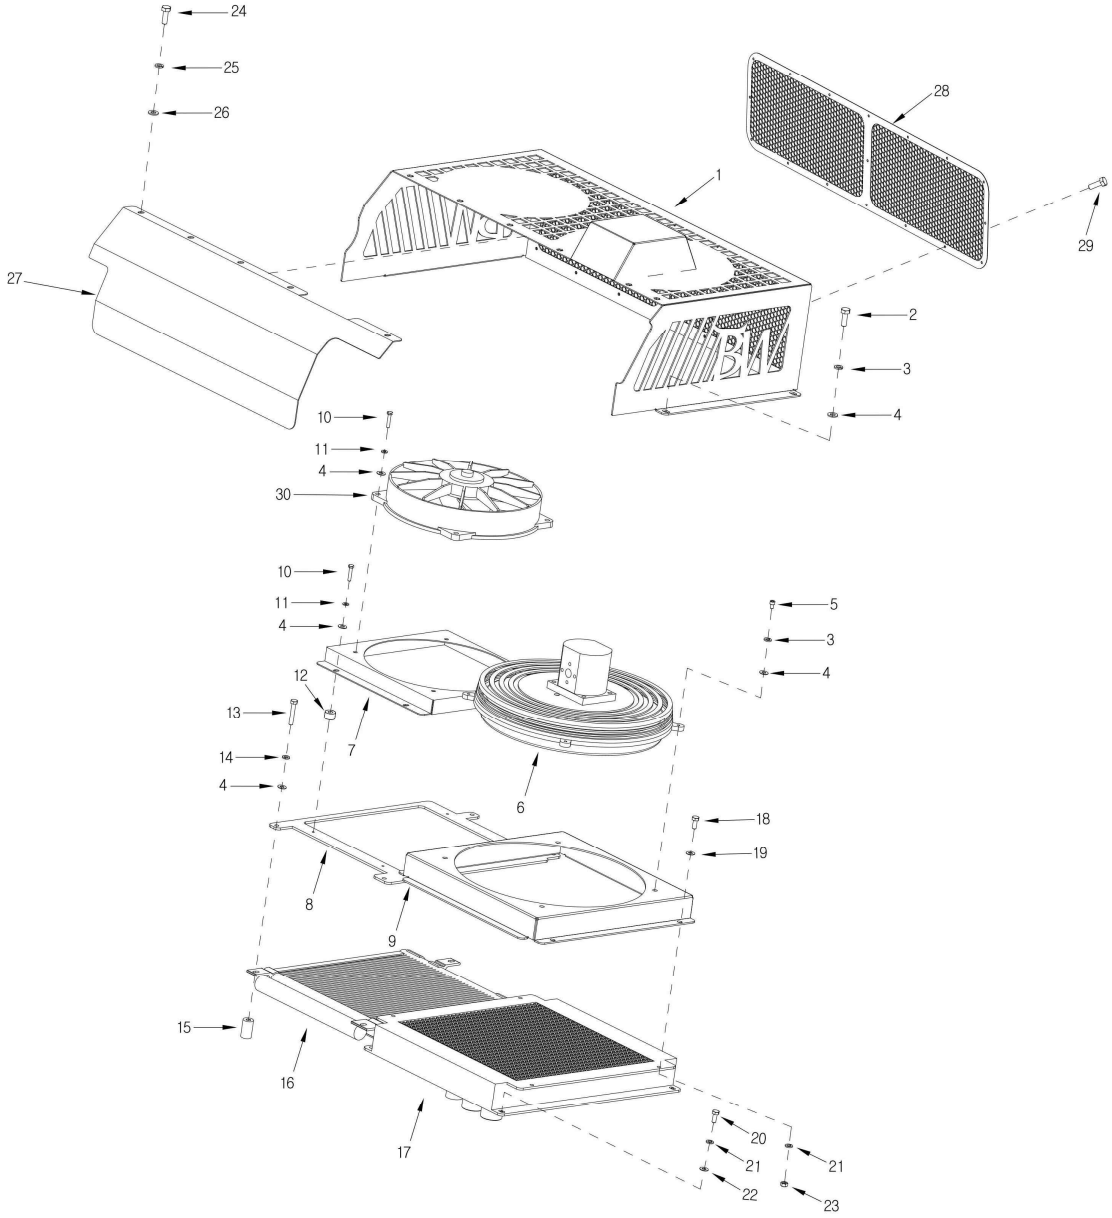


41-1. Hydraulic oil cooler assy (유압식쿨러모듈)				
No.	Name	Part No.	Quantity	Remarks
1	Cooler cover (쿨러커버)	350T4HC-1101	1	
2	Bolt (볼트)	350T4HC-1102	1	
3	Spring washer (스프링와셔)	350T4HC-1103	8	
4	Washer (와셔)	350T4HC-1104	20	
5	Bolt (볼트)	350T4HC-1105	4	
6	Electric fan, oil cooler (오일쿨러 전기팬)	350T4HC-1106	1	
7	Fixied plate for electric fan, condensor (콘덴샤 전기팬 고정판)	350T4HC-1107	1	
8	Spacing plate for condensor (콘덴샤 간격판)	350T4HC-1108	1	
9	Fixed plate for oil cooler (오일쿨러 고정판)	350T4HC-1109	1	
10	Bolt (볼트)	350T4HC-1110	8	
11	Spring washer (스프링와셔)	350T4HC-1111	8	
12	Rebber mount (고무받침)	350T4HC-1112	1	
13	Bolt (볼트)	350T4HC-1113	4	
14	Spring washer (스프링와셔)	350T4HC-1114	4	
15	Rebber mount (고무받침)	350T4HC-1115	1	
16	Condensor (콘덴샤)	350T4HC-1116	1	
17	Oil cooler (오일쿨러)	350T4HC-1117	1	
18	Bolt (볼트)	350T4HC-1118	4	
19	Washer (와셔)	350T4HC-1119	4	
20	Bolt (볼트)	350T4HC-1120	4	
21	Spring washer (스프링와셔)	350T4HC-1121	8	
22	Washer (와셔)	350T4HC-1122	4	
23	Nut (너트)	350T4HC-1123	4	
24	Bolt (볼트)	350T4HC-1124	5	
25	Washer (와셔)	350T4HC-1125	5	

41-1. Hydraulic oil cooler assy (유압식쿨러모듈)

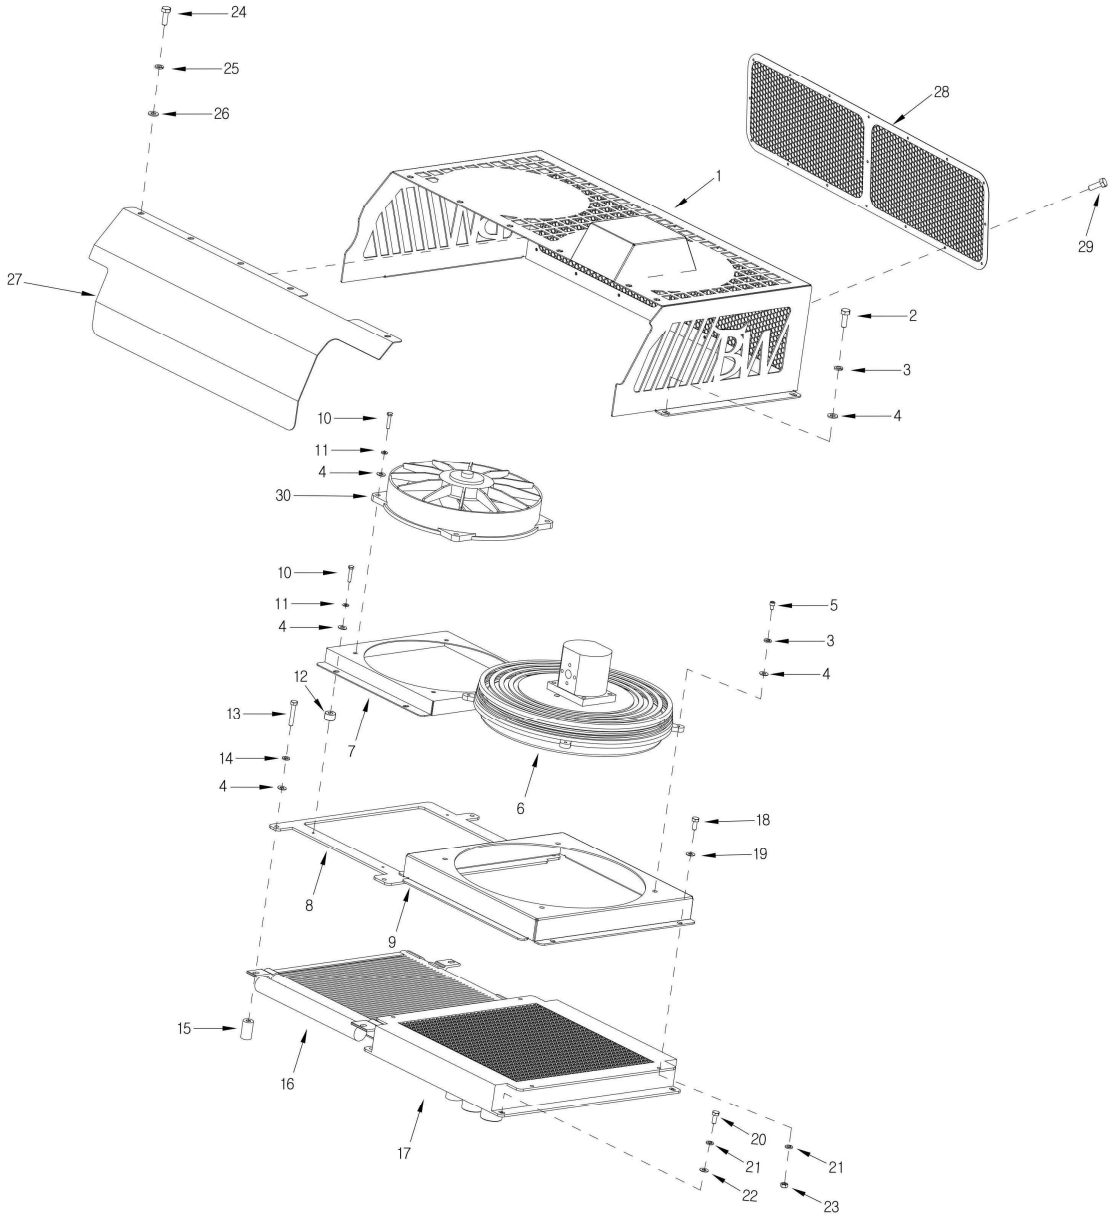


41-1. Hydraulic oil cooler assy (유압식쿨러모듈) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Bolt (볼트)	350T4HC-1126	5	
27	Front cover for oil cooler (쿨러앞쪽커버)	350T4HC-1127	1	
28	Mesh net (타공망)	350T4HC-1128	1	
29	Bolt (볼트)	350T4HC-1129	15	
30	Electric fan for condensor (콘덴샤 전기팬)	350T4HC-1130	1	


42. Instrument panel for canopy (계기판-기본형)

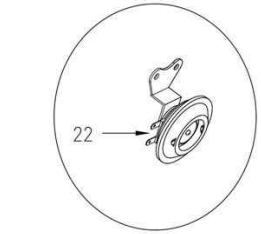


detailed view G

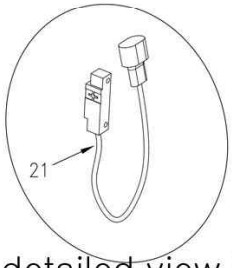


detailed view F

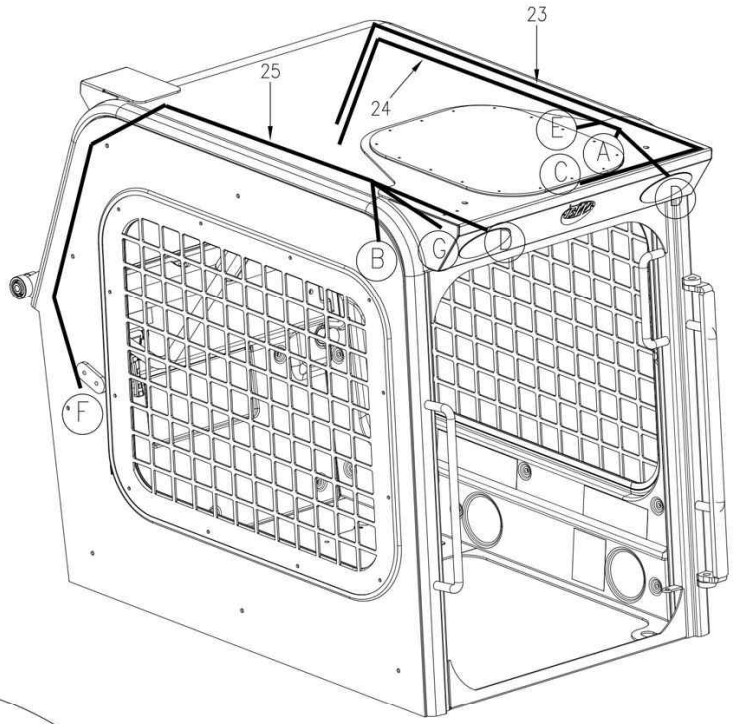


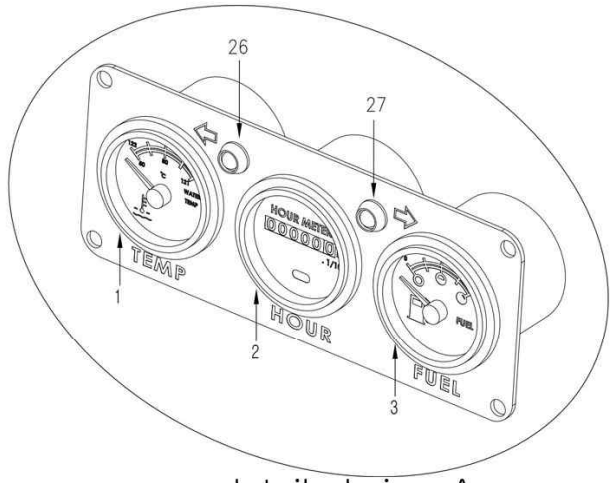


detailed view A

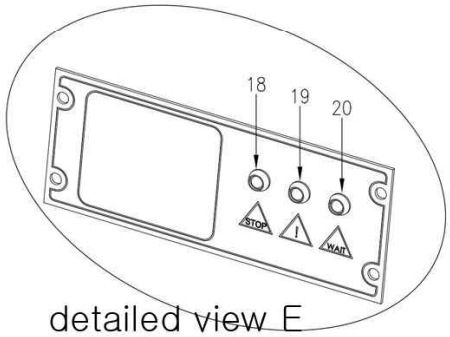


detailed view E

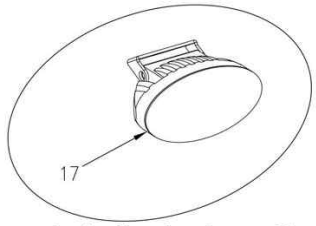

detailed view D

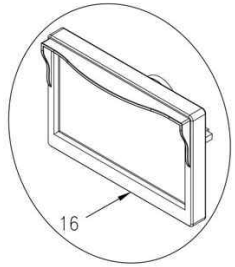


detailed view C

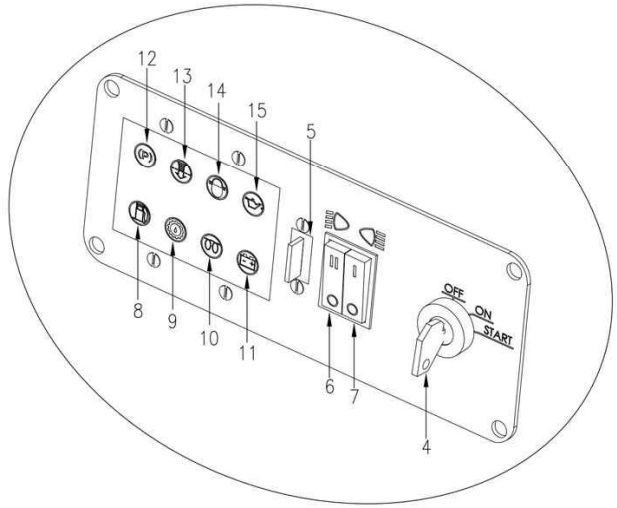


detailed view B

42. Instrument panel for canopy (계기판-기본형)				
No.	Name	Part No.	Quantity	Remarks
1	Water temperature gauge (수온계)	330T4-3701	1	
2	Hour meter (시간계)	330T4-3702	1	
3	Fuel gauge (연료계)	330T4-3703	1	
4	Ignition switch (점화 스위치)	330T4-3704	1	
5	Light fuse & panel fuse (라이트 퓨즈 & 계기판 퓨즈)	330T4-3705	1	
6	Light switch (라이트 스위치)	330T4-3706	1	
7	Panel switch (계기판 스위치)	330T4-3707	1	
8	Fuel level warning light (연료 수위 경고등)	330T4-3708	1	
9	Hydraulic filter warning light (유압 필터 경고등)	330T4-3709	1	
10	Preheating light (예열등)	330T4-3710	1	
11	Charging warning light (충전 경고등)	330T4-3711	1	
12	Parking warning light (주차 경고등)	330T4-3712	1	
13	Air cleaner warning light (에어크리너 경고등)	330T4-3713	1	
14	Fuel filter warning light (연료 필터 경고등)	330T4-3714	1	
15	Engine oil warning light (엔진 오일 경고등)	330T4-3715	1	
16	Real camera LCD (후방카메라용 LCD)	330T4-3716	1	
17	Light (라이트)	330T4-3717	2	
18	Engine faulty warning light (엔진 성능 결함 발생 경고등)	330T4-3718	1	
19	Engine service light (엔진 정비 필요등)	330T4-3719	1	
20	Self diagnosis warning light (자가 진단 경고등)	330T4-3720	1	
21	Proximity sensor (근접센서)	330T4-3721	1	
22	Front horn (부저)	330T4-3722	1	
23	Main wiring harness LH (메인 배선-좌)	330T4-3723	1	
24	Auxiliary wiring harness-LCD (보조 배선-LCD 용)	330T4-3724	1	
25	Main wiring harness, RH (메인 배선-우)	330T4-3725	1	


42. Instrument panel for canopy (계기판-기본형)

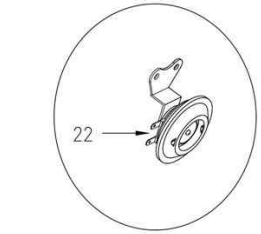


detailed view G

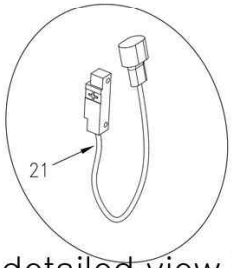


detailed view F

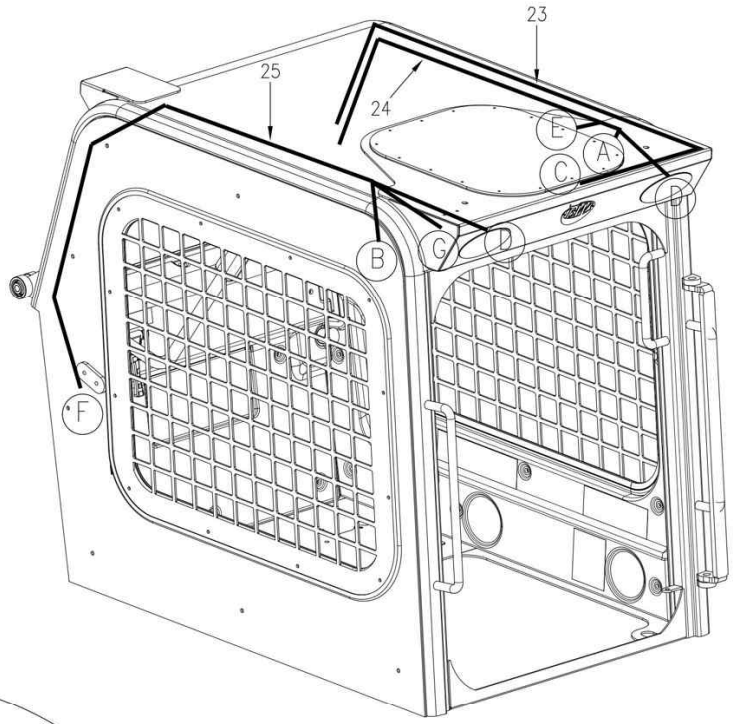


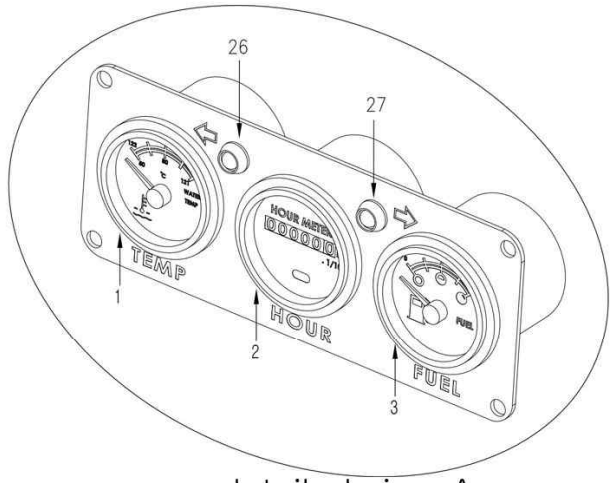


detailed view A

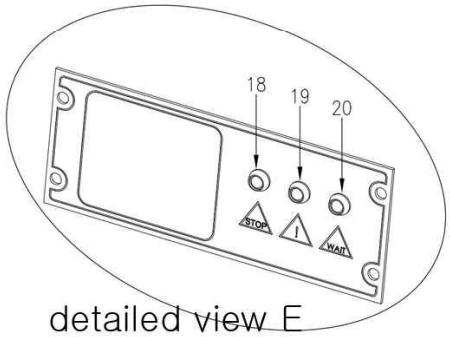


detailed view E

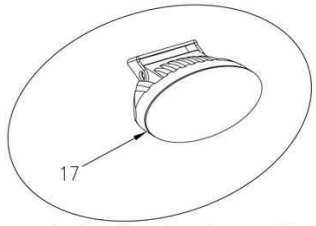

detailed view D

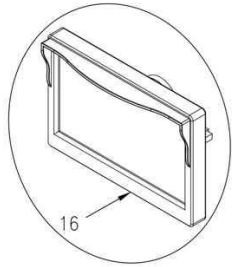


detailed view C

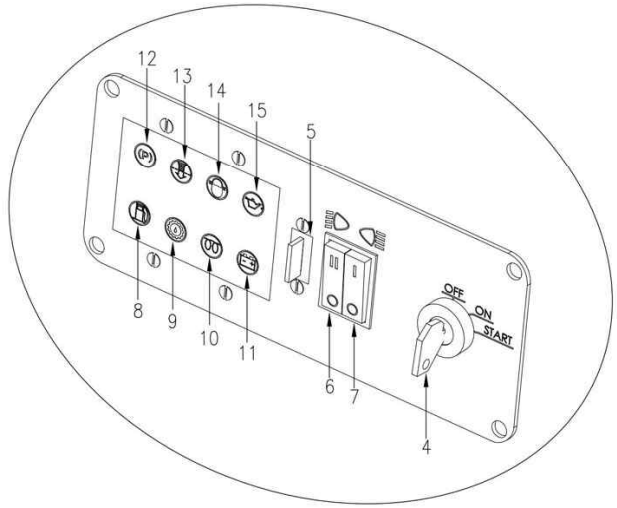

detailed view B


42. Instrument panel for canopy (계기판-기본형) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Direction indicator light LH (방향지시등 표시등 좌)	330T4-3726	1	
27	Direction indicator light RH (방향지시등 표시등 우)	330T4-3727	1	

42-1. Instrument panel LH for cabin enclosure (계기판 - 캐빈형)

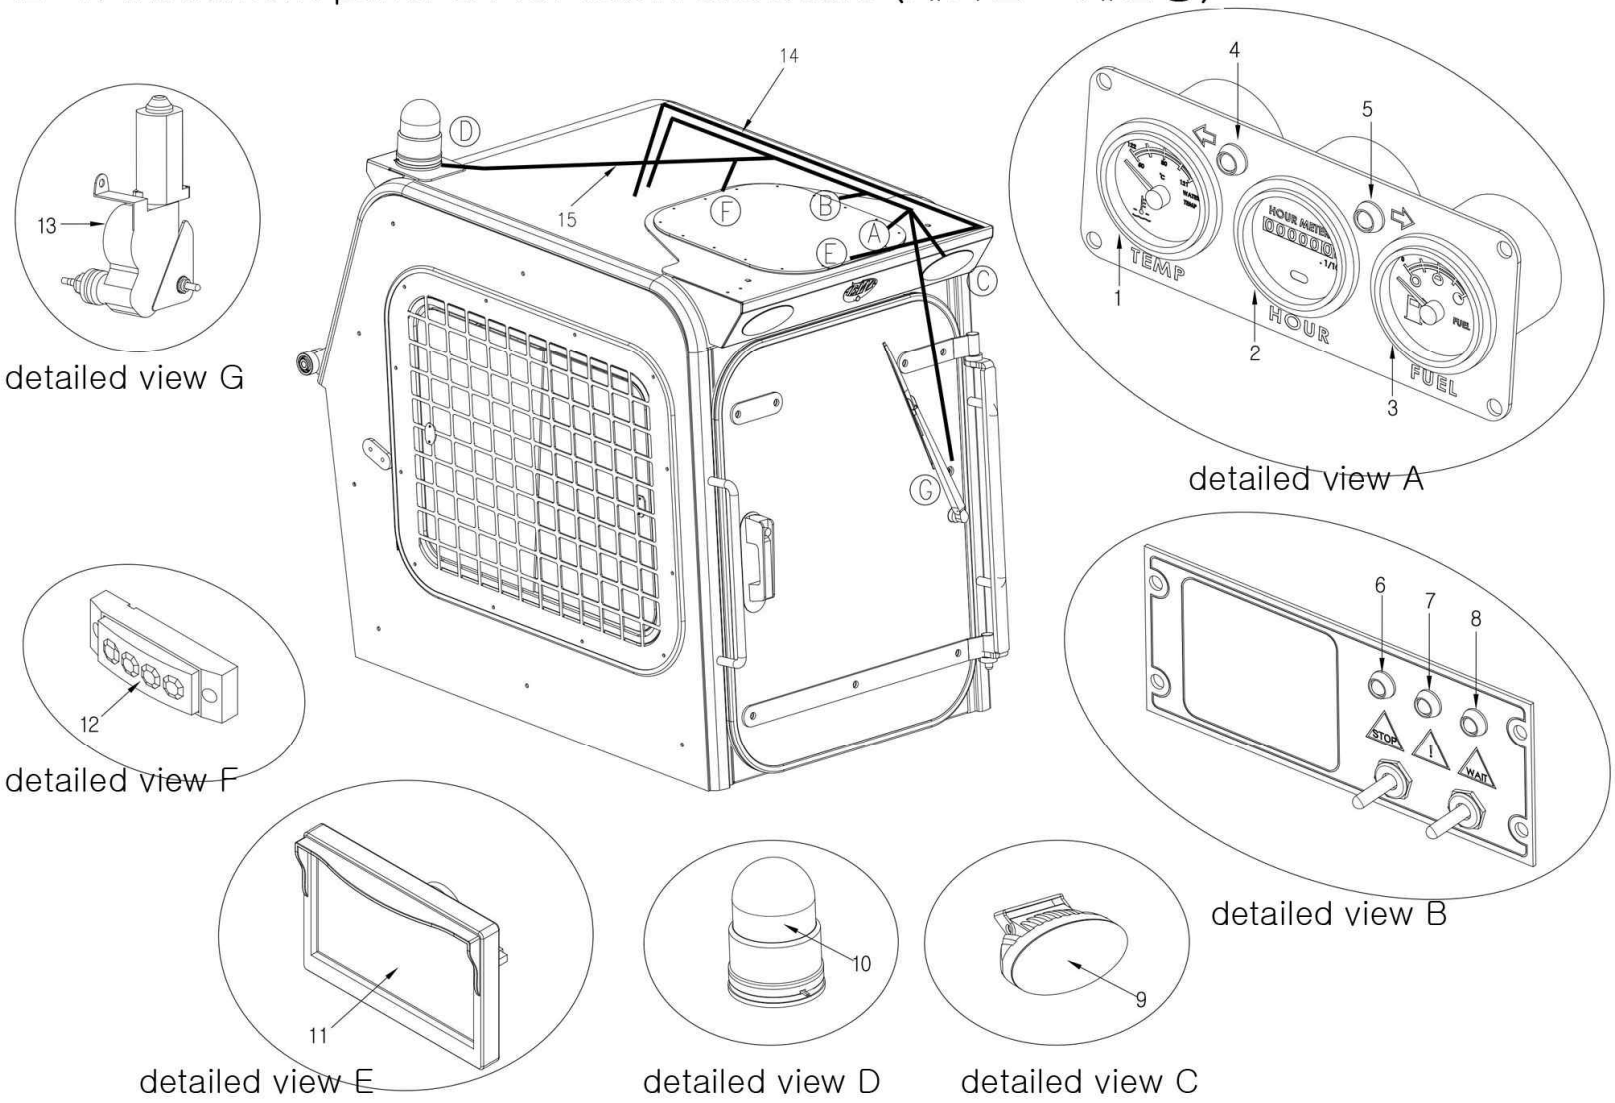


42-1. Instrument panel LH for cabin enclosure (계기판 - 캐빈형)				
No.	Name	Part No.	Quantity	Remarks
1	Water temperature gauge (수온계)	330T4-3701	1	
2	Hour meter (시간계)	330T4-3702	1	
3	Fuel gauge (연료계)	330T4-3703	1	
4	Direction indicator light LH (방향지시등 표시등 좌)	330T4-3726	1	
5	Direction indicator light RH (방향지시등 표시등 우)	330T4-3727	1	
6	Engine faulty warning light (엔진 성능 결함 발생 경고등)	330T4-3718	1	
7	Engine service light (엔진 정비 필요등)	330T4-3719	1	
8	Self control system warning light (자가 진단 경고등)	330T4-3720	1	
9	Light (라이트)	330T4-3717	1	
10	Rotating beacon (경광등) Option	330T4-3728	1	
11	Real camera LCD (후방카메라용 LCD)	330T4-3716	1	
12	Indoor lighting (실내등)	330T4-3729	1	
13	Motor assy for window brush (윈도우 브러쉬용 모터)	330T4-3730	1	
14	Auxiliary wiring harness-LCd (보조 배선-LCD 용)	330T4-3724	1	
15	Main wiring harness LH (메인 배선-좌)	330T4-3723	1	

42-2. Instrument panel RH for cabin enclosure (계기판 - 캐빈형)

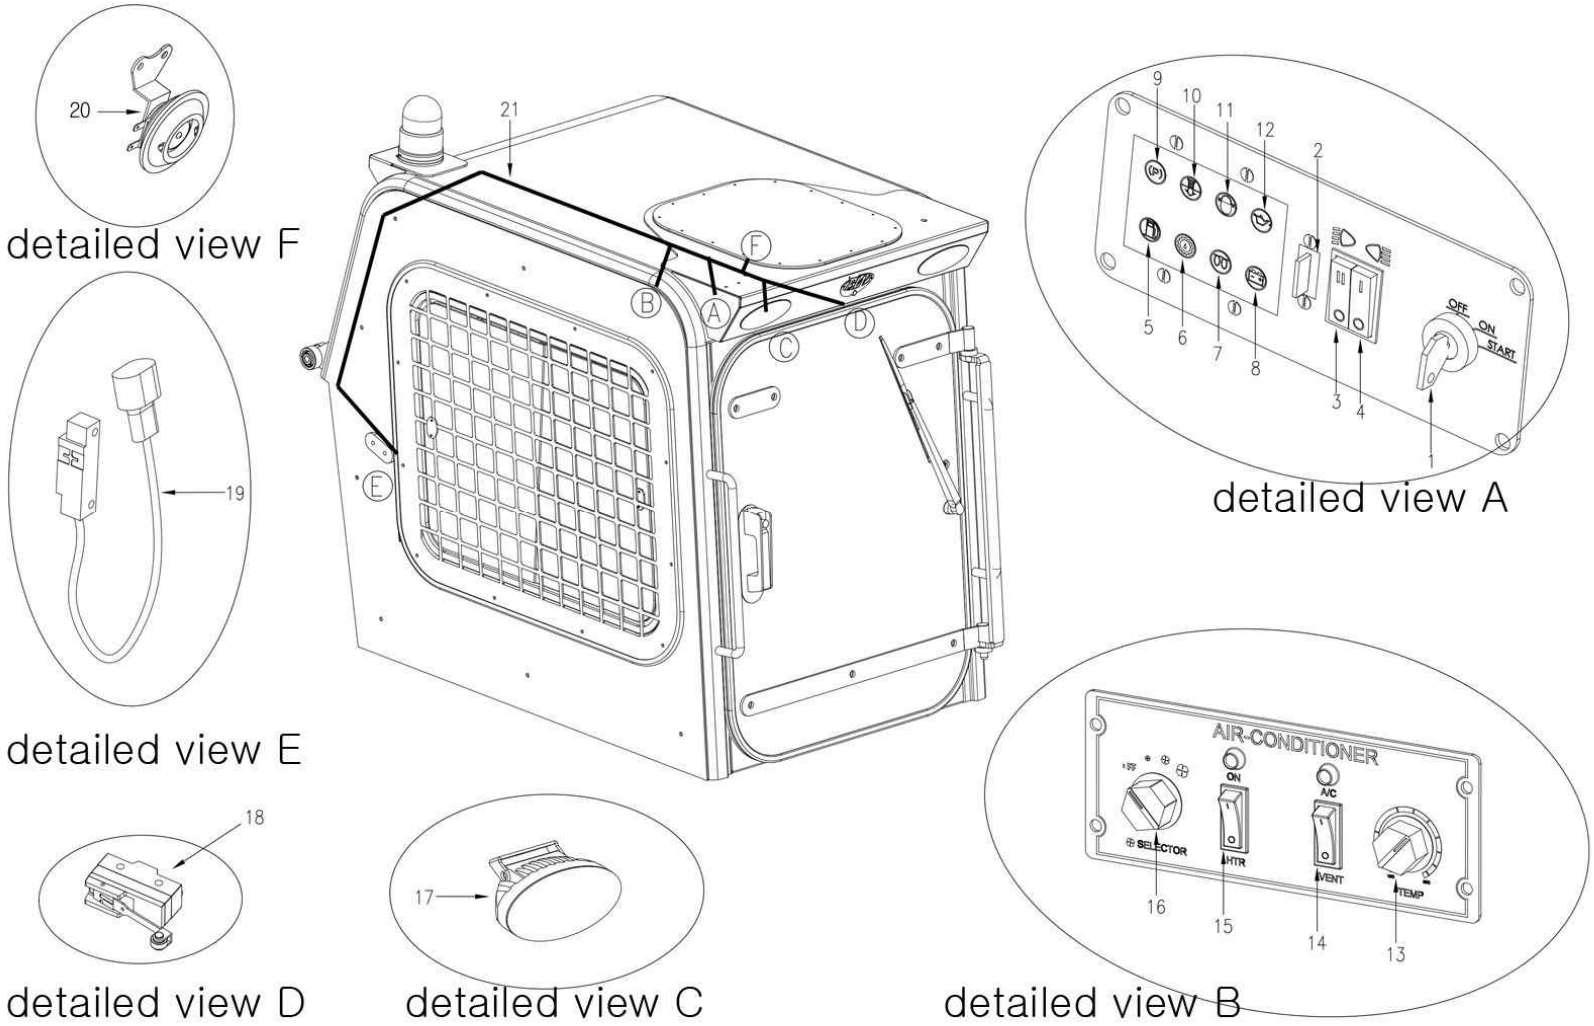


42-2. Instrument panel RH for cabin enclosure (계기판 - 캐빈형)				
No.	Name	Part No.	Quantity	Remarks
1	Ignition switch (점화 스위치)	330T4-3704	1	
2	Light fuse & panel fuse (라이트 퓨즈 & 계기판 퓨즈)	330T4-3705	1	
3	Light switch (라이트 스위치)	330T4-3706	1	
4	Panel switch (계기판 스위치)	330T4-3707	1	
5	Fuel level warning light (연료 수위 경고등)	330T4-3708	1	
6	Hydraulic filter warning light (유압 필터 경고등)	330T4-3709	1	
7	Preheating light (예열등)	330T4-3710	1	
8	Charging warning light (충전 경고등)	330T4-3711	1	
9	Parking warning light (주차 경고등)	330T4-3712	1	
10	Air cleaner warning light (에어크리너 경고등)	330T4-3713	1	
11	Fuel filter warning light (연료 필터 경고등)	330T4-3714	1	
12	Engine oil warning light (엔진 오일 경고등)	330T4-3715	1	
13	Heater temperature level device (히터 온도 조절 장치)	330T4-3731	1	
14	Heater ON/OFF switch (히터 ON/OFF 스위치)	330T4-3732	1	
15	Air conditioner ON/OFF switch (에어컨 ON/OFF 스위치)	330T4-3733	1	
16	Air conditioner level device (에어컨 바람 세기 조절 장치)	330T4-3734	1	
17	Light RH (라이트)-RH	330T4-3717	1	
18	Limit switch (리밋 스위치)	330T4-3735	1	
19	Proximity sensor (근접센서)	330T4-3721	1	
20	Front horn (부저)	330T4-3722	1	
21	Main wiring harness, RH (메인 배선-우)	330T4-3725	1	


43. Electrical system, Kubota (전기 장치, 구보다)

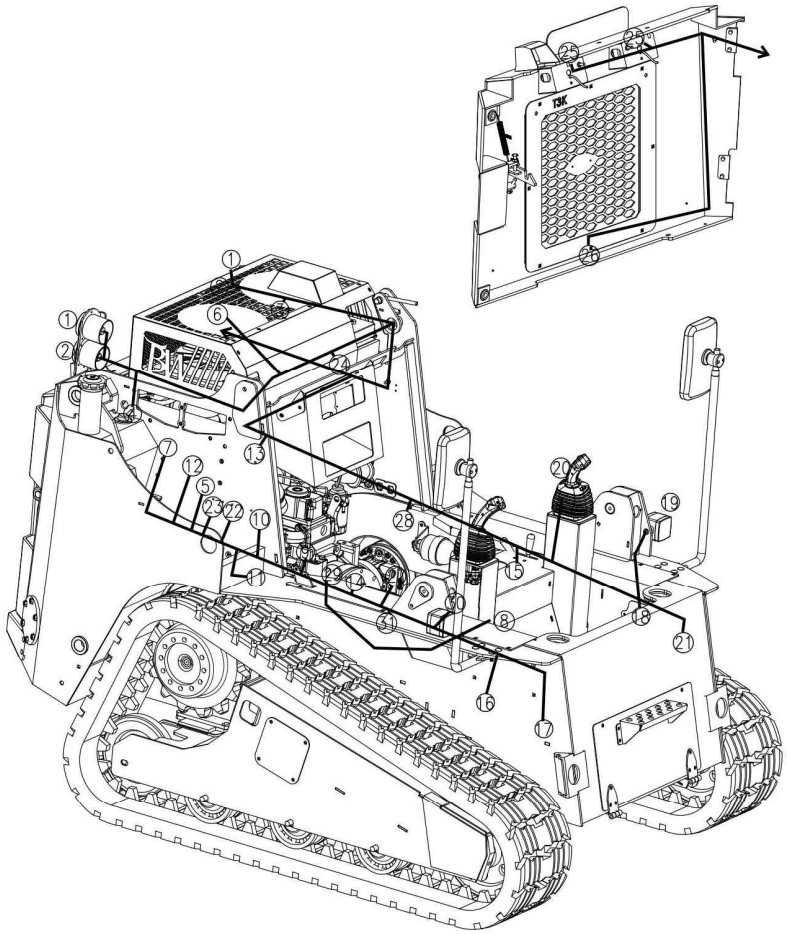


1. detailed view

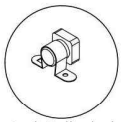

9. detailed view



2. detailed view

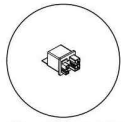
10. detailed view



3. detailed view



11. detailed view

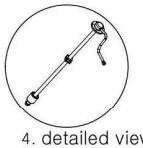

4. detailed view

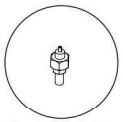
12. detailed view


5. detailed view

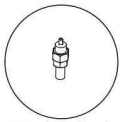
13. detailed view

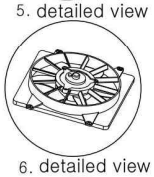

6. detailed view

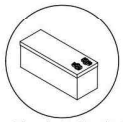

14. detailed view


7. detailed view



15. detailed view


17. detailed view

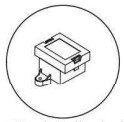

18. detailed view

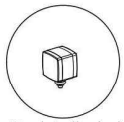

19. detailed view



8. detailed view

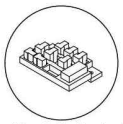

16. detailed view


20. detailed view

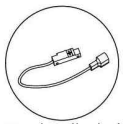

21. detailed view

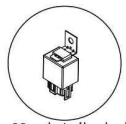

22. detailed view

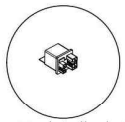

23. detailed view

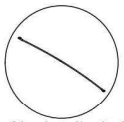

30. detailed view



24. detailed view

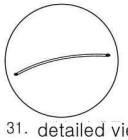

31. detailed view

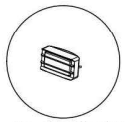
25. detailed view

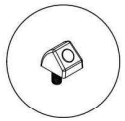
26. detailed view

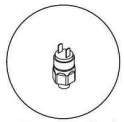

27. detailed view

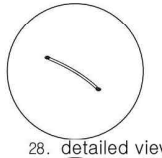
28. detailed view

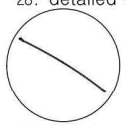

29. detailed view

43-1. Electrical system, Kubota (전기 장치, 구보다)				
No.	Name	Part No.	Quantity	Remarks
1	Direction indicator (LH, RH)	T400-4301	2	
2	Rear combination light (LH,RH)	T400-4302	2	
3	Hydraulics oil cooler (유압 오일 쿨러)	T400-4303	1	
4	Fuel sensor (연료 센서)	T400-4304	1	
5	Back Buzzer (백부저)	T400-4305	1	
6	condenser fan, air conditioner (콘덴서 팬-에어컨)	T400-4306	1	
7	Alternator (알터네이터)	T400-4307	1	
8	Air Cleaner Sensor (에어크리너 센서)	T400-4308	1	
9	Start Relay (스타트 릴레이)	T400-4309	1	
10	Preheating relay (예열 릴레이)	T400-4310	1	
11	Start motor (스타트모터)	T400-4311	1	
12	Water temperature sensor (수온센서)	T400-4312	1	
13	Hydraulic oil sensor, Option (유압오일센서-옵션)	T400-4313	1	
14	Battery (배터리)	T400-4314	1	
15	Back Buzzer switch (백부저 스위치)	T400-4315	1	
16	Relay Box (릴레이박스)	T400-4316	1	
17	Foot accelerator (풋 악셀레이터)	T400-4317	1	
18	Fuse box I (퓨즈박스)	T400-4318	1	
19	Front combination light (전방 콤비 램프(LH,RH))	T400-4319	2	
20	Joystick (조이스틱)	T400-4320	1	
21	Proximity sensor (-) control (근접센서(-)제어용)	T400-4321	1	
22	Cooler fan motor relay (쿨러 팬 모터 릴레이)	T400-4322	1	
23	Safety 5P relay (안전장치 5P 릴레이)	T400-4323	1	
24	Hydraulic oil cooler switch (유압오일쿨러 스위치)	T400-4324	1	
25	Rear working light (후방 작업등-LH,RH)	T400-4325	1	


43. Electrical system, Kubota (전기 장치, 구보다)

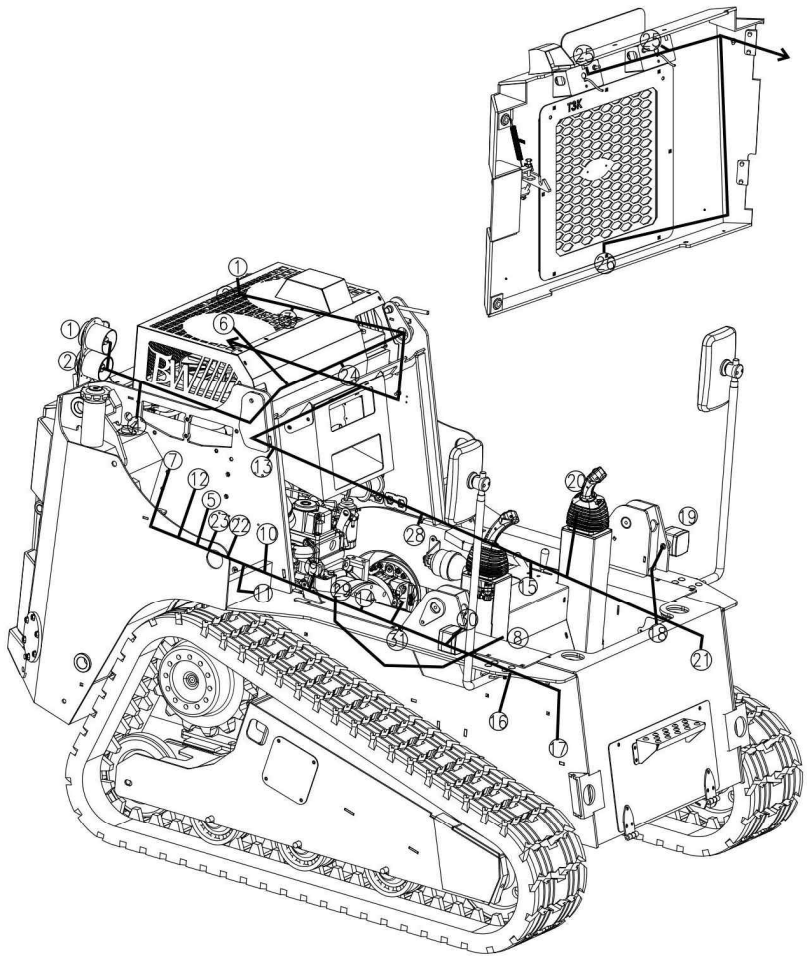


1. detailed view

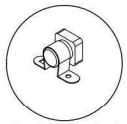
9. detailed view



2. detailed view

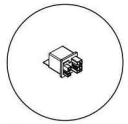
10. detailed view



3. detailed view



11. detailed view



4. detailed view

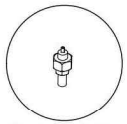

12. detailed view


5. detailed view

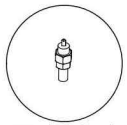
13. detailed view

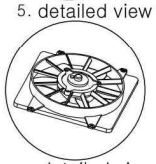

6. detailed view



14. detailed view

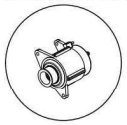
7. detailed view



15. detailed view


17. detailed view

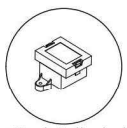

18. detailed view

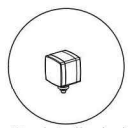

19. detailed view



8. detailed view

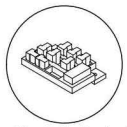

16. detailed view


20. detailed view

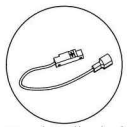
21. detailed view

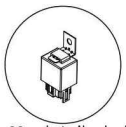

22. detailed view

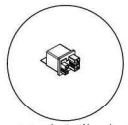

23. detailed view

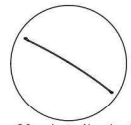

30. detailed view



24. detailed view



31. detailed view

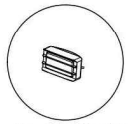
25. detailed view

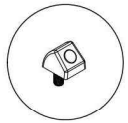
26. detailed view

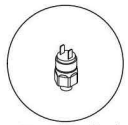

27. detailed view

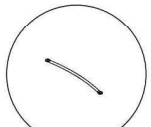

28. detailed view

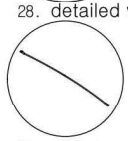
29. detailed view


43. Electrical system, Kubota (전기 장치, 구보다) Cont'd (계속)				
No.	Name	Part No.	Quantity	Remarks
26	Rear camera (후방카메라), Option	T400-4326	1	
27	Barke switch (브레이크 스위치), Option	T400-4327	1	
28	Earth cable (차체접지선(엔진-차체))	T400-4328	1	
29	Start motor main cable (스타트모터 본선(스타트모터-배터리+))	T400-4329	1	
30	Battery - cable (배터리 - 선(엔진-배터리스위치))	T400-4330	1	
31	Battery switch cable (배터리 스위치선(배터리 스위치-엔진))	T400-4331	1	
32	Battery switch (배터리 스위치)	T400-4332	1	

44. Electrical system for Hi-flow (전기장치부-하이플로우)

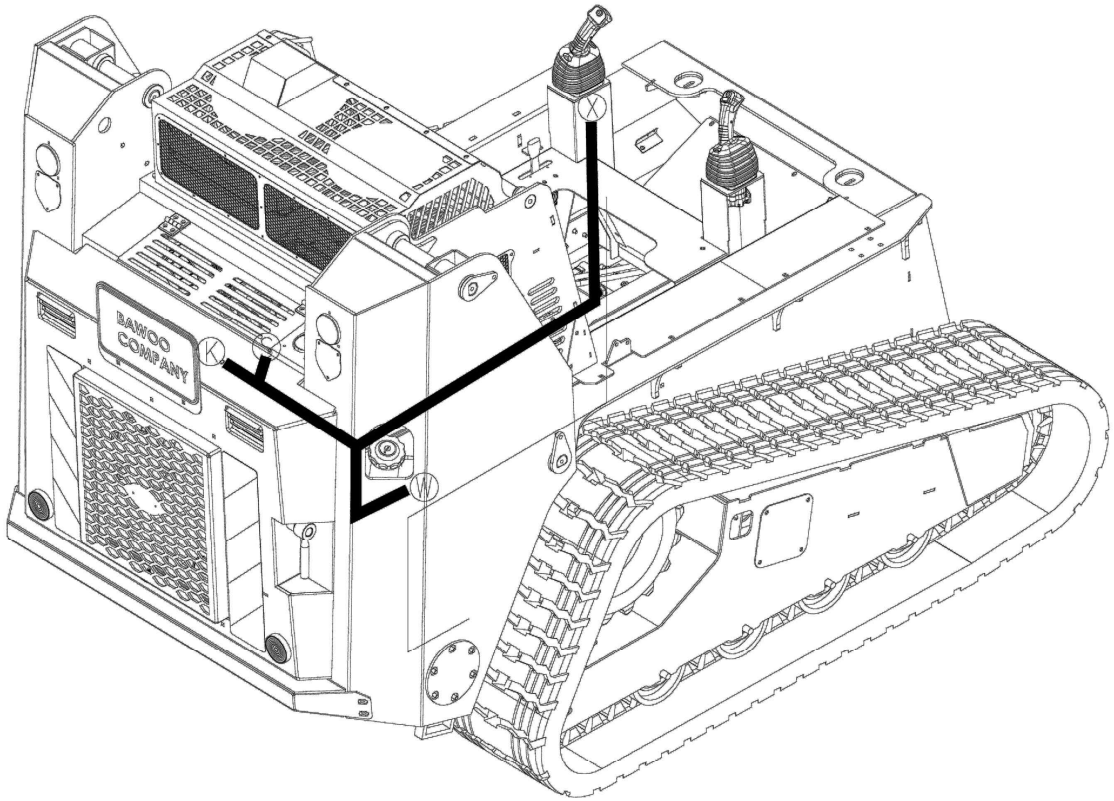


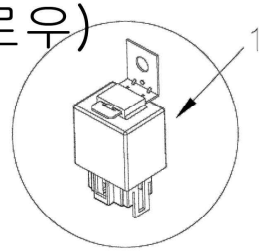


detailed view K

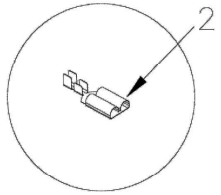

detailed view S

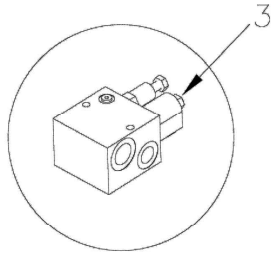


detailed view W

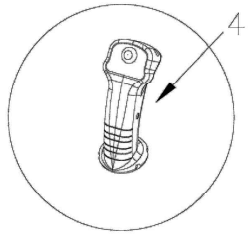


detailed view X


44. Electrical system for Hi-flow (전기장치부-하이플로우)				
No.	Name	Part No.	Quantity	Remarks
1	Hi-flow relay (하이플로우 릴레이)	330T4-4101	1	
2	Fuse box connector (퓨즈박스 연결 케넥터)	330T4-4102	1	
3	Hi-flow block (하이플로우 블록)	330T4-4103	1	
4	Hi-flow switch (하이블로우 스위치(주행 레버스위치))	330T4-4104	1	

45-1. Electrical system for Front horn and back up alarm (전장품 - 백업알람)

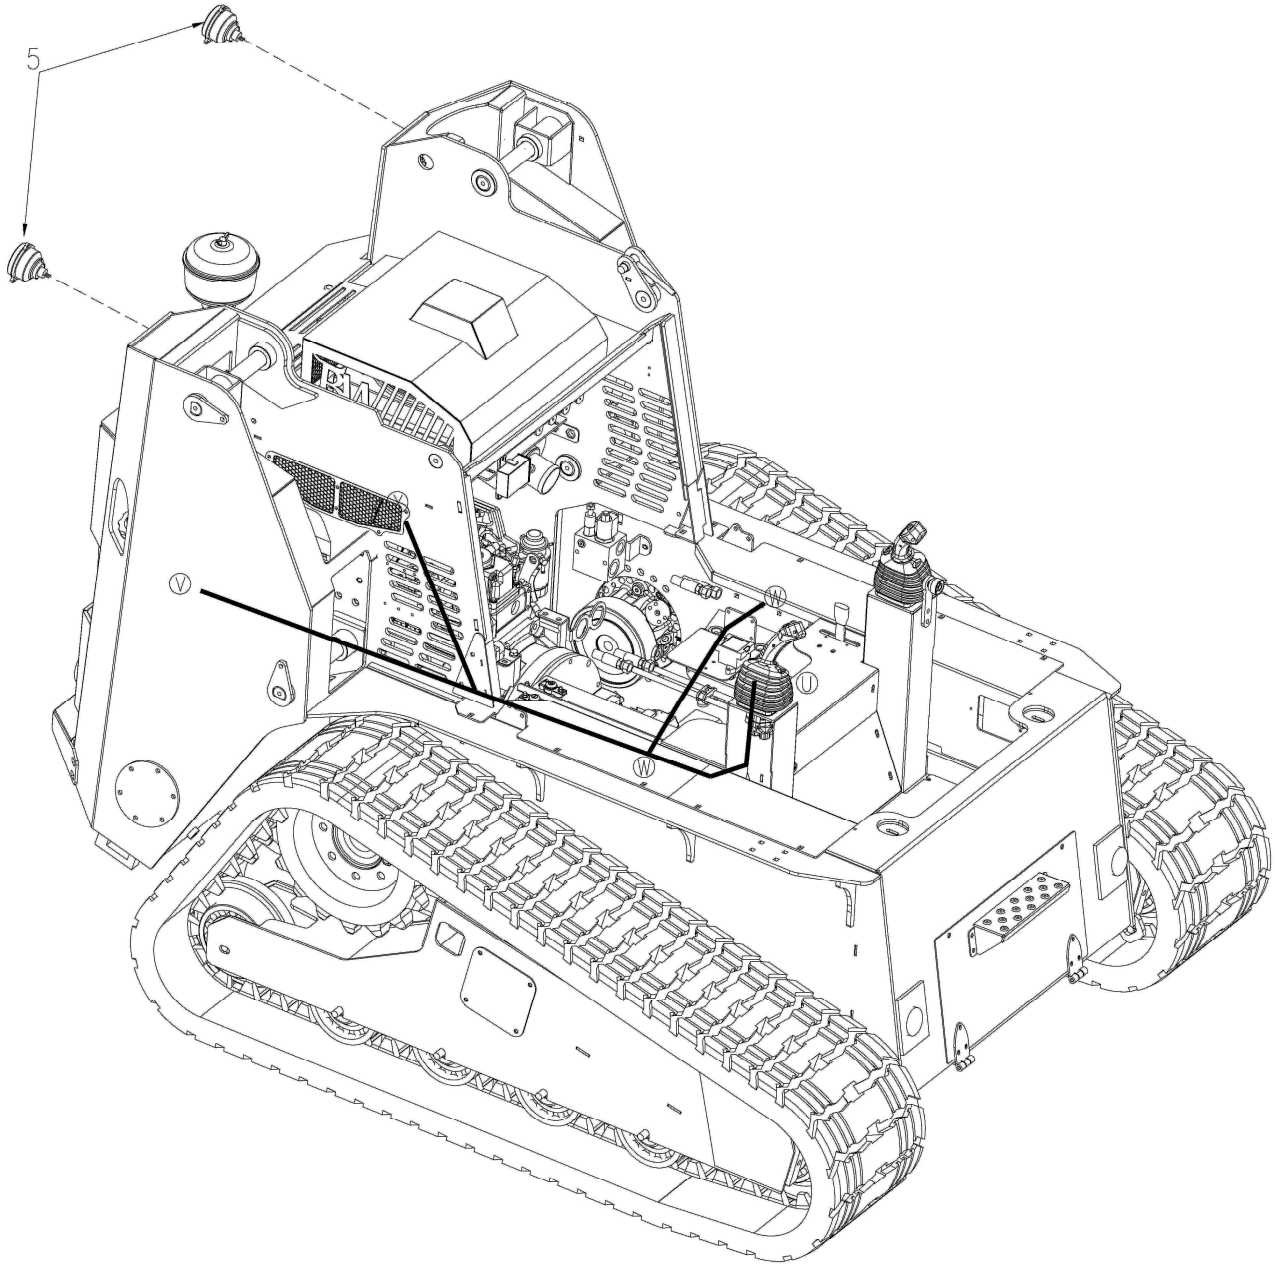


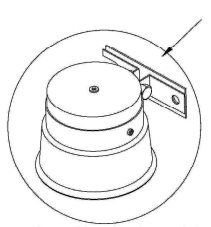


detailed view V

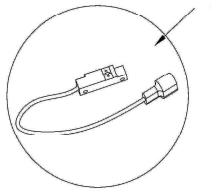

detailed view W

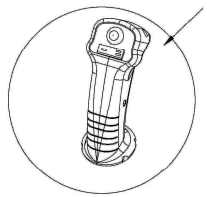


detailed view U

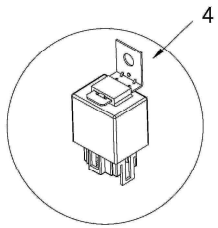


detailed view X

45-1. Electrical system for Front horn and back up alarm (전장품 - 백업알람) Kubota, 구보다				
No.	Name	Part No.	Quantity	Remarks
1	Back up alarm (백업 알람)	T400-4501	1	
2	Proximity sensor for back up alarm (백업 알림용 근접 센서)	T400-4502	1	
3	Joystick horn switch (조이스틱 혼 스위치)	T400-4503	1	
3-1	Joystick horn switch (조이스틱 혼 스위치)-옵션	T400-4504	1	
4	Relay (릴레이)	T400-4505	1	
5	Brake light (브레이크등)	T400-4506	2	
6	Wiring harness for front horn & back up alarm (혼 및 백업알람 배선)	T400-4507	1	


46. Mirror assy (미러모듈)

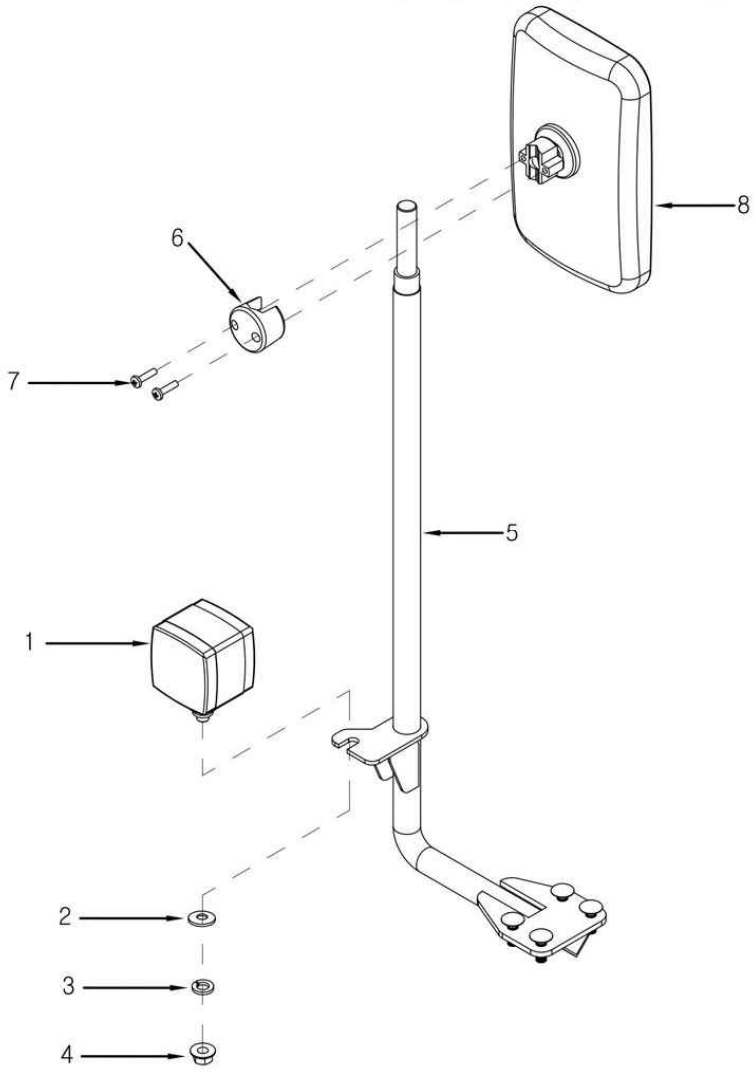


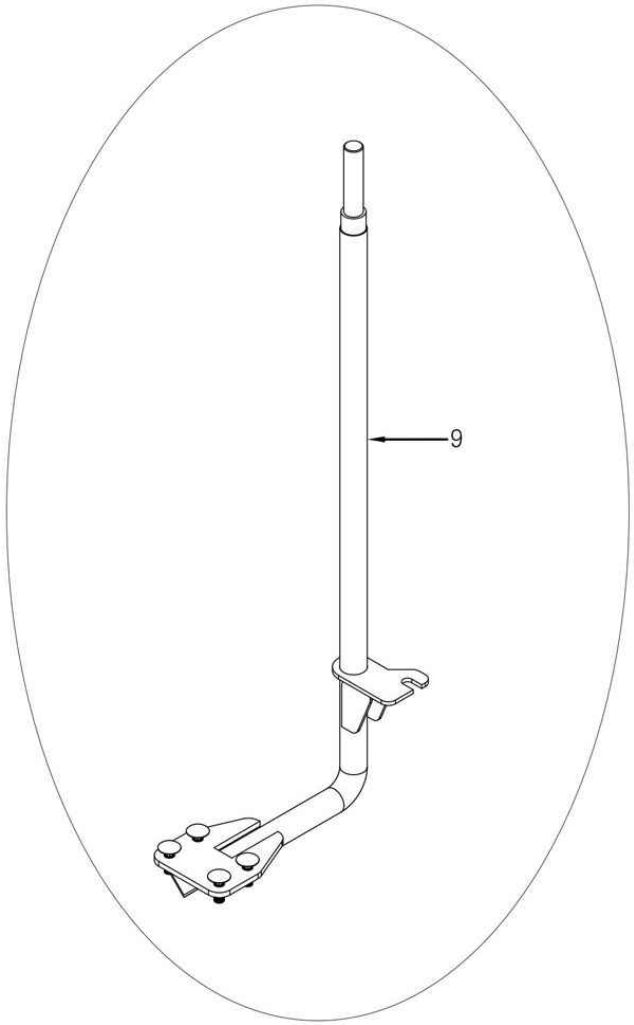


46. Mirror assy (미러모듈)				
No.	Name	Part No.	Quantity	Remarks
1	Direction indicator (방향지시등)	330T4-0901	2	
2	Washer (와셔)	330T4-0902	2	
3	Spring washer (스프링 와셔)	330T4-0903	2	
4	Nut (너트)	330T4-0904	2	
5	Mirror holder (미러 받침대(RH))	330T4-0905	1	
6	Socket fixing mirror (미러 고정 소켓)	330T4-0906	2	
7	Bolt (볼트)	330T4-0907	4	
8	Mirror (미러)	330T4-0908	2	
9	Mirror holder (미러 받침대(LH))	330T4-0909	1	

47. Safety device (안전 장치)

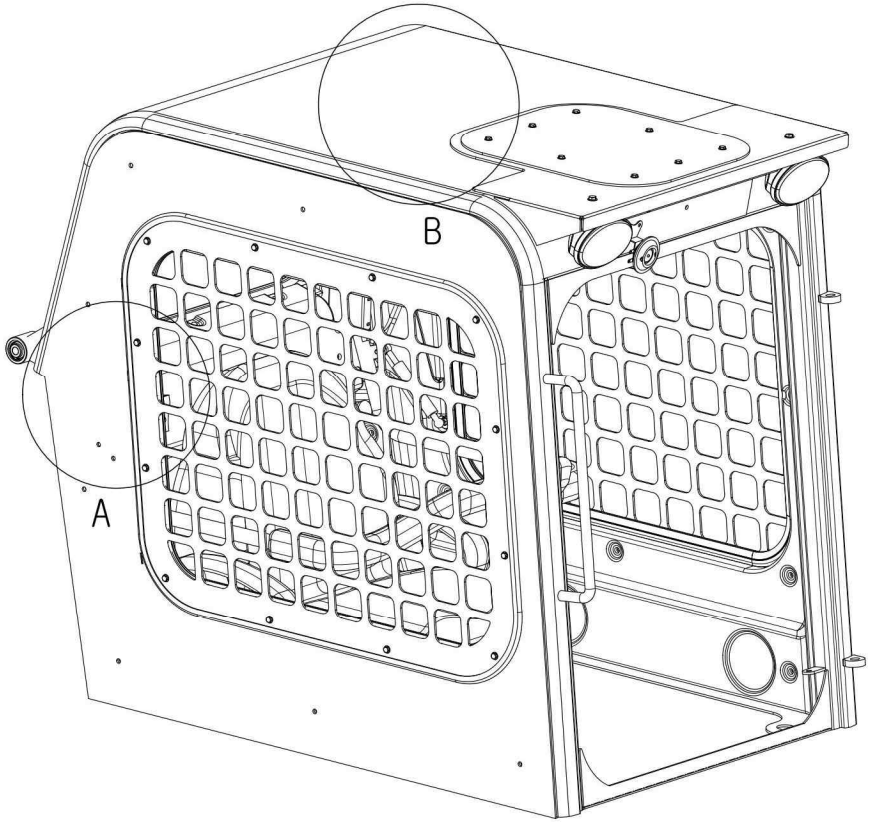

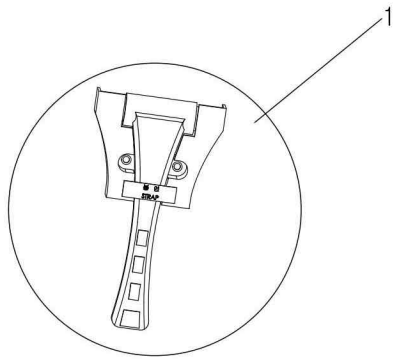


detailed view A

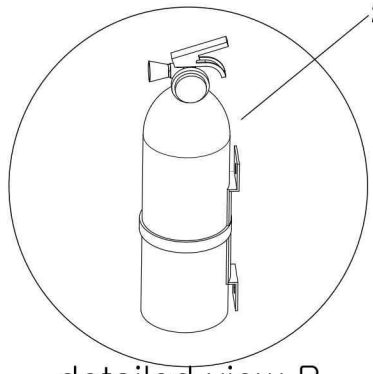

detailed view B


47. Safety device (안전 장치)				
No.	Name	Part No.	Quantity	Remarks
1	Hammer (망치)	330T4-4301	1	
2	Fire extinguisher (소화기)	330T4-4302	1	

48. Drive pump (구동 펌프)

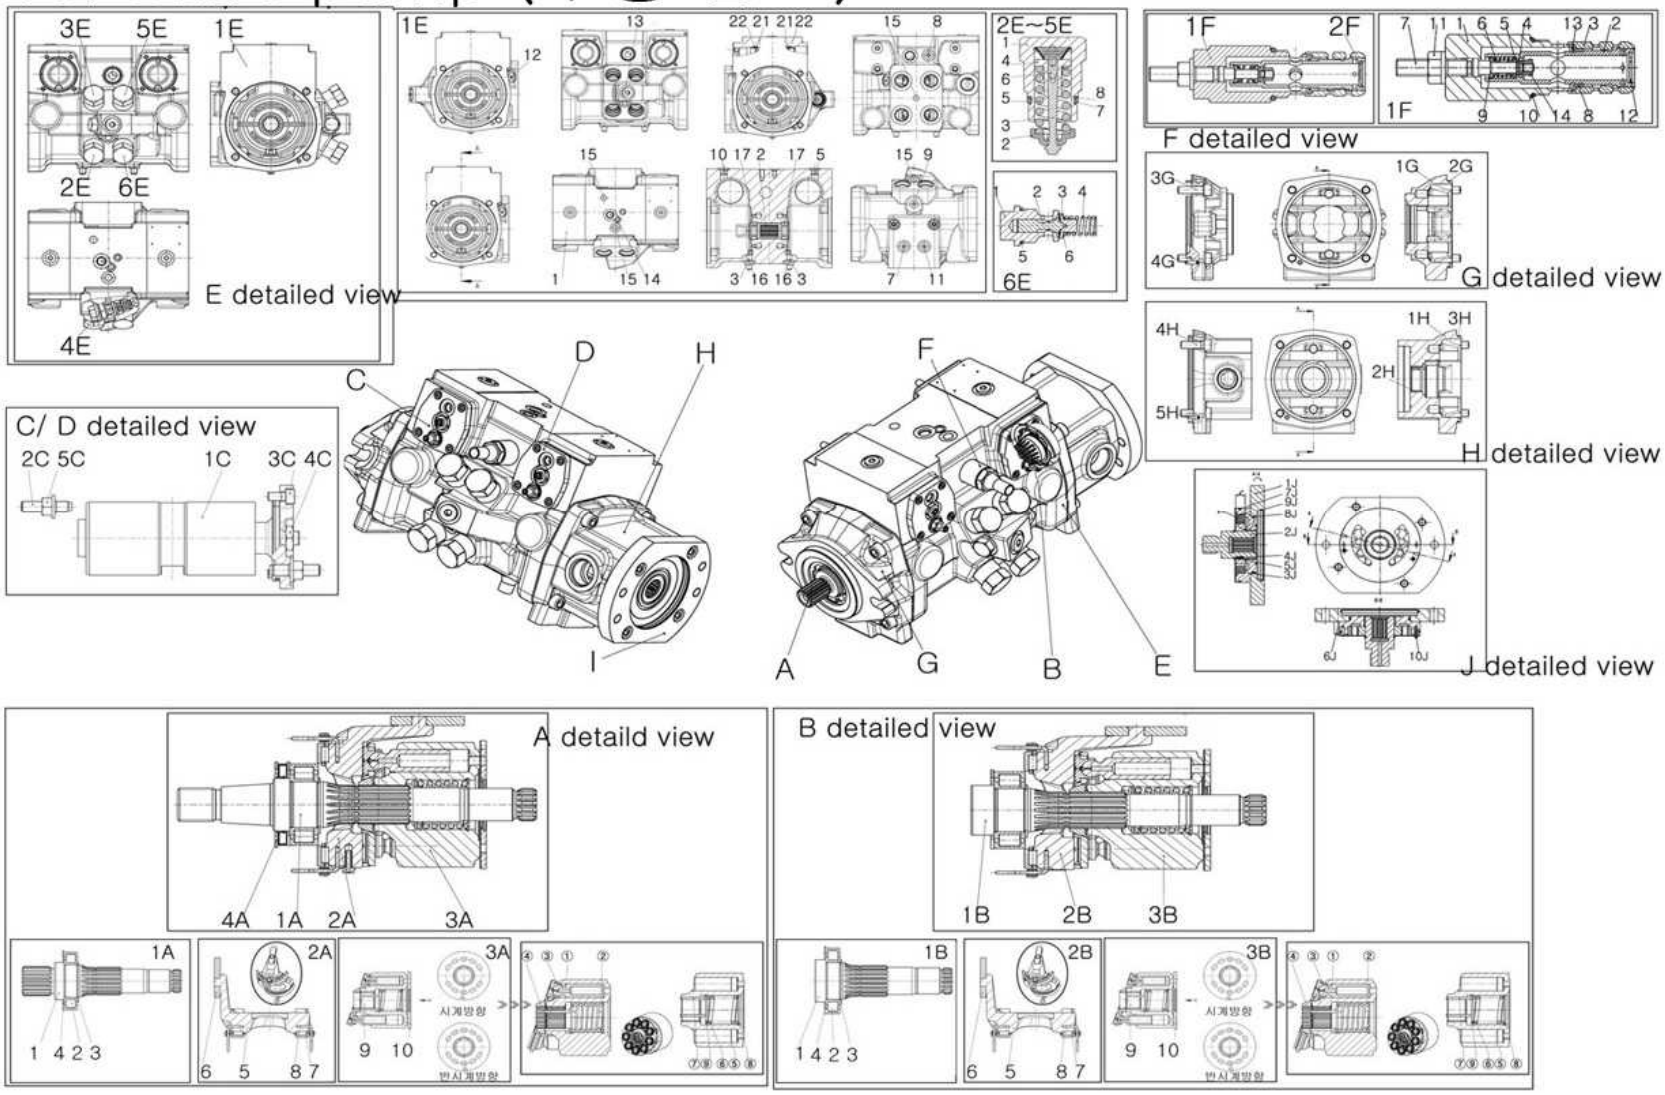


48. Drive pump, Rex Roth (구동 펌프)				
No.	Name	Part No.	Quantity	Remarks
A	Triebwerk (트립베르크) AA22VG-45	R902199804	1	
1A	Drive shaft with bearing	R902195142	1	
1	Drive shaft	R902061923	1	
2	Plain roller bearing	R913011777	1	
3	Retaining ring	R909083360	1	
4	Seeger V ring	R909832149	1	
2A	Cradle	R902195140	1	
5	Cradle R pop	R902146663	1	
6	Slide ring	R902051397	1	
7	Bearing liner	R902085005	1	
8	Cradle bearing assy	R902603571	1	
3A	TW A22VG45R22 HYDR. Teil 45GRAD LH	R902491495	1	
9	Rotary group, hydr section	R902491494	1	
①	Piston-slipper pad	R902146883	1	
①	Piston-slipper pad	R902087180	1	
②	Cylinder kit	R902504905	1	
⑤	Cylinder	R902484762	1	
⑥	Spring	R902400724	1	
⑦	Pressure pin	R902400725	1	
⑧	Seeger v ring	R902400726	1	
⑨	Back up ring	R902400727	1	
③	Rueckzug plate	R902486988	1	
④	Retaining ball	R902436450	1	
10	Valve plate	R902188425	1	
4A	Seal kit for rotary group	R902195103	1	

48. Drive pump (구동 펌프)

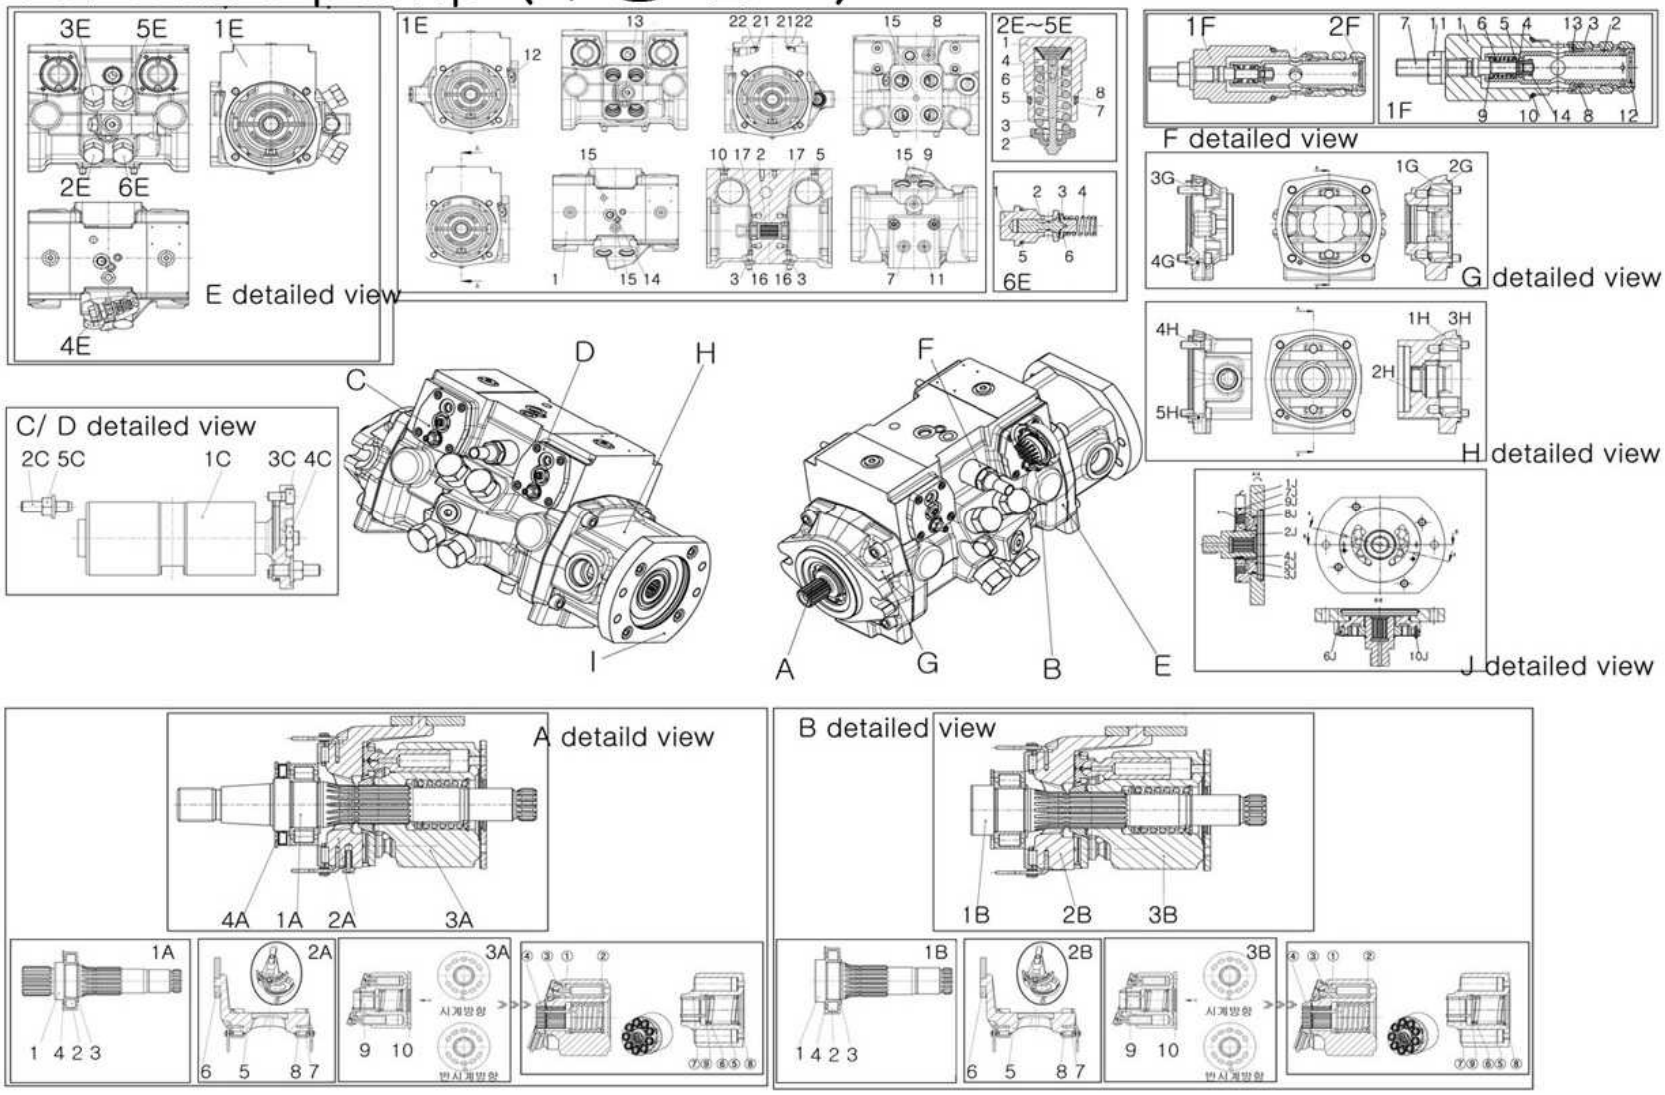


48. Drive pump (구동 펌프) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
B	Triebwerk (트립베르크)	R902199805	1	
1B	Drive shaft with bearing	R902195108	1	
1	Drive shaft	R902087240	1	
2	Plain roller bearing	R913011777	1	
3	Retaining ring	R909083360	1	
4	Seeger V ring	R909832149	1	
2B	Cradle	R902195140	1	
5	Cradle R pop	R902146663	1	
6	Slide ring	R902051397	1	
7	Bearing liner	R902085005	1	
8	Cradle bearing assy	R902603571	1	
3B	TW A22VG45R22 HYDR. Teil 45GRAD LH	R902491495	1	
9	Rotary group, hydr section	R902491494	1	
①	Piston-slipper pad	R902146883	1	
①	Piston-slipper pad	R902087180	1	
②	Cylinder kit	R902504905	1	
⑤	Cylinder	R902484762	1	
⑥	Spring	R902400724	1	
⑦	Pressure pin	R902400725	1	
⑧	Seeger v ring	R902400726	1	
⑨	Back up ring	R902400727	1	
③	Rueckzug plate	R902486988	1	
④	Retaining ball	R902436450	1	
10	Valve plate	R902188424	1	
C	Hydraulic control	R902198999	1	

48. Drive pump (구동 펌프)

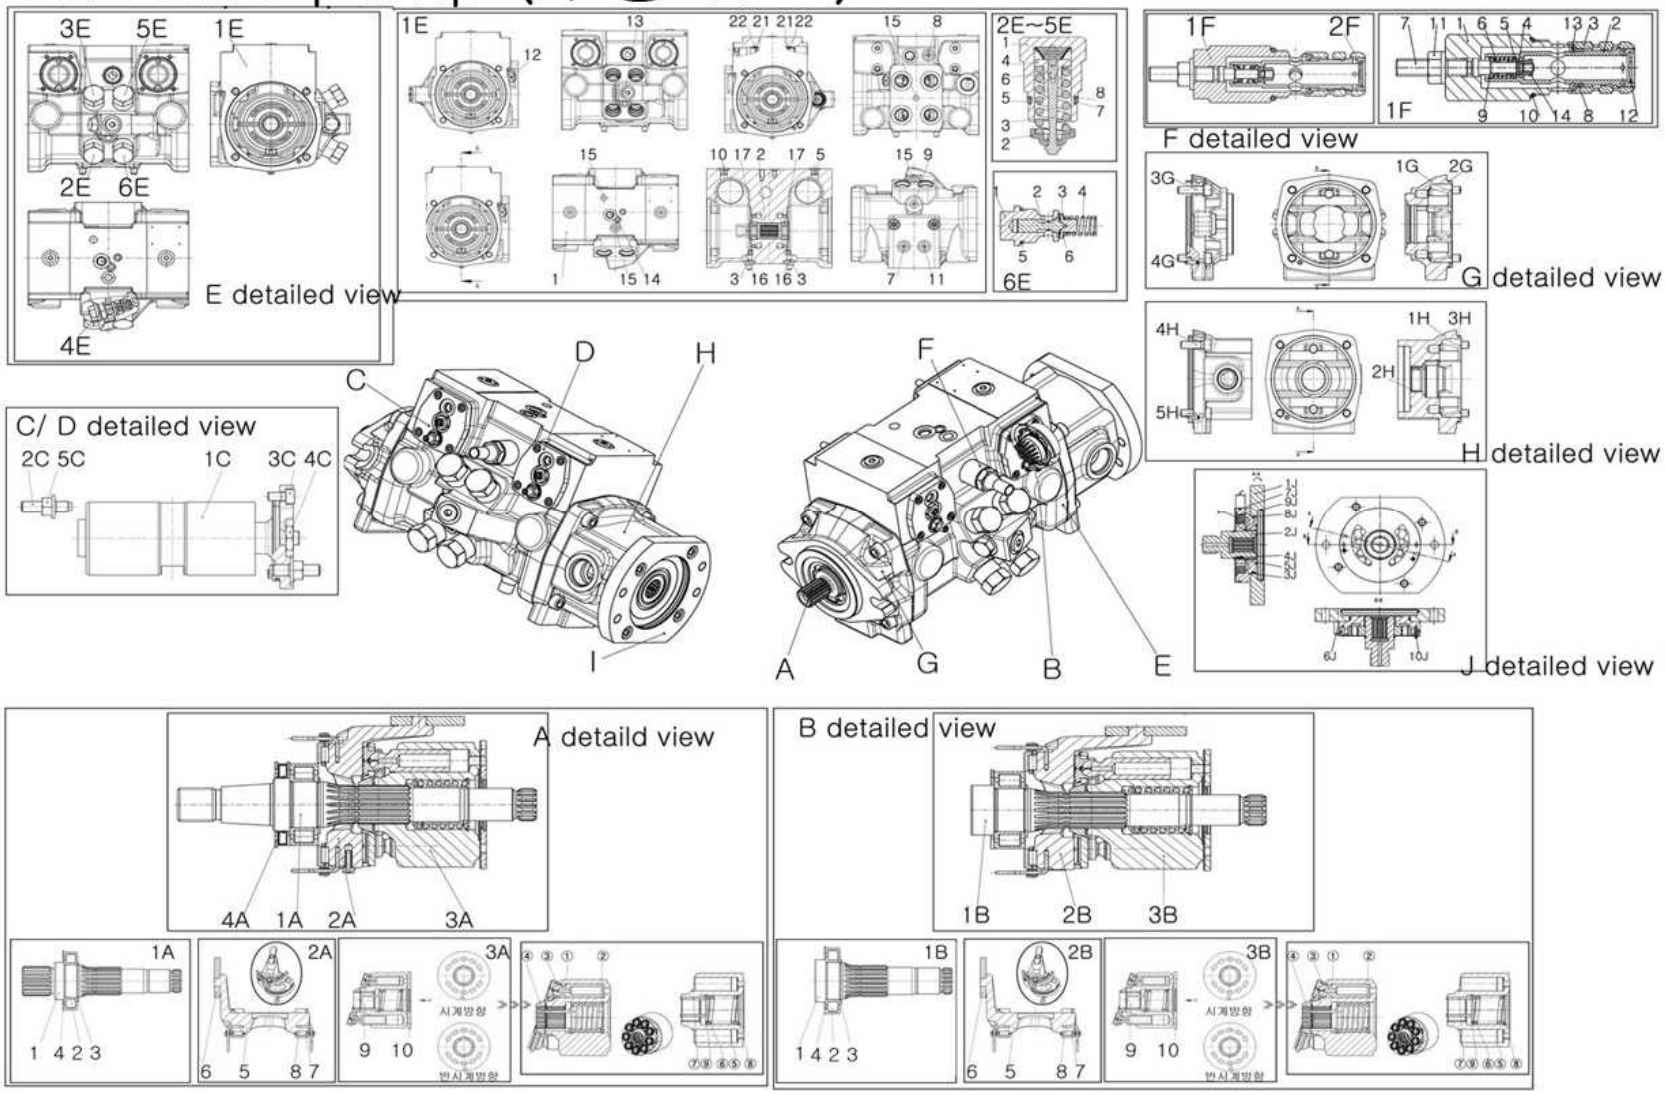


48. Drive pump (구동 펌프) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
D	Hydraulic control	R902198999	1	
1C	Positioning piston	R902226745	2	
2C	Threaded pin	R902237894	2	
3C	Socket, head screw	R909083018	8	
4C	Haxagon nut	R902017521	2	
5C	Sealing nut	R909152707	2	
E	Pump housing	R902195979	1	
1E	Pump housing complete	R902195977	1	
1	Pump housing	R902167193	1	
2	Through drive coupling	R902195052	1	
3	Eccentric screw	R902049734	2	
4	Rod seal kit	R902602138	4	
5	Guide ring	R902603689	4	
6	Locking screw	R909153371	1	
7	Locking screw	R909153371	1	
8	Locking screw	R909153371	1	
9	Locking screw	R909153371	1	
10	Locking screw	R909153371	1	
11	Locking screw	R909153371	1	
12	Locking screw	R909153371	1	
13	Locking screw	R909153338	1	
14	Double break off plug	R909831319	1	
15	Double break off plug	R902049733	1	
16	Sealing nut	R909153271	1	
17	Plain roller bearing	R909831337	2	

48. Drive pump (구동 펌프)

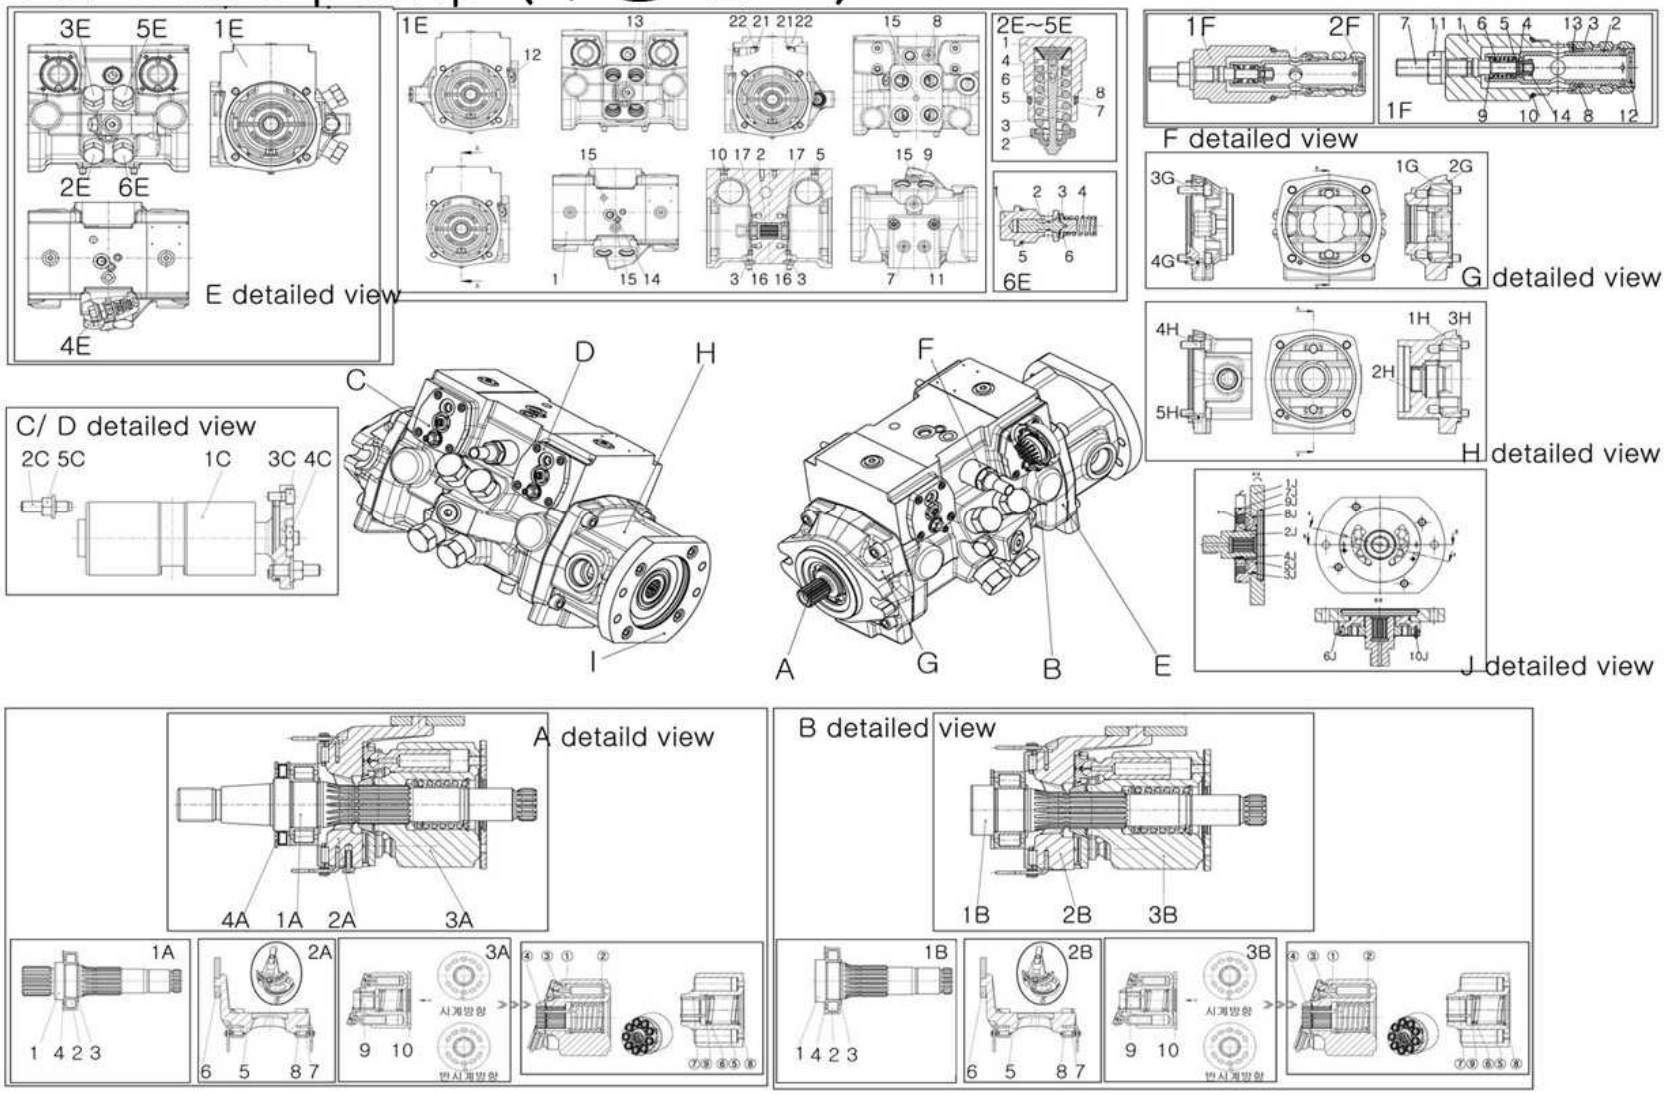


48. Drive pump (구동 펌프) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
2E	Pressure relief valve HD250-530	R902016398	4	
1	Locking screw	R909445618	4	
2	Valve collar	R902010478	4	
3	Valve spindle	R902010477	4	
4	Spring loading nut	R902016288	4	
5	Pressure spring	R909921948	4	
6	Threaded pin	R902016289	4	
7	O ring	R909083761	4	
8	Back up ring	R909831768	4	
3E	Pressure relief valve HD250-530	R902016398	4	
4E	Pressure relief valve HD250-530	R902016398	4	
5E	Pressure relief valve HD250-530	R902016398	4	
6E	Pressure relief valve ND15-30	R902018492	1	
1	Locking screw	R902168491	1	
2	Valve spindle	R902168489	1	
3	Spring colloar	R902168490	1	
4	Pressuring spring	R902435901	1	
5	O ring	R909152694	1	
6	Shim	R909153402	1	
F	Control cartridge w. orifice	R902115351	1	
1F	Control cartridge without orifice	R902000520	1	
1	Control screw	R909414726	1	
2	Differential piston	R902037909	1	
3	Controller pipe	R909921883	1	
4	Washer	R909421327	1	

48. Drive pump (구동 펌프)

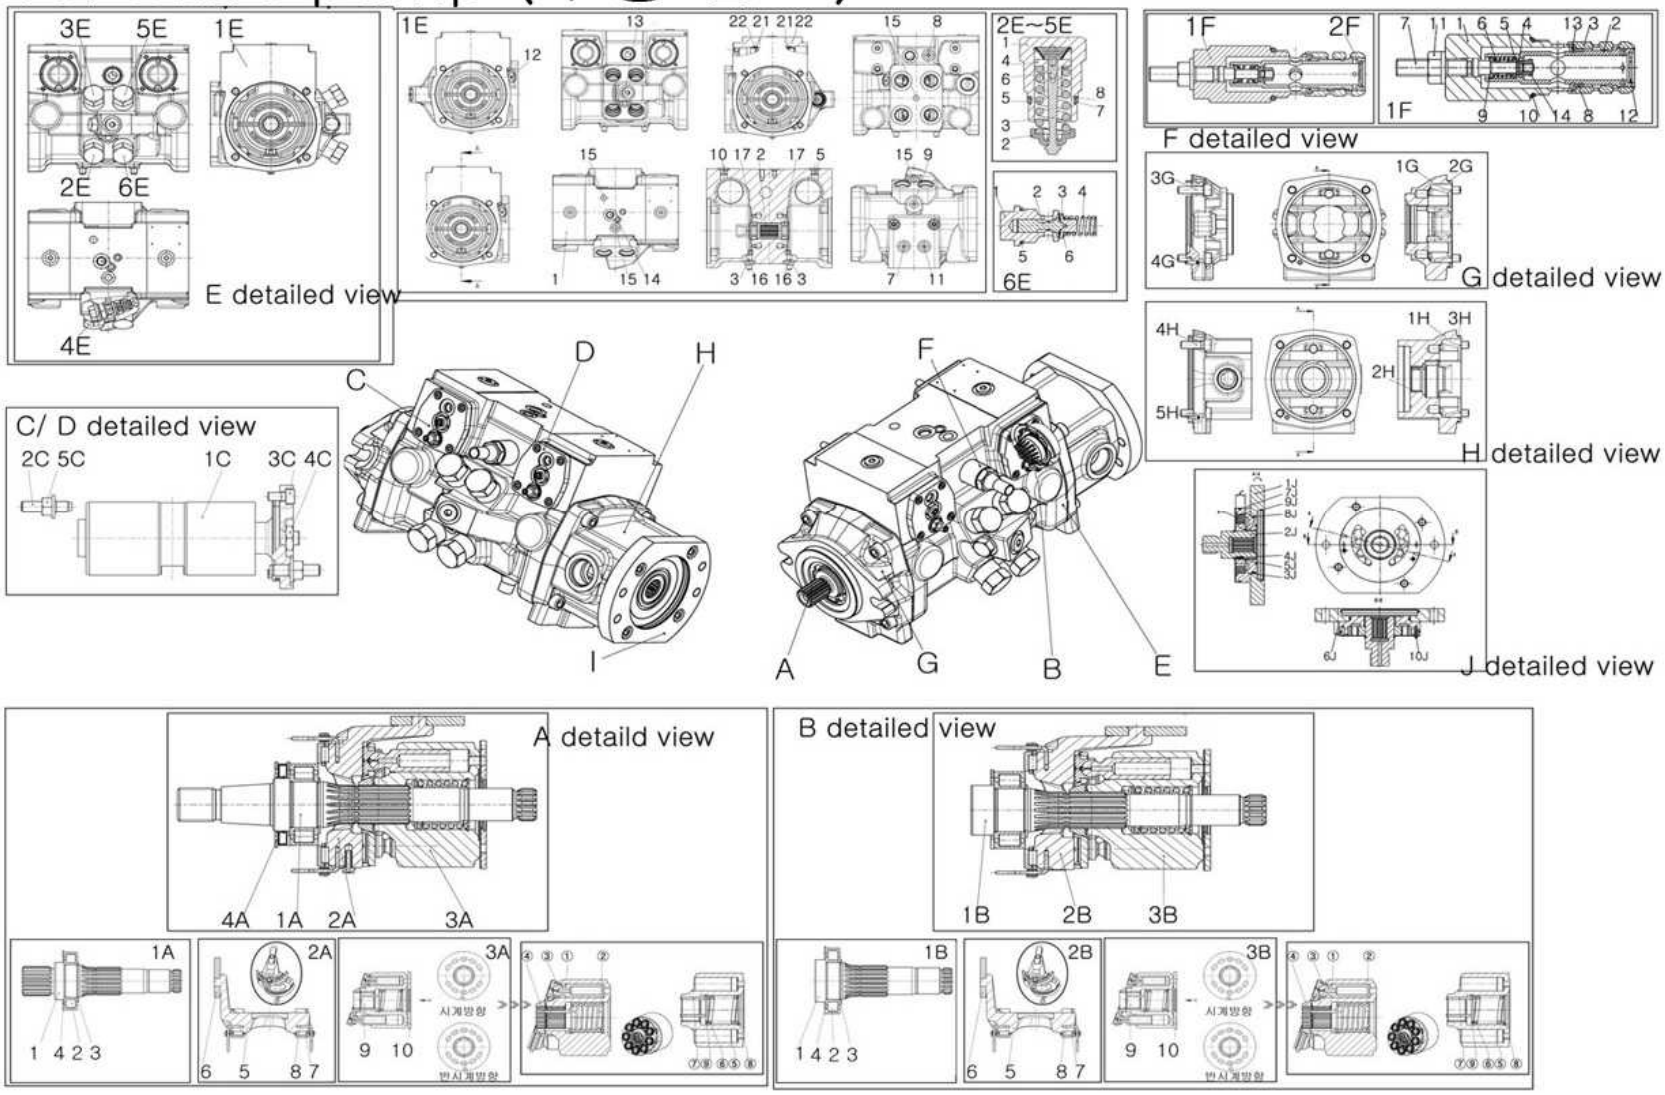


48. Drive pump (구동 펌프) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
5	Spring collar	R909414047	2	
6	Pressure spring	R902228522	1	
7	Threaded pin	R902037910	1	
8	Ring	R909921887	1	
9	Circlip	R909156476	1	
10	O ring	R909083761	1	
11	Sealing nut	R909152707	1	
12	Retaining ring	R909083380	1	
13	Seeger v ring	R909153848	1	
14	Hexagon nut	R909157287	1	
2F	Orifice	R909408665	1	
G	Bearing flange, complete	R902195264	1	
1	Bearing flange	R902195931	1	
2	O ring	R909086678	1	
3	Socket, head screw	R909086573	4	
4	Cylinder pin	R900748992	1	
H	Bearing flange, complete	R902205458	1	
1	Bearing flange	R902167094	1	
2	Bearing bushing	R909449136	1	
3	O ring	R909086678	4	
4	Socket, head screw	R909086573	1	
5	Cylinder pin	R900748992	1	
I	Internal gear pump	R902167060	1	
1	Intermediate flange	R902148201	1	
2	Through drive coupling	R902095397	1	

48. Drive pump (구동 펌프)

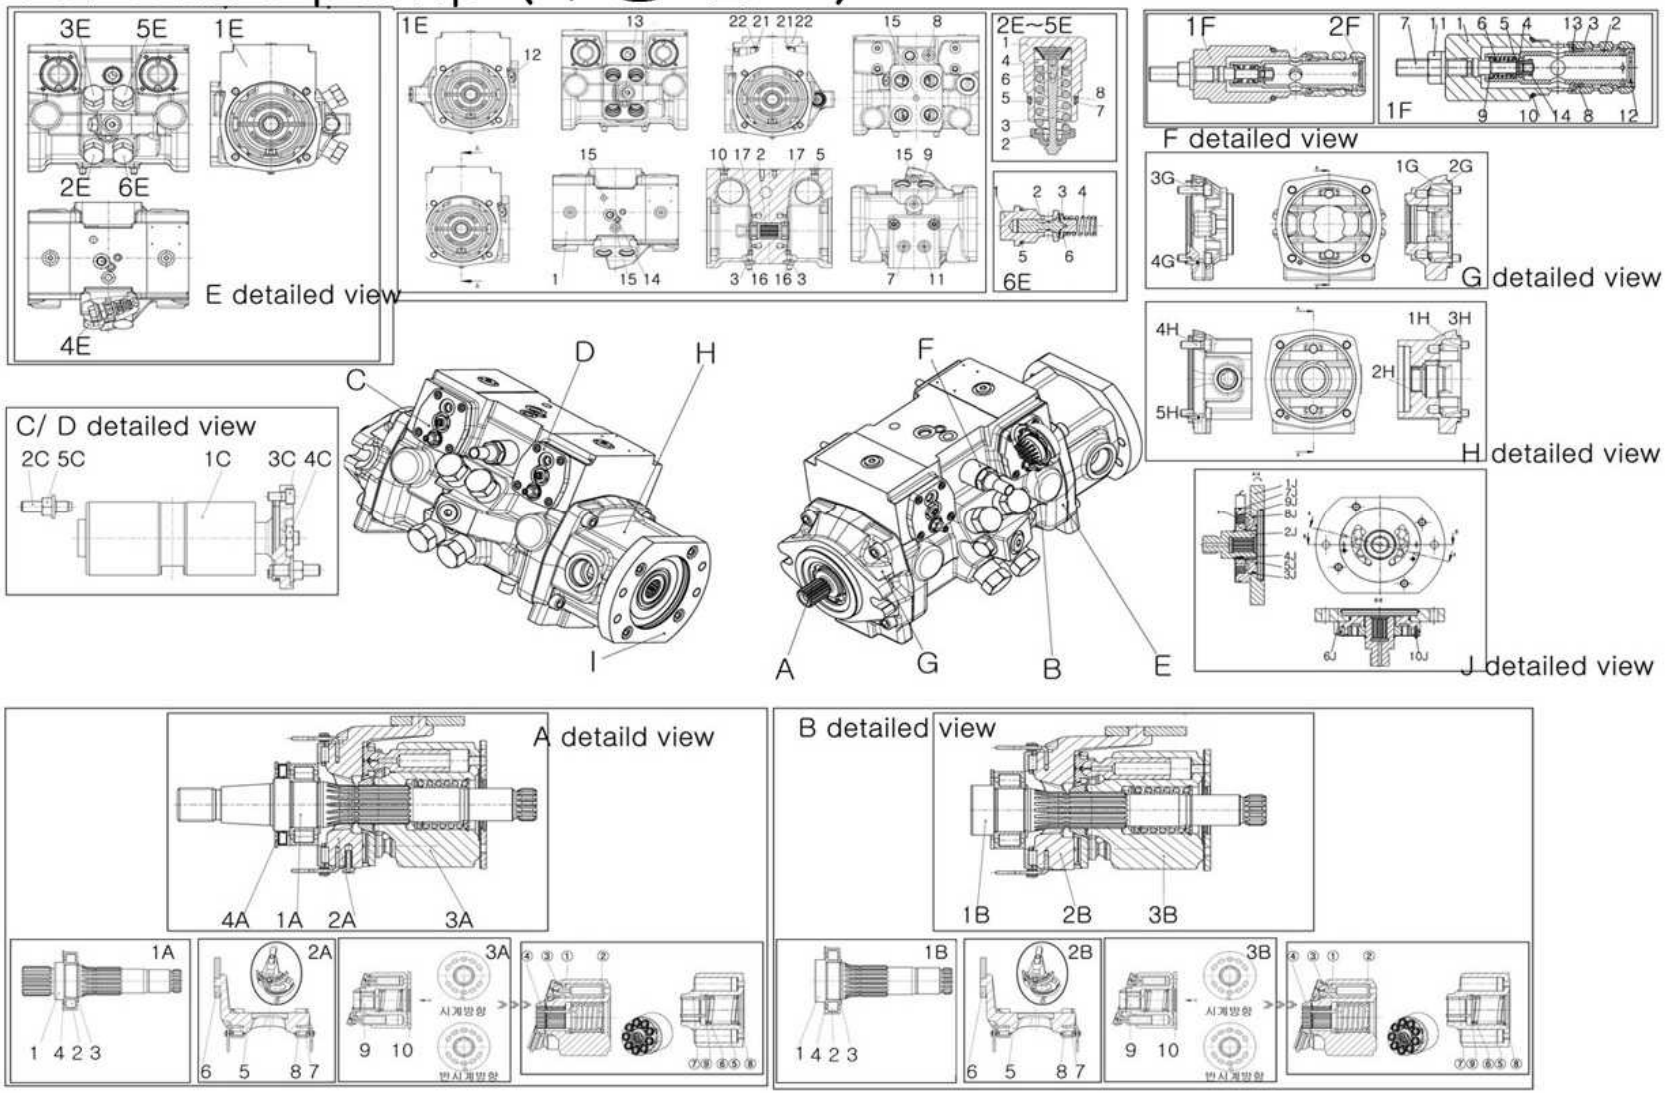


48. Drive pump (구동 펌프) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
3	Int. gear pump case with accessories	R902124940	1	
4	Shaft key	R902025645	1	
5	Snap ring	R909156930	1	
6	Socket, head screw	R909083060	4	
7	O ring	R909086823	1	
8	O ring	R909084504	1	
9	O ring	R913032365	1	
10	Cylinder pin	R909087694	1	

49. Drive motor (구동모터)

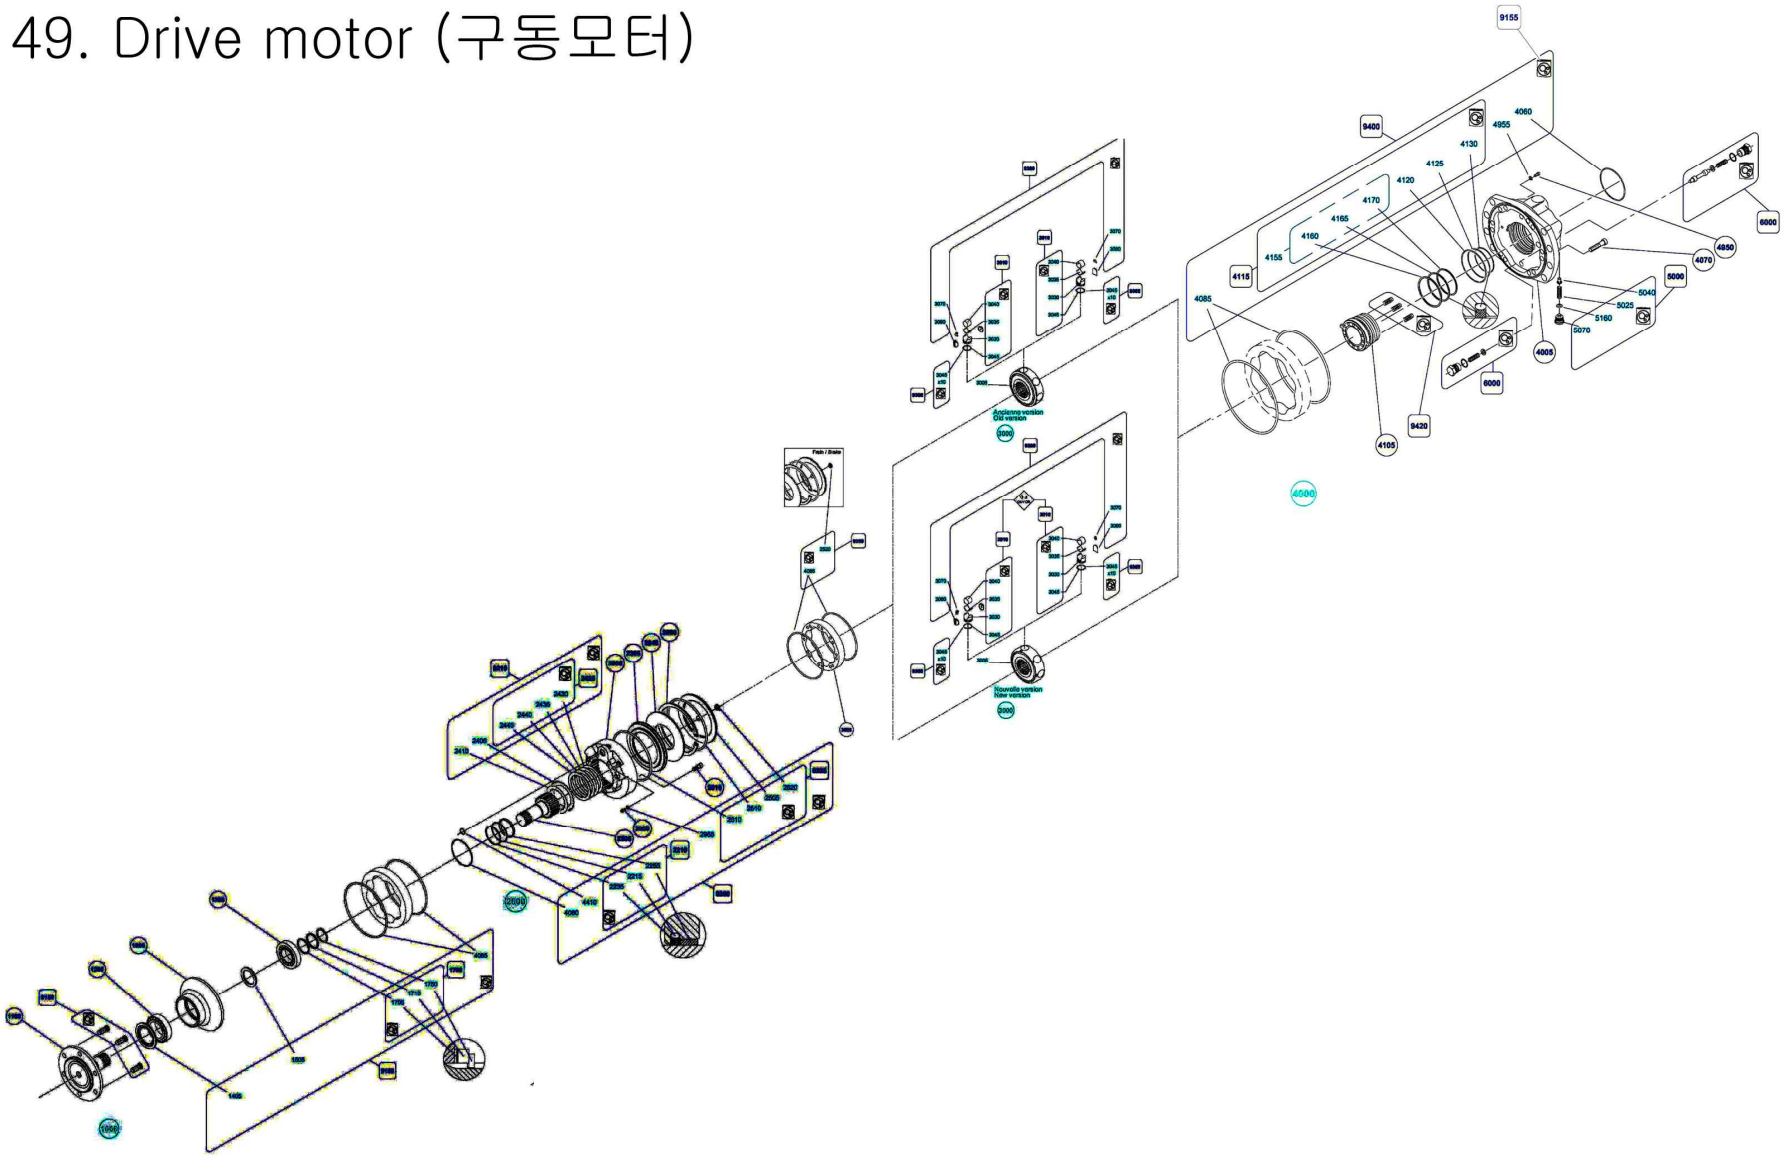


49. Drive motor (구동모터)				
No.	Name	Part No.	Quantity	Remarks
1000	Other SUBASSEMBLY			
1105	SHAFT			
9150	BOLT			
1205	BEARING			
1005	BEARING SUPPORT			
1305	BEARING			
1405	SEAL			
1505	SEAL			
1705	SHIM			
1710	GUIDE RING			
1750	SNAP RING			
1700	REPAIR KIT			
4085	SEAL			
9210	9210-REPAIR KIT			
2405	BRAKE DISC			
2445	SHIM			
2440	SHIM			
2435	SHIM			
2430	SHIM			
2425	SEAL KIT			
2005	BRAKE HOUSING			
2305	BRAKE PISTON			
2040	WASHER			

49. Drive motor (구동모터)

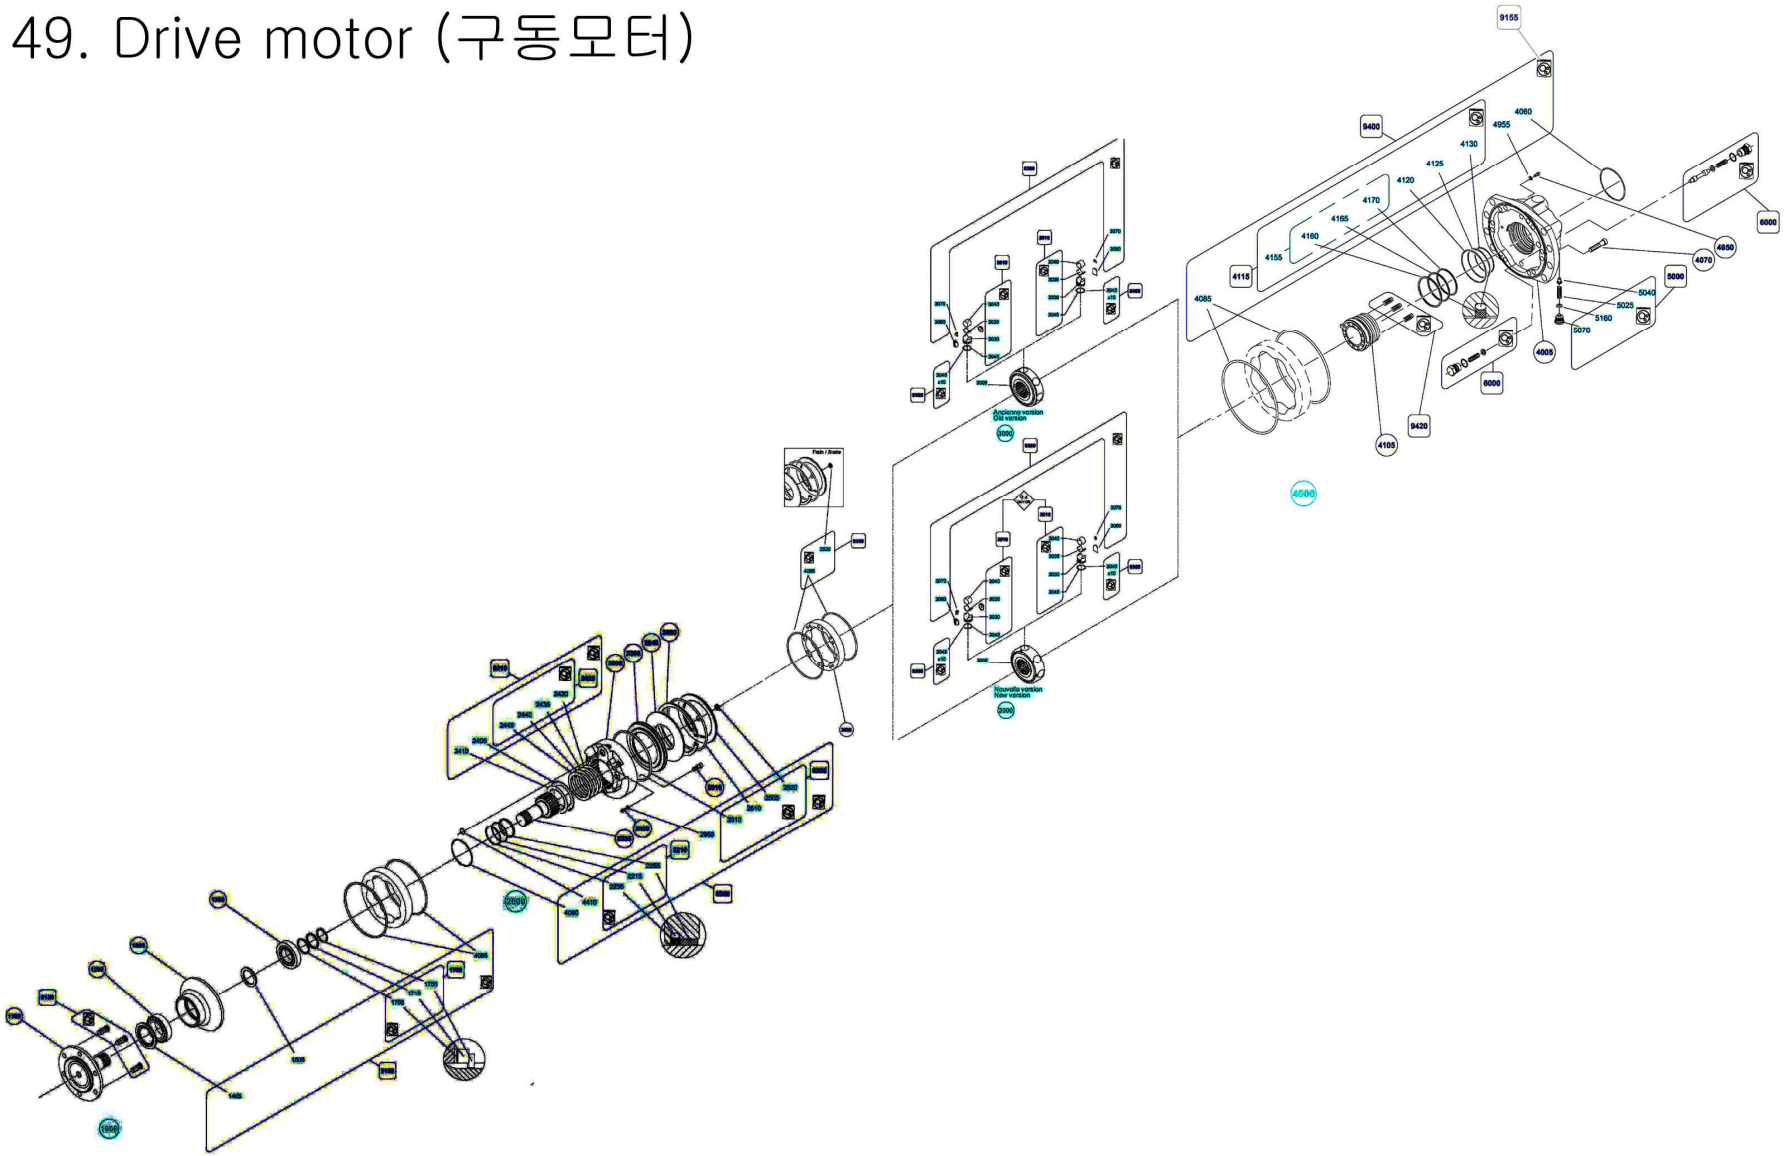


49. Drive motor (구동모터) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
2080	SNAP RING			
2000	BRAKE SUBASSEMBLY			
4060	SEAL			
4410	SEAL			
2235	SEAL SUPPORT			
2215	SEAL			
2255	OTHER BUSHING			
2205	BRAKE SHAFT			
2950	SCREW			
2210	SEAL KIT			
9200	REPAIR KIT			
2955	SEAL			
2310	SEAL			
2010	SCREW			
2510	SEAL			
2505	CAP			
2520	PLUG			
9225	SEAL KIT			
9300	REPAIR KIT			
3070	CLIP			
3060	LUNAMBULE			
9305	SEAL KIT			
3045	SEAL			
3005	CYLINDER BLOCK			
3040	ROLLER			

49. Drive motor (구동모터)

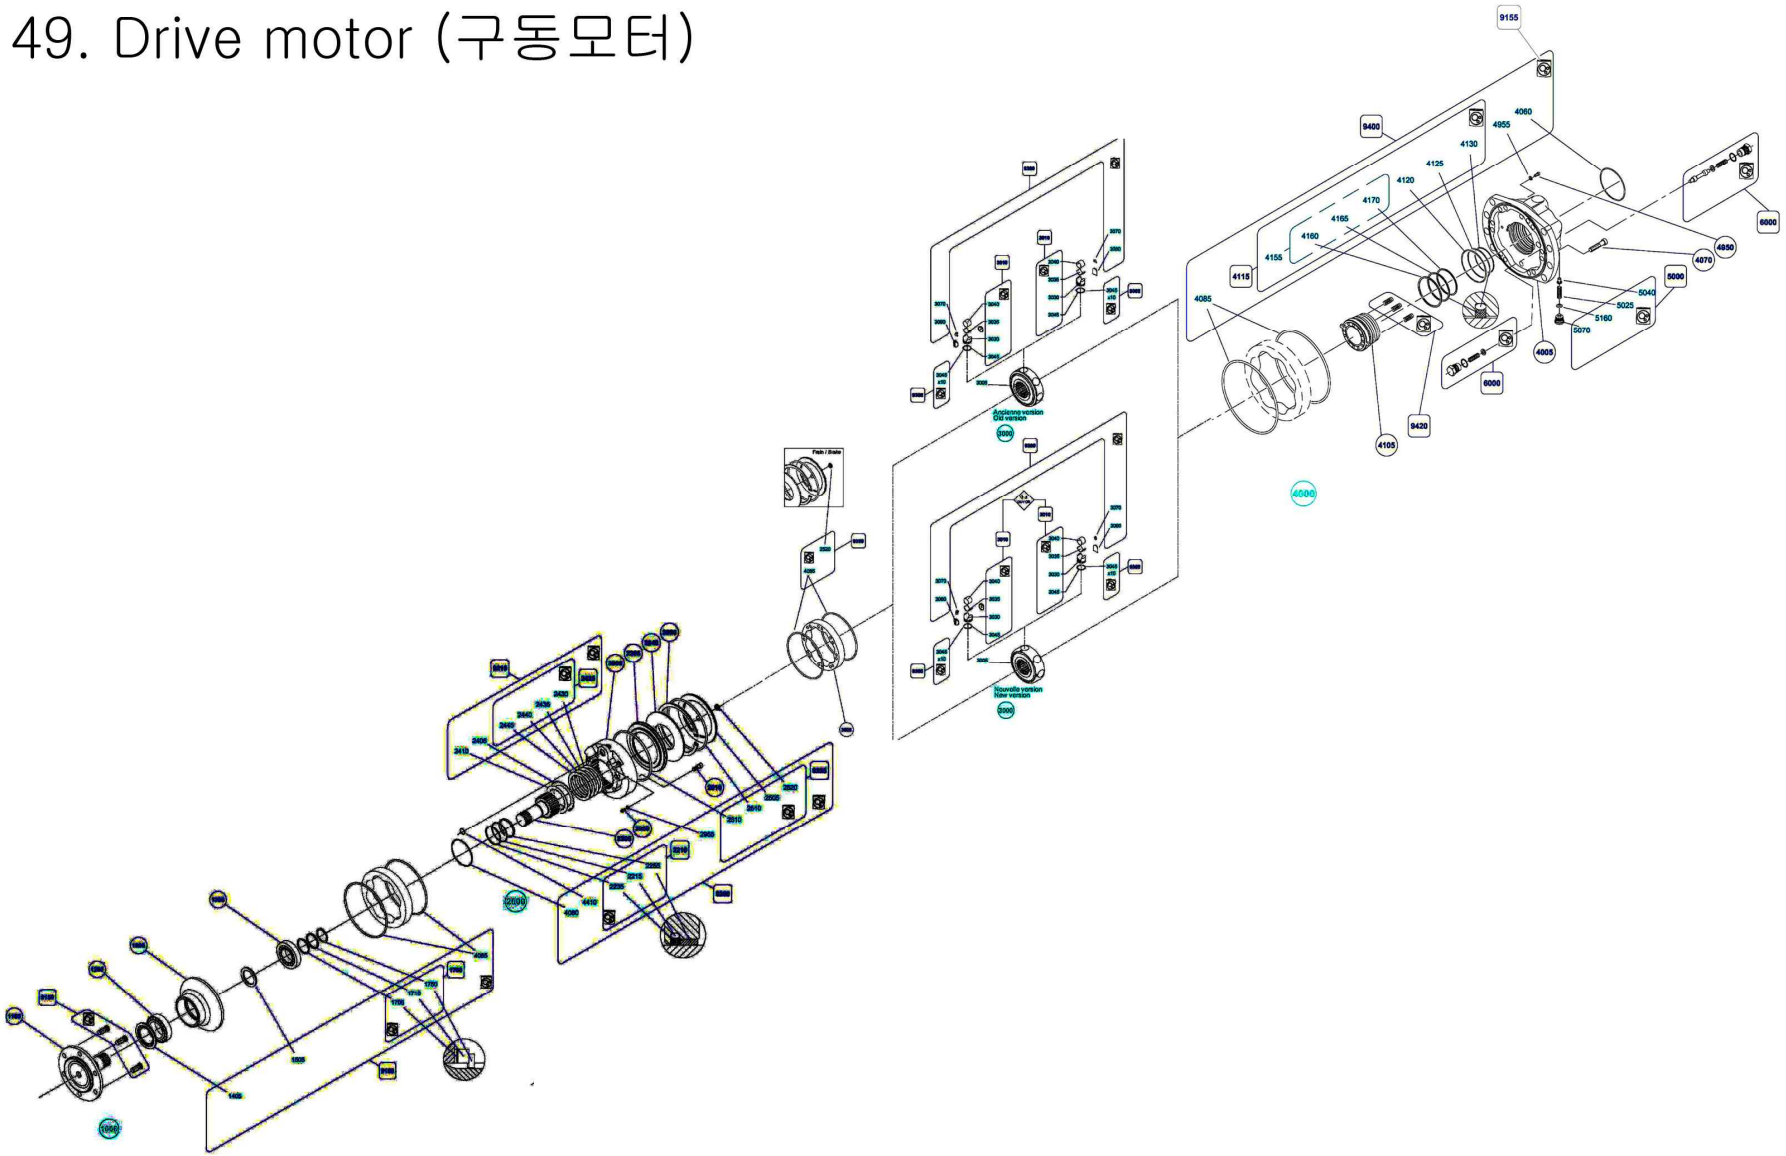


49. Drive motor (구동모터) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
3035	PISTON BUSHING			
3030	RADIAL PISTON			
3045	SEAL			
3010	RADIAL PISTON			
3070	CLIP			
3060	LUNAMBULE			
2520	PLUG			
4085	SEAL			
3505	REPAIR KIT			
3000	CYLINDER BLOCK			
4115	SEAL KIT			
4155	SEAL			
4160	SEAL SUPPORT			
4165	SEAL SUPPORT			
4170	SEAL SUPPORT			
4120	SEAL			
4125	SEAL			
4130	SEAL			
4955	SEAL			
4060	SEAL			
4000	COVER			
4105	DISTRIBUTION VALVE			
9420	SEAL KIT			
6000	Other SUBASSEMBLY			
4005	COVER			

49. Drive motor (구동모터)

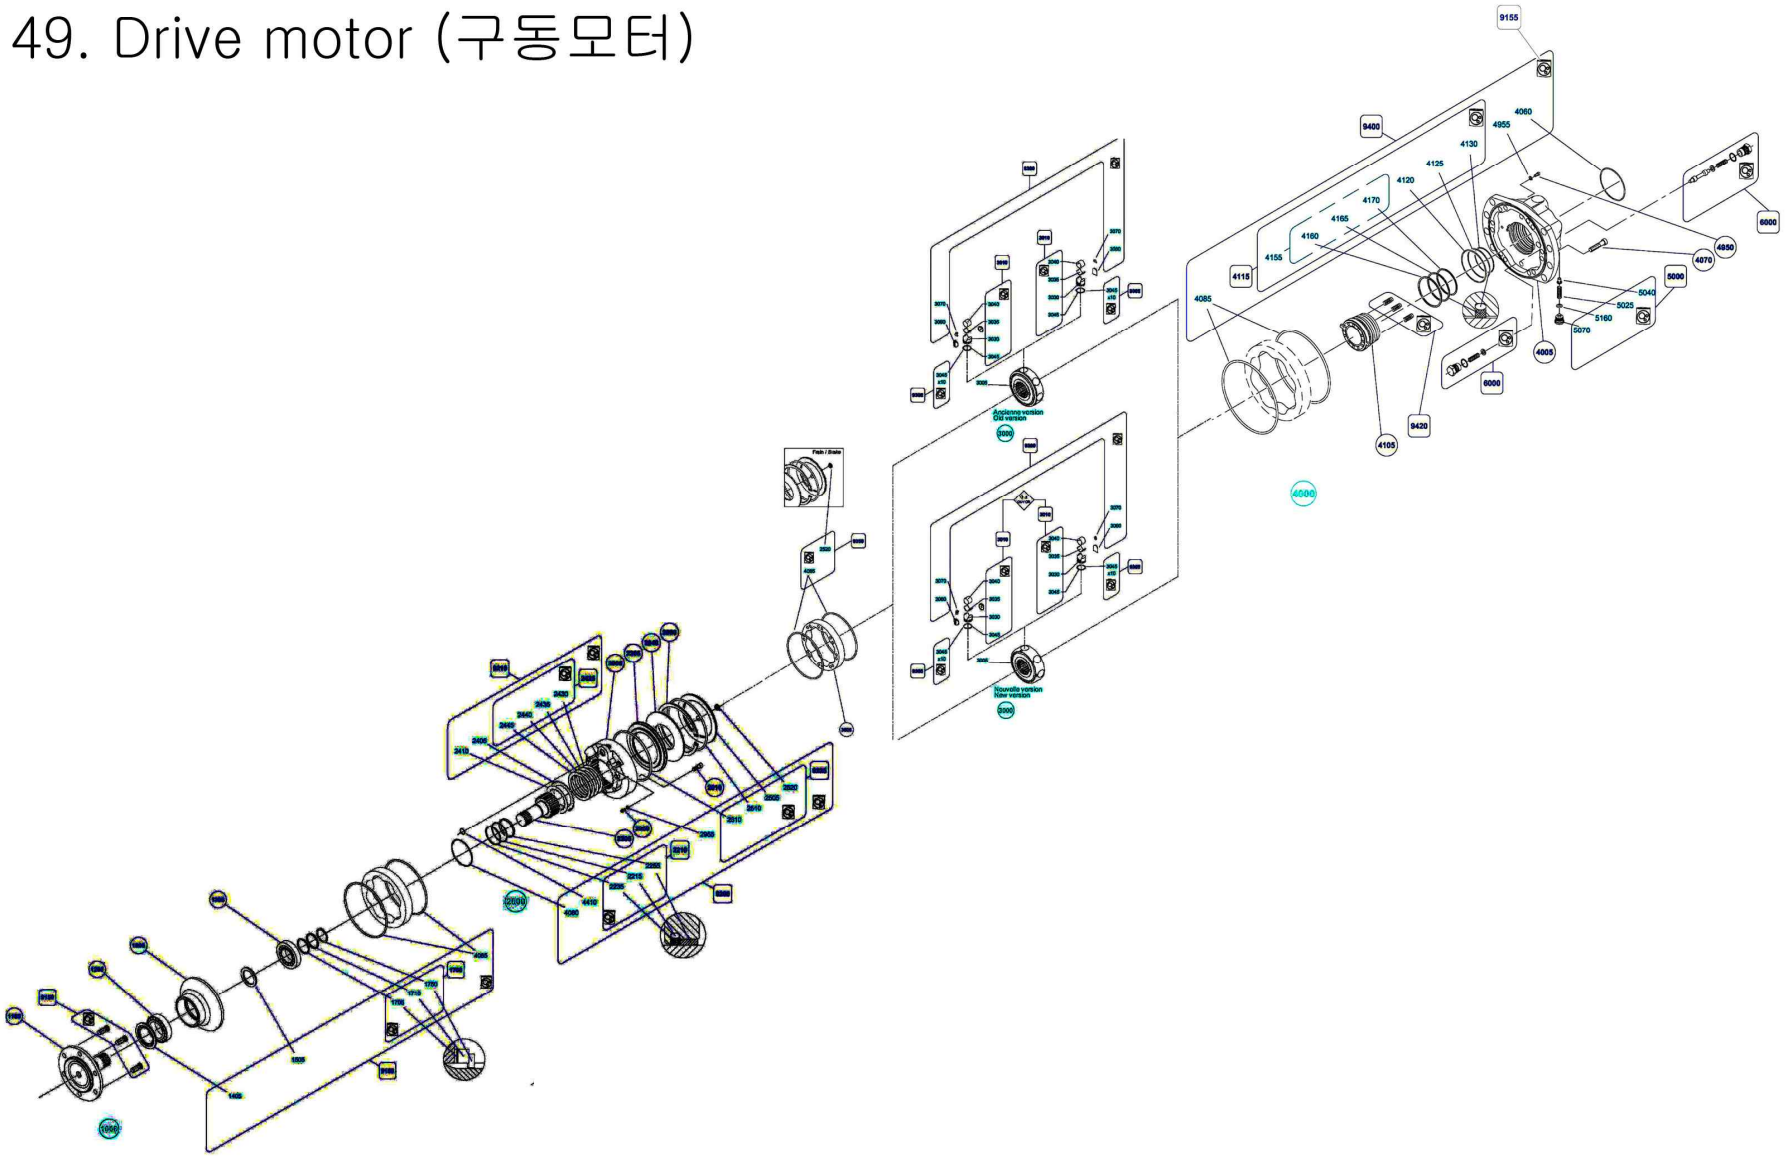

49. Drive motor (구동모터) (Cont'd) (계속)				
No.	Name	Part No.	Quantity	Remarks
5000	PRESSURE CONTROL VALVE			
4070	SCREW			
4950	SCREW			
6000	Other SUBASSEMBLY			
9155	NUT			

50. Control valve (콘트롤 밸브)

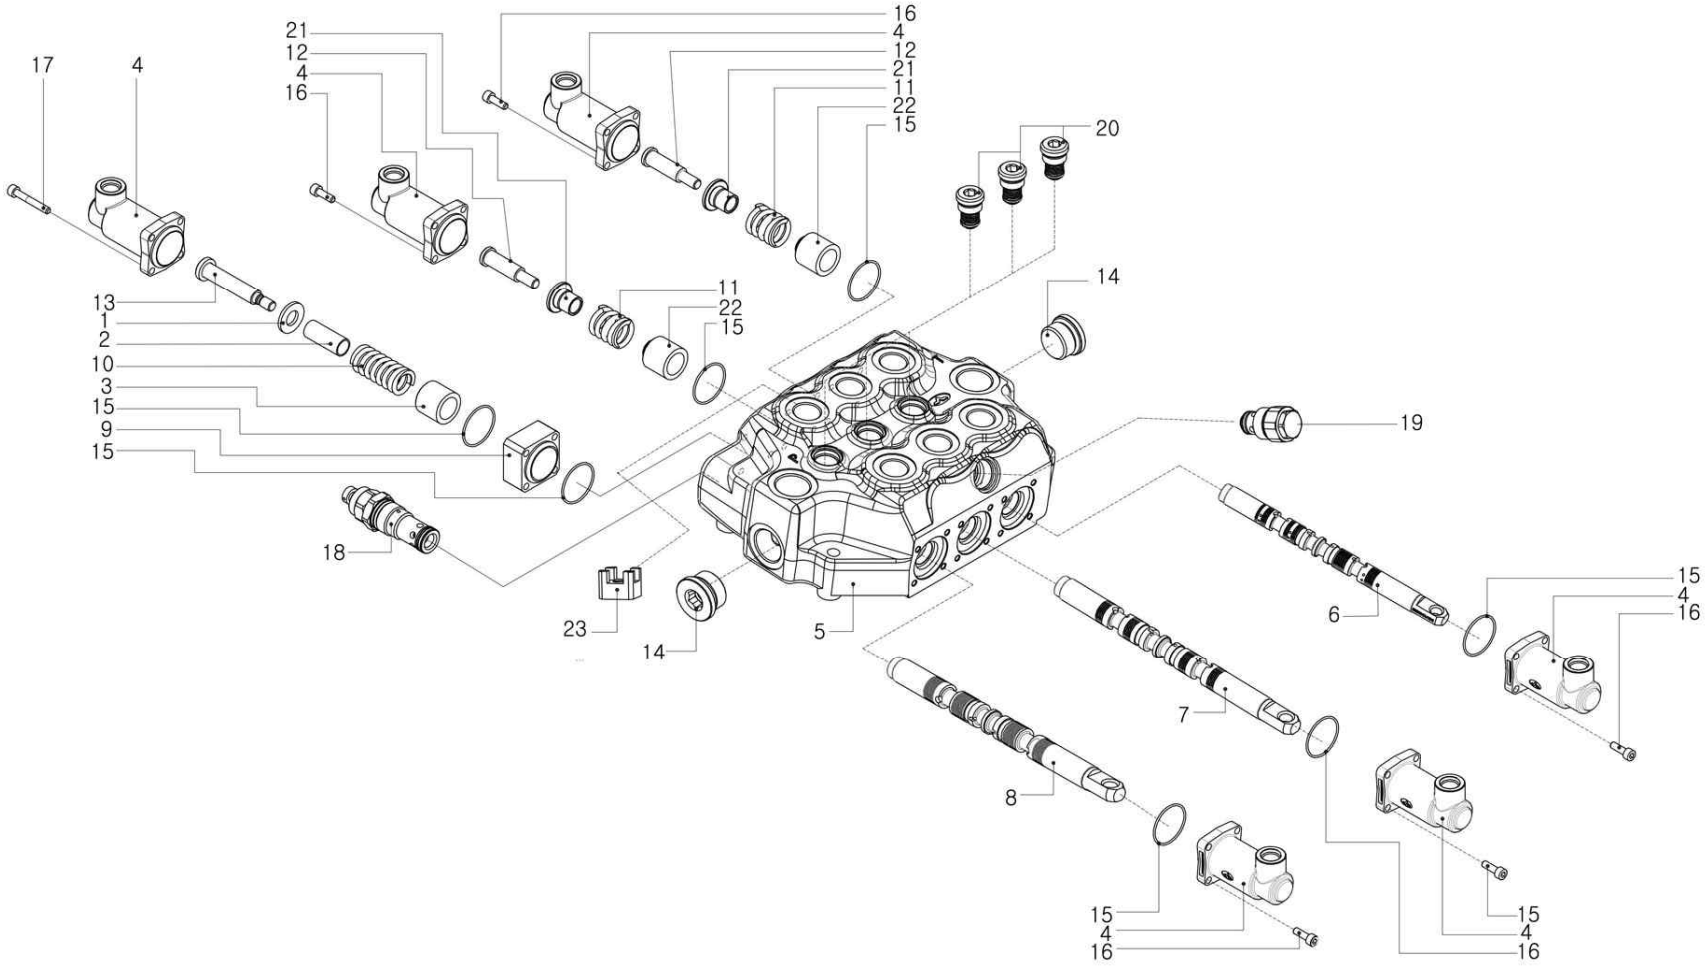

50. Control valve (콘트롤 밸브)				
No.	Name	Part No.	Quantity	Remarks
1	Ring	3ANe115350	1	
2	Ring	3ANE125025	1	
3	Boccola 12IM/SDM140	3BOC426230	1	
4	Cappellotto 81IM/SD8-SDM140	3CAP350770	6	
5	SDM141/3	3CO1913009	1	
6	Spool	3CU1340350	1	
7	Spool	3CU1310350	1	
8	Spool	3CU1310330	1	
9	Distanziale Comando 12IM/SDM140	3DIS232240	1	
10	Molla 12IM/SDM140	3MOL422500	1	
11	Molla Comando 8IM/S8	3MOL425291	2	
12	Vite 81IMF3/DSL8-M8	3VIT115480	2	
13	Screw M8	3VIT118730	1	
14	Plug	3XTAP732200	1	
15	O-ring	4GUA131518	7	
16	Vite Tcei UNI-5931	4VIT605016	20	
17	Vite Tcei UNI-5931	4VIT605030	4	
18	Main relief vavle VMP140 (XG-175)	X134211175	1	
19	Valvola C/SD8	XCAR408115	1	
20	VR10-90SH KIT	XKIT010200	3	
21	Boccola Cursore 8IMY/S8	3BOC426270	2	
22	Boccola Guidamolla	3BOC325181	2	
23	Piastarina FC5 Bocche SDM141	3SPE217053	1	

INDEX

1. Track (트랙) ---------- 1
2. Front roller assy (전륜 롤러 조합) ---------- 3
3. Tension spring assy (장력 스프링 조합) ---------- 5
4. Idler assy (아이들러 조합) ---------- 7
5. Rear roller assy (후륜 롤러 조합) ---------- 9
6. Motor shaft (모터 축) ---------- 11
7. Lift arm (주붐) ---------- 13
8. Lift arm for extended boom (이단붐조합) ---------- 17
9. Quick tach pad (퀵 태치 패드) ---------- 19
10. Bucket (버켓) ---------- 21
11. Lift cylinder (주붐 실린더) ---------- 23
12. Tilt cylinder (버켓 실린더) ---------- 25
13. Extended cylinder (이단붐 실린더) ---------- 27
14. Cover (커버류) ---------- 29
15. Engine room cover (엔진룸 커버) ---------- 33
16. Operator cab, standard canopy (안전탑 -기본형) ---------- 35
17. Operator cab, Cabin enclosure (안전탑 캐빈형) ---------- 41
18. Front door assy (안전탑 앞문) ---------- 47
19. Operator cab and track (안전탑 및 트랙) ---------- 49
20. Steering handle, Joystick controls (조향 장치, 조이스틱) ---------- 51
21. Cable line, Kubota (케이블 라인, 구보다) ---------- 53
22. Control valve system for Joystick (조이스틱 콘트롤밸브 장치부) ---------- 55
23. Engine, Kubota (엔진, 구보다) ---------- 59
24. Pump (펌프) ---------- 63
25. Radiator, Kubota (라디에이터, 구보다) ---------- 65
26. Muffler, Kubota (소음기, 구보다) ---------- 69
27. Air cleaner, Kubota (에어크리너, 구보다) ---------- 71
28. Hydraulic tank and fuel tank (유압 및 연료 탱크) ---------- 73

29. Precleaner (프리크리너) ---------- 75
30. Fuel line, Kubota (연료라인, 구보다) ---------- 77
31. Hydraulic line of lift arm (주붐 유압 라인) ---------- 79
32. Hydraulic line of bucket (버켓 유압 라인) ---------- 81
33. Aux. hydraulic line (보조 유압 라인) ---------- 83
34. Main hydraulic line (메인 유압 라인) ---------- 85
35. Hydraulic line of drive part (구동부 유압 라인) ---------- 87
36. Hydraulic line of hyd' parking brake (유압주차브레이크 유압라인) ---------- 89
37. Hydraulic line of high flow system (하이플로우 유압라인) ---------- 95
38. Hydraulic line of extended boom (이단붐 유압 라인) ---------- 101
39. Air Conditioner system, Kubota (에어컨 장치, 구보다) ---------- 105
40. Heater system, Kubota (히터 장치, 구보다) ---------- 107
41. Electric Cooler assy (전기식 쿨러 조합) ---------- 109
41-1. Hydraulic oil cooler assy (유압식쿨러모듈) ---------- 111
42. Instrument panel for canopy (계기판-기본형) ---------- 115
42-1. Instrument panel LH for cabin enclosure (계기판 - 캐빈형) ---------- 119
42-2. Instrument panel RH for cabin enclosure (계기판 - 캐빈형) ---------- 121
43. Electrical system, Kubota (전기 장치, 구보다) ---------- 125
44. Electrical system for Hi-flow (전기장치부-하이플로우) ---------- 127
45-1. Electrical system for Front horn and back up alarm (전장품 - 백업알람) Kubota, 구보다 ---------- 129
46. Mirror assy (미러 모듈) ---------- 131
47. Safety device (안전 장치) ---------- 133
48. Drive pump (구동 펌프) ---------- 135
49. Drive motor (구동모터) ---------- 147
50. Control valve (콘트롤 밸브) ---------- 155